

• Reorient or relocate the receiving antenna

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected

• Increase the separation between the equipment and the receiver

Consult the dealer or an experienced radio/TV technician for help


PROGRAMMING THE FEEDER

1 Locate the **Switch Panel** inside Feeder.



Choose amount of feed desired in pounds (lbs.) and set **Switch Panel** according to chart at right. Amount of feed is approximate and will vary based on feed type.

NOTE: The **Economy Feeder Kit** is programmed to feed 2 times per day, once shortly after daybreak and again shortly before dark.

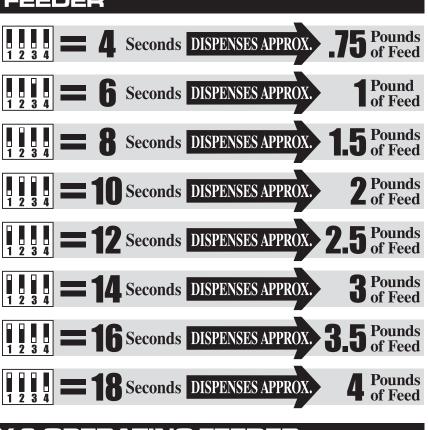

V INSTALLING BATTERY & OPERATING FEEDER

CAUTION: WEAR EYE PROTECTION

FEEDER WILL SPIN UPONREDCONNECTION OF BATTERY ANDWILL SPIN AGAIN WHEN THERE ARECHANGES IN LIGHT LEVEL!Feeder will then be disabled for 7 hoursto prevent accidental feedings due tocloud cover or lightning.

Install a 6-Volt Alkaline (ex. EnergizerTM) or Moultrie rechargeable battery by attaching the Red Alligator Clip to the positive terminal (+) and the Black Alligator Clip to the negative (-) terminal. Place battery in bottom, align three tabs with leg assembly and twist. Unit is now ready for operation.

TIPS & POINTERS

1: (Q) When should I fill the drum on my feeder? (A) To prevent damage to the feeder kit, do not load drum until unit is off the ground.

2: (Q) I have a hanging feeder. What should I hang it with and how high should I hang it? (A) Some animals will chew through products like rope, so chain or steel cable is best. The bottom of the feeder should be about 7 feet from the ground.

3: (*Q*) What kind of feed should I use? (A) Whole kernel corn or corn mixed with soybeans or mixed with "pellet" feeds is effective for attracting deer. NOTE: When not mixed with corn, some pellet type feeds can take-on moisture and clog the feeder.

4: (*Q*) How long should I set the feeder to run? (A) The factory setting is 10 seconds but many customers find that 4 or 5 seconds is long enough to establish a feeding pattern.

5: (Q) Some of the feed in the bottom of my drum never seems to move, and may be getting moldy. Any solution? (A) For 30 and 55 gallon barrels, Moultrie has developed internal funnels to solve this problem. The part numbers are MFH-FUN30 for a 30-gallon drum and MFH-FUN55 for a 55-gallon drum.



6: (Q) Why didn't the feeder run at dusk even though I set it out in the afternoon? (A) If you set your feeder up less than 7 hours before dusk, the first cycle will run at dawn.

BLACK

7: (Q) What should I do if my feeder isn't working? (A) Check the battery first by changing to a known good battery. If problem still exists, call Moultrie Customer Service at the number below.

8: (Q) *What battery should I use?* (A) For best performance, use a rechargeable 6-Volt, 5 Amp Moultrie brand battery. If disposable batteries will be used in your unit, EnergizerTM alkaline batteries are recommended.

9: (*Q*) Can I get replacement parts for my feeder? (A) Yes, Moultrie can send you the following replacement parts:

- Economy Hardware Package.....MFHP81565
- Economy Motor......MFHP81693
- Metal Funnel & Spin Plate Kit MFH-ASPF
- 6V Rechargeable Battery MFH-RB6• 6V Battery Charger MFH-BC6
- There are no other user-replaceable parts. If you have

further questions, please call Moultrie Customer Service at the number below.

Our Service Department will gladly answer any questions you have. Call 205-664-6700 Monday – Friday, 8:00 AM to 5:00 PM CST. www.moultriefeeders.com