



 
## Instructions for Universal Timer

**THANK YOU** for your purchase of the **6 volt Universal Replacement Timer**, a top quality Moultrie product. Please read both sides of this sheet before operating this unit. If you should have any questions about this or any other Moultrie product, please contact us using the information on the reverse side.


To help us to better serve you, please complete and mail the enclosed Warranty Card.

### I CONNECTING THE TIMER


Using a wire cutter, cut the **White** and **Green** wires at the base of the connector. Using the provided **Wirenuts**, connect the motor's **Black** wire to the **Green** wire and the motor's **Red** wire to the **White** wire.

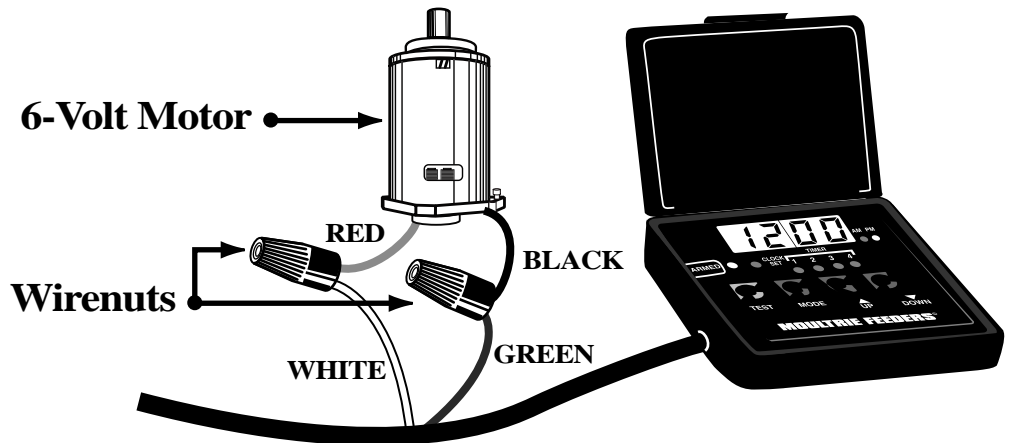

### II INSTALLING THE BATTERY

 

 Install a 6-Volt Alkaline (ex. Energizer™) or Moultrie rechargeable battery by attaching the Red Alligator Clip to the positive (+) and the Black Alligator Clip to the negative (-) terminal.

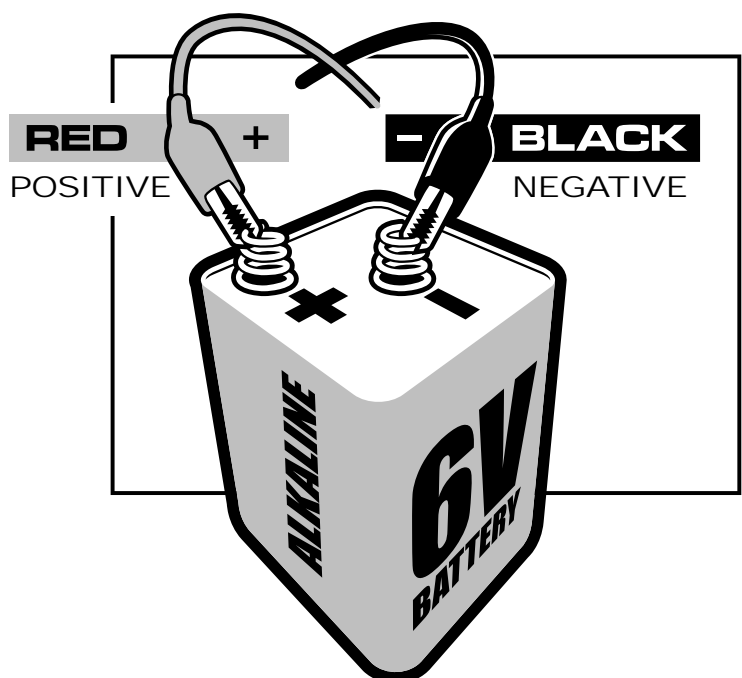

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and the receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

# III PROGRAMMING THE TIMER

**Power Saving feature:** your **Universal Replacement Timer** is equipped with a power saving device which turns off the Display after 3 minutes of inactivity. To turn on the Display, simply press any button.

**NOTE:** the Display does not need to be showing a time in order for Feeder to operate normally.

## To set time of day:

 
- 1) Press **MODE** button until **CLOCK SET** light comes on.
- 2) Press **UP** or **DOWN** buttons until correct time of day appears.  
To scroll faster, press and hold **UP** or **DOWN** button.

**NOTE:** Make sure **AM** or **PM** is correct.

## To set **TIMER 1**:

- 1) Press **MODE** button until **TIMER 1** light comes on.
- 2) Set feeding time by using the **UP** or **DOWN** buttons.
- 3) Make sure **AM** or **PM** is correct.
- 4) Press **MODE** button again. The display shows :00. Use the **UP** or **DOWN** button to set the amount of time the feeder will run. The chart below shows the approximate amount of feed dispensed based on this time setting:

|                       |     |   |     |    |     |    |     |    |     |
|-----------------------|-----|---|-----|----|-----|----|-----|----|-----|
| Run Time (sec.)       | 4   | 6 | 8   | 10 | 12  | 14 | 16  | 18 | 20  |
| Feed dispensed (lbs.) | .75 | 1 | 1.5 | 2  | 2.5 | 3  | 3.5 | 4  | 4.5 |

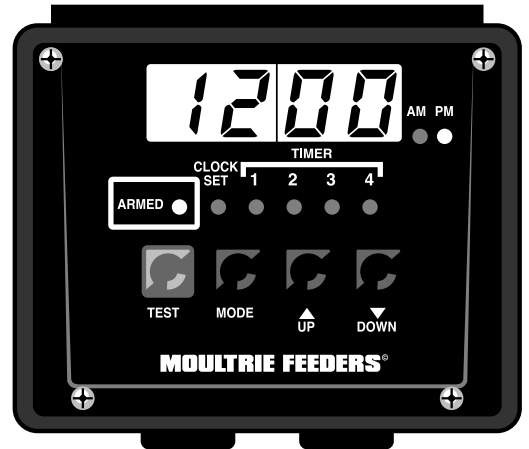

## To set **TIMERS 2, 3 and 4** (used for feeding more than once per day):

- 1) If feeding only once per day, the run time for **TIMERS 2, 3 and 4** should be :00.
- 2) To add feed times, press **MODE** button until **TIMER 2** light comes on and follow same instructions as for setting **TIMER 1**. Repeat for **TIMERS 3 and 4** if desired.

## TESTING YOUR FEEDER



caution: wear eye protection

### To test your Feeder:

The **TEST** button is useful when setting your feeder to dispense the correct amount of feed.

- 1) Press **MODE** button until the run time appears.
- 2) Press the **TEST** button. After a 5-second delay, the Feeder will cycle for the duration shown on the screen. Adjust run time by using the **UP** or **DOWN** buttons.

## ARMING YOUR FEEDER

Before your Feeder will execute your Timer selections, you must arm the Feeder by pressing the **MODE** button until the **ARMED** light comes on. Feeder is now armed.

## DISARMING YOUR FEEDER

To deactivate any Timer setting, set Timer run time to :00.

## TIPS AND POINTERS

1: (Q) How long should I set the feeder to run? (A) Many customers find that 4 or 5 seconds is long enough to establish a feeding pattern.

2: (Q) What should I do if my feeder isn't working? (A) Check the battery first by changing to a known good battery. If problem still exists, call Moultrie Customer Service at the number below.

3: (Q) What battery should I use? (A) Install a 6-Volt Alkaline (ex. Energizer™) or Moultrie rechargeable battery

4: (Q) Everything appears to be correct, but why does my motor spin backwards? (A) Try reversing motor wires from that shown in step I.



Our Service Department will gladly answer any questions you have.

Call 205-664-6700 Monday through Friday, 8:00 AM to 5:00 PM CST.