

Instructions Summit Climbing System

Your Climbing System should include one (1) camo pouch (1) 7/16" thirty (30) foot rope with a loop tied in one end and a knot tied in the other end. One (1) 8mm prussic hitch looped around the 7/16" thirty foot rope. **Figure 1** shows the items included.

Items included in the Climbing System **value pack**: Three (3) 7/16" thirty (30) foot rope with a loop tied in one end and a knot tied in the other. Three (3) 8mm prussic hitch looped around the 7/16" thirty foot rope. **Figure 2** shows the items included.

Figure 1.



Figure 2.



1. Bring the loop end of the 30 foot rope around the tree. Thread the rest of the 30 foot rope including the prussic hitch through the loop **Figure 3**. This will secure the 30 foot rope to the tree above your head while standing on your treestand.

Figure 3.



You will need to attach the knot end of the climbing system to the base of the tree about 5 feet off the ground **Figure 4**.

Figure 4.



2. Attach your harness tether to the prussic hitch of the climbing system with a locking safety clip **Figure 5**.

Figure 5.



3. As you climb up or down the tree slide the prussic hitch up or down the 30 foot rope as shown in **Figure 6.**

Figure 6.



4. Keep the prussic hitch above your head as you climb **Figure 7.**



Summit TreeStands
1-256-353-0634