

Seat Instructions

For PNs 85020, 85058-85060, 85071, 85075

Buckle Instructions - PN 85020, 85058-85060 - Three bar slide setup.

- Step 1.** Position the 3 bar slide on the webbing as shown in **Figure 1**.
- Step 2.** Bring the loose webbing end over the frame as shown in **Figure 2**.
- Step 3.** Thread the webbing back through the 3 bar slide as shown in **Figure 3**. The finished webbing should look like **Figure 4**.
- Step 4.** Roll the very end of the webbing up and attach two hog rings as shown in **Figure 5**. Use pliers to clamp the rings on. Your completed straps should look like **Figure 6**.

Repeat for the other three straps.

Loosen the straps and slide the buckles to adjust the height.

Buckle Instructions - PN 85071, 85075 - Two piece metal buckle.

- Step 1.** Position the webbing over the frame as shown in **Figure 7**.
- Step 2.** Turn the 3 bar slide to the side and push it through the large sewn on D shaped ring as shown in **Figure 8**.
- Step 3.** The 3 bar slide should look like **Figure 9**.
- Step 4.** Your finished strap should look like **Figure 10**.

Repeat for the other three straps.

Slide the 3 bar slide on the webbing to adjust the height.

85020 - 85058_85060 - 85071 - 85075 / Seat Instructions / 2006



Figure 1



Figure 2



Figure 3

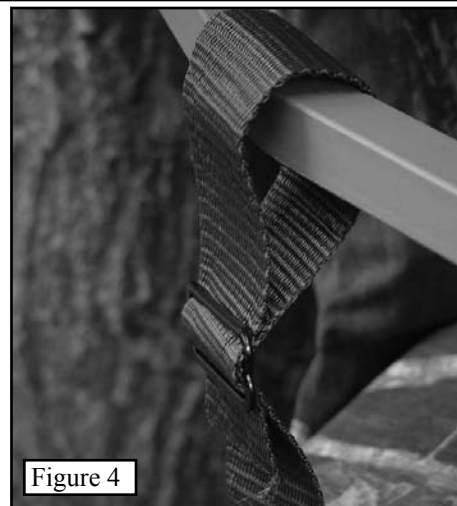


Figure 4



Figure 5

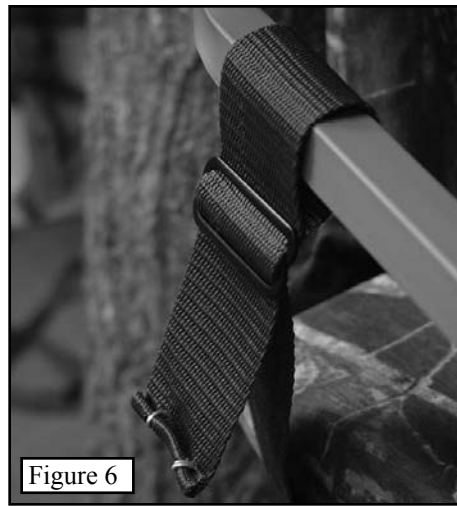


Figure 6



Figure 7



Figure 8



Figure 9



Figure 10

Inflation Instructions: PN 85020 or other Air Seat

The Summit Air Seat has two air valves, one in the base pad and one in the backrest as shown in **Figure 11** (PN 85019 will only have one valve in the base pad).

NOTE: THE VALVES DO NOT HAVE A SCREW ON CAP - NO CAP IS NEEDED!

To inflate, position the valve through the cutout in the seat fabric. Pull up/out on the valve (See **Figure 12**). Blow the seat up to the desired level. **PUSH THE VALVE BACK IN TO CLOSE** (See **Figure 13**).



Figure 11



Figure 12

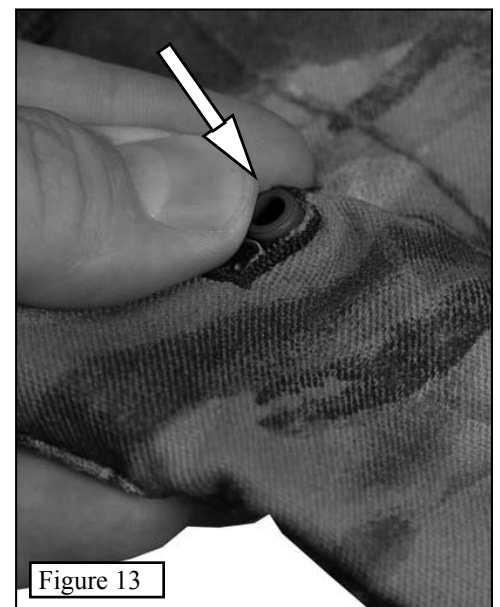


Figure 13