



**SUMMIT**  
EST. 1981  
**TREESTANDS**

# SETUP INSTRUCTIONS

**RUN  
-N-  
GUN**  
GROUND BLIND



**Run-N-Gun Ground Blind**  
Deluxe - PN 87009 / Standard - PN 87008 / Lite - PN 87007 / Mega - PN 87010

## **⚠ WARNING**

Keep all flame and heat sources away from this blind fabric!

This blind is made with fabric which meets CPAI-84 Specifications. **IT IS NOT FIRE PROOF!** The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

**DO NOT** place a stove, camp fire or other flame source in or near your blind. **DO NOT** cook, light, light or refuel a stove or any other heat source inside your blind.

Do not operate any fuel burning device (lantern, heater, stove, etc) in this blind.

Combustion consumes oxygen and can produce dangerous levels of carbon monoxide which could lead to serious injury or death.

Always maintain adequate ventilation inside your blind at all times!

When positioning this blind, always carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, avalanches, strong winds and other objective hazards.

Always use the included anchors to secure the blind to the ground.

Never occupy the blind with all window flaps closed.

Make sure all bystanders are clear when opening or closing the blind.

Before use, always secure the inside hub by placing the Velcro strips around the base of the hub.

**[www.summitstands.com](http://www.summitstands.com)**

# 1 INDEX


GENERAL WARNINGS AND PRECAUTIONS  
SECTION 1 - INDEX  
SECTION 2 - BLIND SETUP  
SECTION 3 - BLIND TAKE DOWN  
SECTION 4 - QUICK CARRY  
SECTION 5 - WARRANTY

PG 1  
PG 2  
PG 2-3  
PG 3  
PG 4  
PG 4

## 2 BLIND SETUP

### ⚠ WARNING

**NEVER** allow your hands to get near the working parts around the blind hub when opening or closing the blind. *See image to the right.*

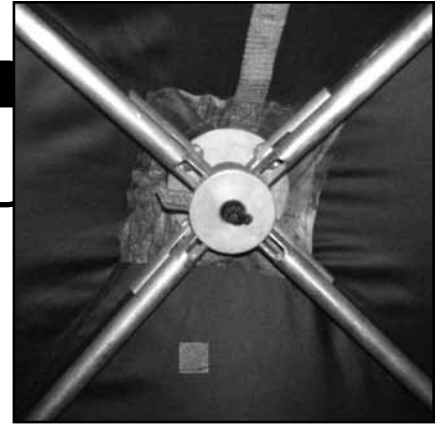



### ⚠ WARNING



**ALWAYS** inspect the pull rope before use. If excessive fraying or damage is seen, do not use the rope. Contact Summit for replacement options. *See image to the left.*



### BLIND SETUP

1. Remove blind from carrying bag.
2. Pick the blind up by the top hub and extend the legs as shown in *figure 1*.
3. Lay the blind flat on the ground. Extend the two accessible legs and "lock" them into position. Do this by pulling out on the center of the leg as shown in *figure 2*.
4. Flip the blind over and lock the remaining two legs.
5. Sit in front of the closed end of the blind and place both feet on the top of the center hub. Make sure your feet are on either side of the hub grommet with the center hole open. See *figure 3*.
6. Once your feet are secure, grab the pull rope and pull back. At the same time, extend your legs and rock back to pick the blind up off the ground. See *figure 4 and 5*.
7. Pull the rope until the center hub shaft pops through the hole and locks as shown in *figure 6*.
8. Stand the blind upright. On the inside of the blind fasten the safety strap around the hub as shown in *figure 7 and 8*.

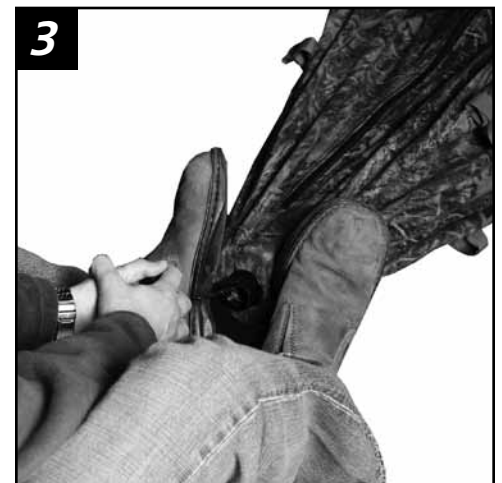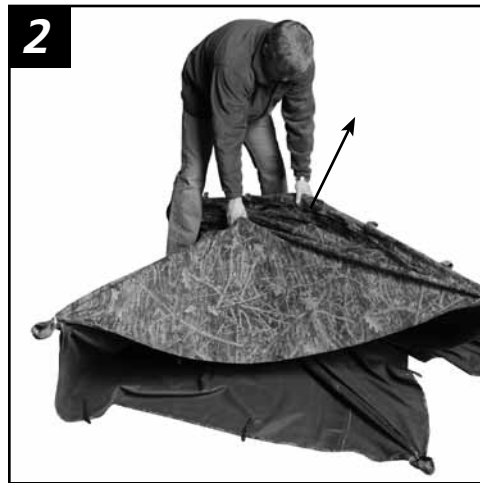

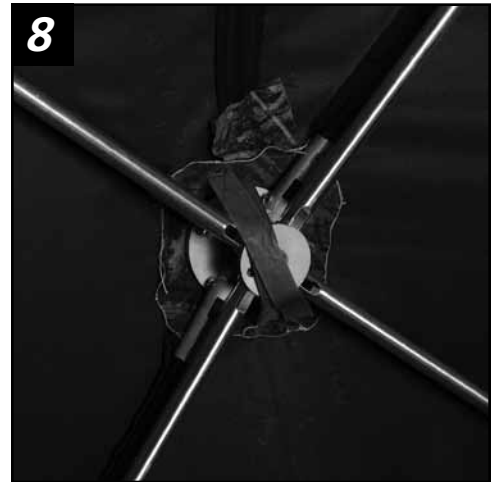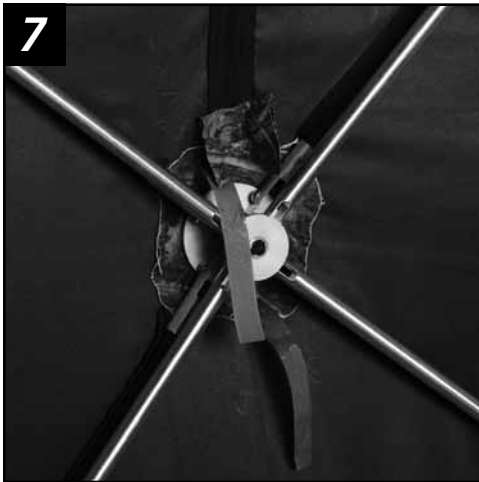

## **3** **BLIND TAKE DOWN**

### **BLIND TAKE DOWN**



1. Remove the safety strap from the bottom of the blind hub.
2. Roll the blind over onto any side.
3. Turn away from the blind and position the center hub behind you.
4. While holding the blind with both hands, strike the hub shaft with the bottom of your boot as shown in **figure 9**. This will cause the blind to collapse.
5. Fold the legs up by bending them in at the middle to return the blind to storage OR proceed to the next section to pack the blind for quick carrying.



# 4 QUICK CARRY

## RUN-N-GUN SETUP (QUICK CARRY)

1. Follow **Steps 1-4** from the Blind Take Down on Page 3.
2. Feed the Run-N-Gun strap - **figure 10** - through the loop at one end of the strap making a small loop.
3. Slide this loop over the end of the blind down to just above the hinges (see **figure 11**).
4. Make a second loop with the other end of the strap and slide it over the end of the blind to within 2 feet of the other loop as shown in **figure 12**.
5. You can now carry your Run-N-Gun to another site (**figure 13 and figure 14**). Pull on the free end of the webbing to adjust the strap.

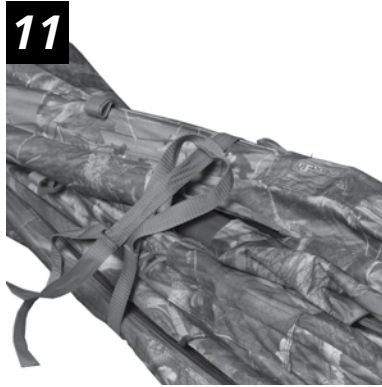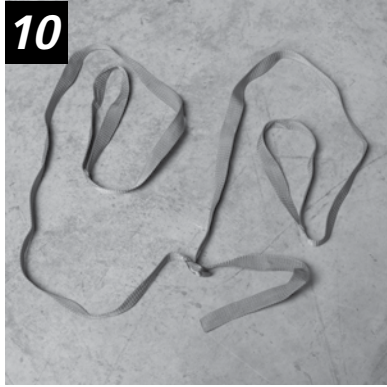

# 5 WARRANTY

## Limited Warranty

### (A) Warranty

Summit Treestands, LLC (Summit) warrants to the original retail purchaser that all products manufactured by it are free from defects in material and manufacture at the time of shipment for twelve (12) months from the date of purchase. Summit will repair or replace any part found defective if the unit claimed to be defective shall be returned to Summit, postage prepaid, within the warranty period.

This warranty shall not apply to any product which has been subjected to misuse; misapplication; neglect (including but not limited to improper maintenance); accident; improper installation; modification (including but not limited to use of unauthorized parts or attachments); adjustment or repair. THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED (INCLUDING THOSE OF MERCHANTABILITY AND FITNESS OF ANY PRODUCT FOR A PARTICULAR PURPOSE), AND OF ANY OTHER OBLIGATION OF LIABILITY ON THE PART OF THE COMPANY.

### (B) Limitation of Liability

It is expressly understood that Summit's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product, as stated above, and Summit will not be liable for any other injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material, arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Summit's products.

Summit reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.

Please take the time to fill out the warranty card online at <http://www.summitstands.com/warranty>.