 


HOT DOT Supplemental Instructions Rev 1.

If additional tightening is required, we recommend you remove the plastic thumb caps from the Vertical and Horizontal Adjustment Knobs. Grab and twist the cap off with pliers. You can then tighten the allen head bolts with a 5/32" hex wrench. NOTE: Once the caps are removed they cannot be reinstalled as they are pressed on from the factory.

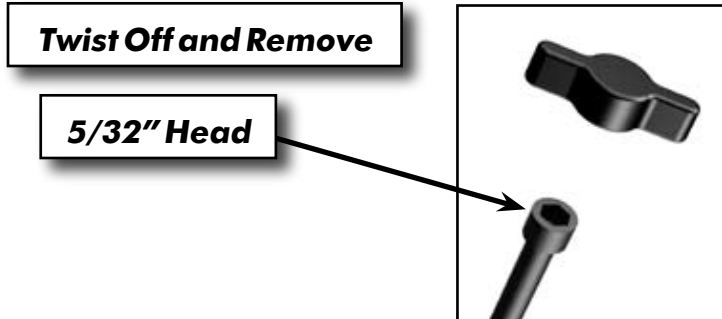 


Correction to Lens removal / replacement

Step 4. Carefully push the lens in from the middle. It will bend slightly against the housing as you are pushing it in. Eventually the lens will snap through the housing. The top of the lens should rest against the back of the self adhesive foam pad pre-applied to the inside of the housing. The lens should be at a 45 degree angle and it should be straight from the foam pad at the top to the mounting tab at the bottom.

HOT DOT Supplemental Instructions Rev 1.

If additional tightening is required, we recommend you remove the plastic thumb caps from the Vertical and Horizontal Adjustment Knobs. Grab and twist the cap off with pliers. You can then tighten the allen head bolts with a 5/32" hex wrench. NOTE: Once the caps are removed they cannot be reinstalled as they are pressed on from the factory.

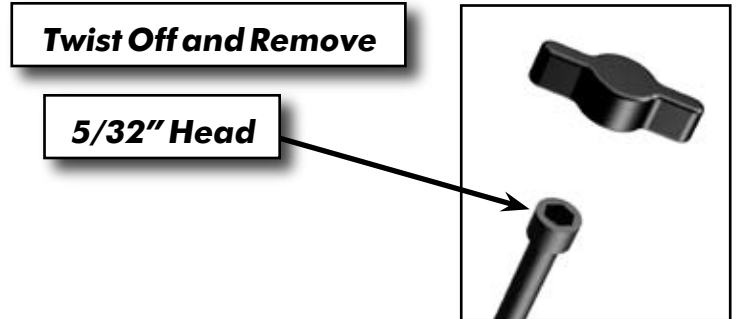 


Correction to Lens removal / replacement

Step 4. Carefully push the lens in from the middle. It will bend slightly against the housing as you are pushing it in. Eventually the lens will snap through the housing. The top of the lens should rest against the back of the self adhesive foam pad pre-applied to the inside of the housing. The lens should be at a 45 degree angle and it should be straight from the foam pad at the top to the mounting tab at the bottom.

HOT DOT Supplemental Instructions Rev 1.

If additional tightening is required, we recommend you remove the plastic thumb caps from the Vertical and Horizontal Adjustment Knobs. Grab and twist the cap off with pliers. You can then tighten the allen head bolts with a 5/32" hex wrench. NOTE: Once the caps are removed they cannot be reinstalled as they are pressed on from the factory.

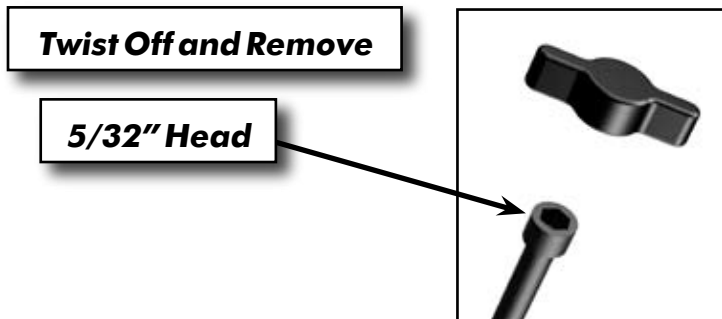 


Correction to Lens removal / replacement

Step 4. Carefully push the lens in from the middle. It will bend slightly against the housing as you are pushing it in. Eventually the lens will snap through the housing. The top of the lens should rest against the back of the self adhesive foam pad pre-applied to the inside of the housing. The lens should be at a 45 degree angle and it should be straight from the foam pad at the top to the mounting tab at the bottom.

HOT DOT Supplemental Instructions Rev 1.

If additional tightening is required, we recommend you remove the plastic thumb caps from the Vertical and Horizontal Adjustment Knobs. Grab and twist the cap off with pliers. You can then tighten the allen head bolts with a 5/32" hex wrench. NOTE: Once the caps are removed they cannot be reinstalled as they are pressed on from the factory.

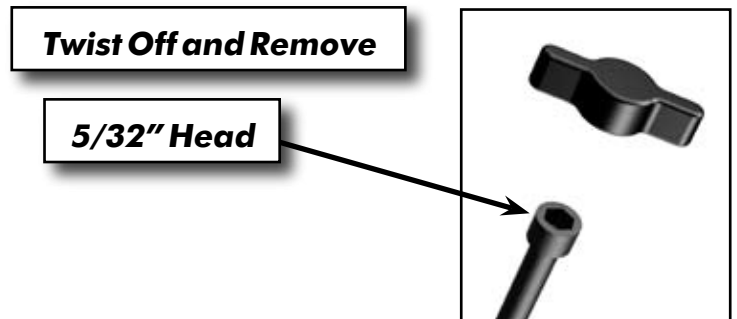

Correction to Lens removal / replacement

Step 4. Carefully push the lens in from the middle. It will bend slightly against the housing as you are pushing it in. Eventually the lens will snap through the housing. The top of the lens should rest against the back of the self adhesive foam pad pre-applied to the inside of the housing. The lens should be at a 45 degree angle and it should be straight from the foam pad at the top to the mounting tab at the bottom.