



Cars 35mm Camera Instructions

LOADING THE FILM

1. Push the **Film Compartment Door Latch** (12) upwards to open the **Film Compartment Door** (8).
2. Unfold the **Rewind Crank** (1) handle and pull the **Rewind Crank** (1) in an outward direction and insert film cartridge.
3. Flip the **Rewind Crank** (1) handle and push in the **Rewind Crank** (1) to lock the film cartridge in place.
4. Pull the lead end of the film across the **Film Sprocket** (6) and out to the **Film Take Up Spool** (10). Make sure the tip of the film leader is hooked onto the teeth of the **Film Take Up Spool** (10).
5. Check that the film's perforations engage with the teeth of the **Film Sprocket** (6).
6. Press the **Shutter Release Button** (3) once. Wind the **Film Advance Thumb Wheel** (7) until it cannot be wound any further. The film should be taken up by the teeth of the **Film Take Up Spool** (10) and wound around the **Film Take Up Spool** (10). If not, repeat step 4-6 until the film hooks up with the **Film Take Up Spool** (10).

7. Close the **Film Compartment Door** (8) until it locks with a click sound. The **Film Counter** (2) on the top of the camera will show an "S."

8. Press the **Shutter Release Button** (3) once and wind the **Film Advance Thumb Wheel** (7) until it cannot be wound any further.

9. Repeat step 8 until the film counter shows a "1." You are now ready to take pictures.

Note: 1. As the film is being advanced, the **Rewind Crank** (1) should rotate slowly if the film is loaded correctly. If it does not rotate after several frames, open the **Film Compartment Door** (8) and check the film loading.

2. If necessary, pull the **Rewind Crank** (1) outward and take the film cartridge out; repeat steps 2 to 8.

TAKING PHOTOGRAPHS

Holding the camera – Always use both hands to hold your camera when taking pictures. Be careful not to place your fingers over the **Lens** (5).

Framing the subject – Frame the subject in the **Viewfinder** (4), keeping a distance of at least 5 feet / 1.5 meter between the subject and the camera.

Taking the photo – Hold your breath and then gently but firmly press the **Shutter Release Button** (3). Advance the film by winding the **Film Advance Thumb Wheel** (7) until it cannot be wound any farther.

FILM UNLOADING

You can unload the film at any time. You must unload it after the end of the film has been reached. Please notice the film counter while taking pictures and do not try to advance the film after the film reaches the end.

1. Press the **Rewind Release Button** (13) at the bottom of the camera. The button will remain in this "pressed down" position.
2. Unfold the **Rewind Crank** (1) handle and rotate it in the direction of the arrow using your thumb until there is a click sound and no more resistance can be felt while turning the crank.
3. Open the **Film Compartment Door** (8) by pushing up the **Film Compartment Door Latch** (12).
4. Pull the **Rewind Crank** (1) in an outward direction and take out the film cartridge.
5. Flip the **Rewind Crank** (1) handle and push the crank back to the normal position.
6. Close the **Film Compartment Door** (8) until it locks with a click sound.
7. The **Rewind Release Button** (13) can be restored to its normal position by winding the **Film Advance Thumb Wheel** (7).

IMPORTANT: Never open the film door until the film is completely rewound into the film cartridge.

GUARANTEE


1 year limited guarantee. We will replace or repair free any defective parts. For guarantee service, send product to: Global Point Products, 5815 County Rd. 41, Farmington, NY 14425 U.S.A. Enclose a check or money order for \$3.50 to cover handling charges and postage. Pack the product well and insure it.

IMPORTANT:

If you have a problem, **DO NOT RETURN THE CAMERA TO THE RETAILER**, Contact our Customer Service Department for immediate assistance at (800) 367-0732 Extension #27. Monday through Friday 10:00 AM - 4:00 PM EST. Or email: customer_service@globalpointusa.com

⚠ WARNING:
CHOKING HAZARD-Small parts.
Not for Children under 3 years.

©Disney/Pixar

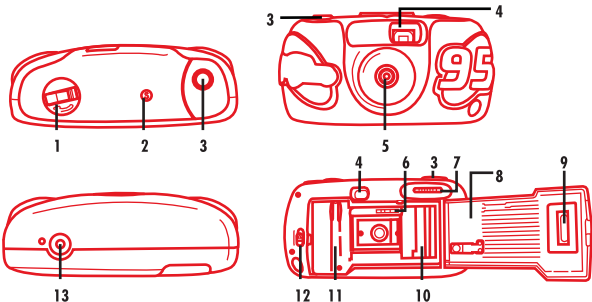

- | | | |
|---------------------------|-----------------------------|---------------------------------|
| 1. Rewind Crank | 6. Film Sprocket | 11. Film Chamber |
| 2. Film Counter | 7. Film Advance Thumb Wheel | 12. Film Compartment Door Latch |
| 3. Shutter Release Button | 8. Film Compartment Door | 13. Rewind Release Button |
| 4. Viewfinder | 9. DX Window | |
| 5. Lens | 10. Film Take-up Spool | |