



6. Select desired photos



1. Minimize
2. Camera Pictures
3. Preview Area
4. Quotation
5. Close Window
6. Display Picture
7. Next Page
8. Enhance Pictures
9. Select All Pictures
10. Save Pictures
11. Transfer Pictures to PC
12. Download Picture
13. Front Page

Then the pictures will be transferred to the download programs and then you can select your desired photos or all photos and click Transfer button to application software and then you can edit or manage photos.

#### Windows ME (cont)

Close the 'Dual Mode DSC (2770)' properties box and close the system properties box.

#### Windows XP

Close all applications.

Go to Control Panel, double click 'System' and select 'Hardware'.

Single click 'Device Manager' and double click 'Imaging Devices'.

Right click on 'Dual Mode DSC (2770)' and single click 'Update Driver'.

Select 'Install from a list or a specific location' then click 'Next'.

Select 'Don't search, I will choose the driver to install'.

Click 'Next' then highlight 'Dual Mode DSC (2770)' and click 'Next' then 'Finish'.

#### Windows 2000

Close all applications.

Go to Control Panel, double click 'System' and select 'Hardware'.

Single click 'Device Manager' and double click 'Imaging Devices'.

Double click on 'Dual Mode DSC (2770)' and single click on the Driver tab, then click 'Update Driver', then 'Next'.

Select 'Display a list of the known drivers for this device so that I can choose a specific driver' then click 'Next'.

Highlight 'Dual Mode DSC (2770)' and click 'Next' and 'Next' again.

Respond to the 'Digital signature not found' message by clicking 'Yes'.

Click 'Finish', then 'Close'. Close Device Manager and System Properties.

#### 9 Using as a PC/Web Camera...

The web cam allows you to broadcast moving images over the Internet. When your camera is connected to the USB port it can be used as a PC/Web camera.

Select the folder "My DSC2". There should be three files in this folder called: My DSC, PCCam and Uninstall. Select PC Cam and be sure under options Preview is checkmark.

Under Devices make sure dual camera is marked with a checkmark.

1. Go to [CAPTURE] menu and click on the [Start Capture]
2. Click yes to start recording the movie.
3. In the CAPTURE menu click Stop capture if you want to stop it.
4. If you want to save your video, go to menu FILE then click Save Captured Video as, choose the name of the file and be sure to end the name with .AVI extension. So if the name of your file is Friends you should store it as Friends.avi.

**Note:** You can view the video by using Windows Media Player, Real Player or other movie player software which recognizes AVI format.

If you choose for example windows media player: open files, select AVI files and select the recorded video file to play. AVI (Audio Video Interleave) is a format defined by Microsoft for storing audio/ video files. It is very popular on the Windows platform.

#### TO USE AS A WEB CAM

Go to [Options] [Preview]

If you have a MSN Messenger or Yahoo account, you can have a video conference face to face Online.

#### 10 Maintenance...

- Operating Environment: 5 - 40 C (41 - 104 F), 20-85% relative humidity, non-condensing

#### Special Care Guidelines:

- Never immerse the camera in liquid. Remove any dust or stains with a soft cloth dampened with water or mild detergent. Keep the camera in a cool dry dust-free environment or container when not in use.
- Remove the battery if the camera is not being used for a long period of time. (Download photos in memory first).
- Be careful not to drop the camera on a hard surface as this may damage it.

#### 11 Camera Specifications...

1. Sensor type: 1/5" color VGA (640X480 pixels) CMOS Image sensor
2. Image resolution: High: 640 x 480 PIXELS  
Low: 320 x 240 PIXELS
3. Lens: F2.5 (46.5 deg)
4. Memory device: Built-in 1x16MB (RAM)
5. Memory capacity: High: 5 Compression mode: 20 + or -1 pictures  
Low: 20 Compression mode: 70 + or -1 pictures
6. Self-timer: 10 second delay
7. Shutter speed: 1/10 - 1/1000
8. Image process: Automatic exposure, automatic, white balance
9. Power source: 1 x AAA 1.5V Alkaline battery
10. Automatic: Power save in 30 seconds.

#### Camera Specifications (cont):

11. Working temperature: 5-40 C.
12. Transmission interface: USB Interface
13. Focusing distance: 0.5m in to infinity
14. Minimum luminosity: 300 Lux or above
15. Dimensions: 3.5"H x 2"W x 1"D.  
(Excluding, Lens and viewfinder)
16. Operating system: Windows 98/2000/ME/XP
17. ArcSoft photo Impression4, Arcsoft video Impression 2, PCCam, My DSC2.

#### Additional Driver Installation Instructions

As described in section 7, only follow the instructions below if the Acquire button is disabled or the Dual Mode DSC (2770) item is not in the select box.

#### Windows 98

Close all applications.

Go to Control Panel then System then 'Device Manager' then 'Imaging Device'.

Double click 'Dual Mode DSC (2770)' then single click the Driver Tab then 'Update Driver' then 'Next' then 'Next' again.

Only check the CD-Rom drive box. Single click 'Next' and follow the on-screen prompts.

Windows will now search for a driver and may prompt you for the Windows 98 CD which you then need to insert. Single click 'Next' and 'Finish'.

#### Windows ME

Close all applications.

Go to Control Panel then System then Device Manager then Imaging Device.

Double click 'Dual Mode DSC (2770)' then single click the Driver Tab then Update Driver then 'Next', then 'Finish'.

#### FCC STATEMENT:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### IMPORTANT NOTICE:

If you have a problem. DO NOT RETURN THIS UNIT TO THE RETAILER. Contact our customer service department for immediate assistance at (800) 367-0732 ext. #27. Monday - Friday / 10am - 4pm EST.

GLOBALPOINT  
PRODUCTS



## 300K Pixels, 3 in 1 Micro Digital Camera Instruction Manual

#### IMPORTANT

Please take a few moments to read and understand these operating instructions before you use your micro digital camera.

Product complies with applicable FCC requirements of 21CFR 1040.10 and 1040.11

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.

**WARRANTY:** This product has been thoroughly tested and inspected before shipment. Purchased from an authorized dealer, it is guaranteed from defects in material and workmanship from the date of purchase for 1 year. Under this limited guarantee we agree to replace or repair free of charge any part or parts which have been found to be defective in original material or workmanship. Should you require in-guarantee service, send your product and proof of purchase directly to Global Point Products, 5815 County Rd. 41, Farmington, NY 14425 U.S.A. Enclose a check or money order for \$5.00 to cover handling charges and postage. Pack the product well and insure it.

KEEP FOR FUTURE REFERENCE.

Global Point Products  
5815 County Road 41  
Farmington, NY 14425

Printed in China  
(1007)