

Pixie Princess™

GLOBAL POINT
PRODUCTS



Jelly-Soft Digital Camera User Instructions

IMPORTANT: This product will not work properly or provide the results you expect unless you take a few moments to read and understand our operating instructions.

Specifications

3-in-1 Digital Camera:	Digital Still Camera Video Capturing Conferencing (Web Cam)
Image Sensor:	CMOS Sensor
Resolution:	VGA 640 x 480 Pixels QVGA 320 x 240 Pixels
Color:	24 bits
Lens:	Fixed Focus = 6.2 mm F/2.5
Capture Range:	0.5m-infinity
Memory:	Built-in 8MB SDRAM
Capacity:	60-105 pictures (Compressed VGA) 25 pictures (VGA 640 x 480) 240-410 pictures (Compressed QVGA) 102 pictures (QVGA 320 x 420)
Power:	1 AAA Alkaline Battery
Computer Interface:	USB

Install the Software

Install the software before you connect your camera to the computer.

1. Close all other software applications.
2. Insert the software CD into your computer's CD drive.
3. The CD user interface will open automatically.



4. Click on the "Install Camera Driver" icon to install. Click "Yes" to restart your computer.
5. If you also want to install Leadd Photo Express 5 SE software, click on the "Install Photo Express 5 SE" icon.

System Requirements

OS: Microsoft Win98SE/2000/ME/XP
Hard Disk Space: 200MB or more
Memory: 32MB RAM or more
USB Interface and CD-ROM
Color Monitor (at least 800 x 600 24 bits or more)

GUARANTEE:

1 year limited guarantee. We will replace or repair free any defective parts. For guarantee service, send product to: Global Point Products, 5815 County Road 41, Farmington, NY 14425 U.S.A. Enclose a check or money order for \$5.00 to cover handling charges and postage. Pack the product well and insure it.

IMPORTANT:

If you have a problem, **DO NOT RETURN THE CAMERA TO THE RETAILER.** Contact our Customer Service Department for immediate assistance at (800) 367-0732 Extension 27, Monday through Friday 10:00 AM - 4:00 PM EST.

WARNING:

The Digital Camera stores high voltage electricity inside; never attempt to open or dismantle the Digital Camera to avoid electric shock. Do not dispose the batteries in fire.

CAUTION:

Never leave the Digital Camera in a damp or dusty place. Remove all the batteries when storing the Digital Camera. Keep any packing bags away from children. Packing bags cause choking hazard for children when placed over mouth or nose.

Global Point Products
5815 County Road 41
Farmington, NY 14425
U.S.A.

(0207)

WARNING: 
CHOKING HAZARD—Small parts.
Not for children under 3 years.

Keep for future reference

Important Notes


1. Photos will be lost when battery is low or removed.
Please download all photos in the camera onto your computer every time you need to save the photos.
2. If you do not use the camera for a long time, please remove the battery.
3. Please follow local regulations when disposing of used batteries.
4. For safety reasons, the battery chamber is secured with a screw.
Please use a screwdriver to open and close the battery door when changing the battery.
5. When the camera is connected to a computer via the USB cable, it will draw its power from the computer, and not from the battery.
6. Before using the PC-Cam function, please download all photos in the camera onto your computer to avoid losing any photos.

Have Fun

With Photo Express 5SE software, you can organize, edit and share your photos easily. Adjust the photo size, change the brightness, balance the color, remove "red eye", edit text, add a frame, and create your very own Calendar!

Get Started

1. Load battery to match the polarity marked on the battery door.
2. Turn the camera on by pressing the Mode button.

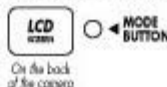


On the back of the camera

FCC WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. Only the cable supplied with the camera should be used. Operation with other cables is likely to result in interference to radio and TV reception and could void the user's authorization to operate this equipment. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

Select Camera Functions

Press the Mode button to cycle through these functions on the LCD display:

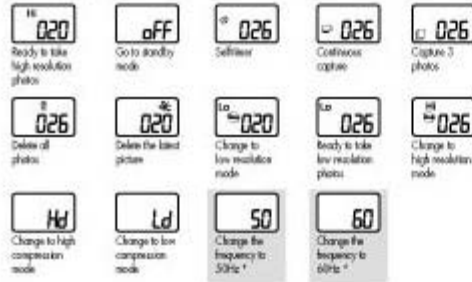

* For best results in rooms with fluorescent lighting, use the 60Hz setting in the U.S., Canada and Mexico, and 50Hz in Europe, Australia, Africa, China.

Take Pictures


1. Press Mode button to turn on the camera. The camera is set to take high resolution pictures. The number of images that have been taken will also be shown on the LCD screen.
2. Frame your subject by using the camera viewfinder.
3. Press the "Shutter" button. A beeping sound will tell you a picture has been taken, and the number on the LCD screen will go up by one.
4. When you choose the CS mode, you will take three pictures successively.

Note:

When there is low light, the Auto Exposure and Gain Control need more time to adjust. Hold the camera steady while you wait for the beeping sound. If there is not enough light to take a picture, you will hear a double beep, and no picture will be taken.

Download Pictures

1. Connect the camera to the computer with the USB cable. The computer will automatically update new information to confirm the connection.

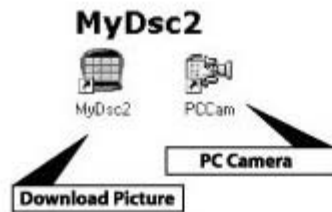

2. Open the folder "My DSC2" on the desktop and then double-click "My DSC2" icon. The download interface will appear on the screen.



3. Click the download button; thumbnail versions of the pictures you've taken will be displayed consecutively.



4. Click any thumbnail to select one photo to download, or click the "Select All" button to download all photos. Click on a thumbnail with the right button of the mouse to zoom in and inspect before downloading.
5. Selected pictures will have a red frame. Click the "Save Photo" button, specify where you want to save the picture, and name the photo to save.
6. After saving your pictures, clear the memory of the camera.
7. To delete all photos, press the Mode button to the "trash" icon, then press the shutter button twice to confirm that you are deleting.
8. For a larger, 1.3M pixel picture, click the "Edit Image" button, select "Pixel Up" and then restart My DSC2. Repeat procedures 3, 4 and 5 for larger pictures.



Capture Video

1. Double-click the PC Cam icon. You will open a PC-camera frame.
2. If no image appears, click "Preview" in the "Options" menu to activate the driver.
3. To select the resolution, click "Video Capture Pin" in the "Options" menu to activate the driver. The default resolution is QVGA [320 x 240].