


Instructions for ATV Food Plot Spreader

THANK YOU for your purchase of the ATV Food Plot Spreader. Please read both sides of this sheet before operating the unit. If you should have any questions about this product or any other Moultrie product, please contact us using the information below. To help us to better serve you, please submit your Warranty information online at <http://www.moultriefeeders.com/warranty>


I INSTALL GATE

Using a 9/16" socket wrench and a wrench, attach the Gate to the outside bottom of the Hopper using the 3/8" x 1.5" bolt, two washers and nut. The bolt head, a washer, and the Gate go on the outside-bottom of the hopper. A nut and a washer go on the inside of the hopper. Tighten such that some pressure is required to move side to side.

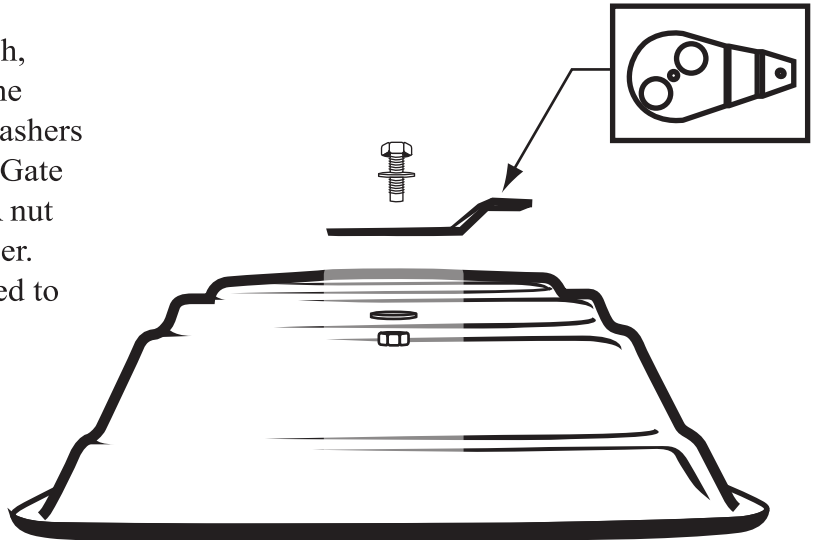


II MOUNT HOPPER TO FRAME

Place the Hopper upside down with the frame on top such that the holes in the Frame align with that of the Hopper and the Gate is centered over the motor spinner plate. Using a 7/16" socket wrench and a wrench, attach the Hopper to the Frame using four 1/4" x 1.5" bolts, eight washers and four nuts. The bolt head and a washer go on the inside of the hopper. The nut and a washer go on the outside, against the frame

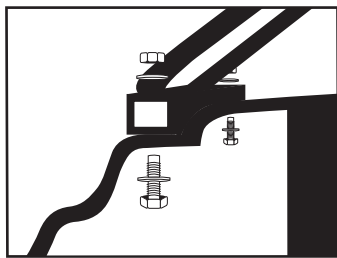


inside the hopper

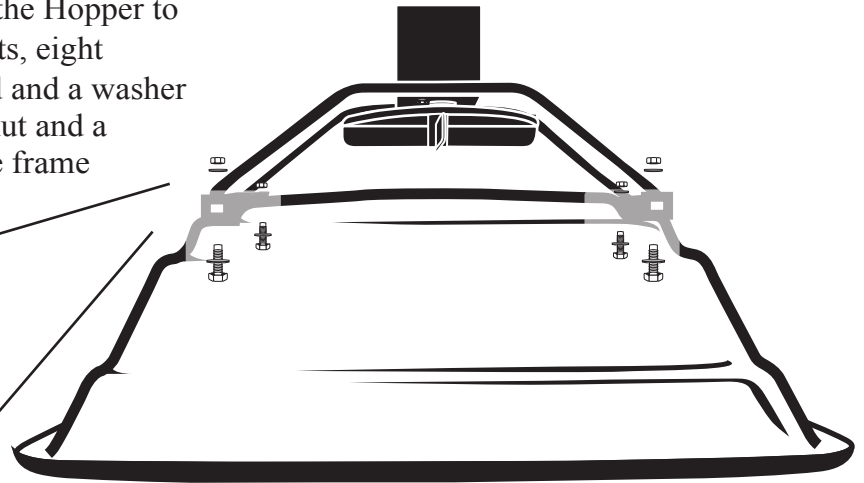

III INSTALL FEEDGATE ARM

With the Hopper upside down, slide the Lever through the hole in the back plate of the Frame Assembly and insert the end into the hole on the Gate such that the Lever is pointing downward.


Place a cotter pin through the hole in the Lever. Using pliers, bend the legs of the cotter pin apart to secure the Arm to the Gate

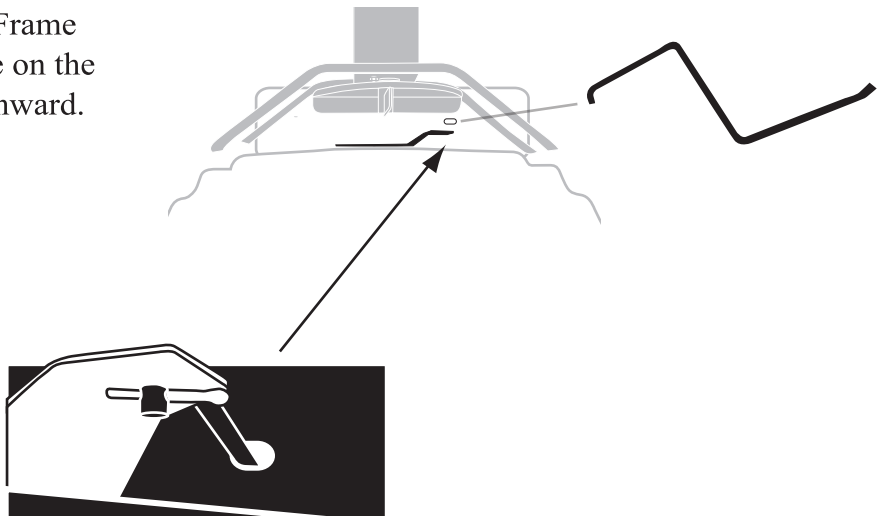

IV MOUNT ON ATV RACK

- 1** Slide the two square channel Mounting Tubes onto the frame assembly such that they angle out - away from the Spreader. Insert the C clips into the holes on the Mounting Tabs. Pull the Lever all the way out (fully closed).
- 2** Hold the fully assembled Food Plot Spreader over the rear rack of the ATV such that there is approximately a 1" gap between the Lever and the rear of ATV rack. Use the provided four U bolts, top plates, and nuts to clamp the locations in which the Mounting Tube cross/intersect the bars on the ATV rack.

Once the U bolts are connected, the C clips may be removed for a quick disconnect of the Food Plot Spreader.

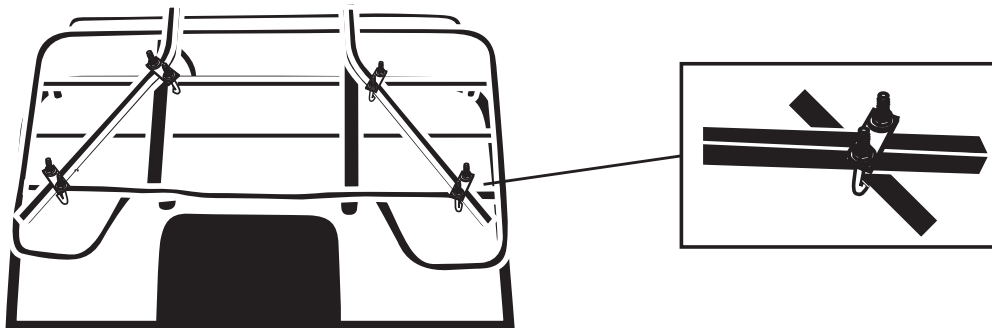

V CONNECT POWER CABLE


BE SURE SWITCH IS IN THE OFF POSITION.

Plug the provided Power Cable into the wire connector on the motor.

Attach the positive alligator clip to the positive battery terminal and the negative alligator clip to the negative battery terminal on the ATV.

VI OPERATING INSTRUCTIONS

- 1 ADJUST DISPENSING AMOUNT**
The adjustment stop on the Lever allows you to set the opening on the bottom of the hopper to the amount of material you wish to dispense. Set the adjustment stop on the Lever to the desired opening.
- 2 ADD MATERIAL**
Add desired material such as feed, fertilizer, seed, etc. to the hopper. Cover the hopper with the plastic cover to prevent spillage.
- 3 SPREAD MATERIAL**
You are now ready to use the Food Plot Spreader. Turn the motor switch to the "On" position. If the motor will not spin, check the battery connections. While driving forward, push Lever to open Gate. Pull Lever to close Gate.
- 4 CLEAN AND STORE SPREADER**
Completely wash and dry the Food Plot Spreader. A light coat of oil on metal parts and motor will help prevent rusting. Store Spreader in a dry location.

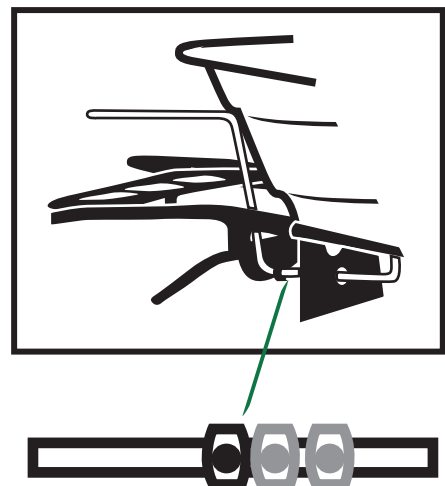

Our Service Department will gladly answer any questions you have.
Call **800-653-3334**, Monday - Friday, 8:00 AM to 5:00 PM CST.

See Moultrie's entire line of feeders, game cameras and accessories online at
www.moultriefeders.com. 150 Industrial Road, Alabaster, AL 35007