



WARNING

READ ME FIRST!!!

Please read carefully **BEFORE** using your new Summit ATV Product.

Congratulations! You have purchased the finest commercially available ATV implement on the market today. Summit ATV Products are designed and built to provide years of trouble-free, successful use. This booklet is provided to you to outline the recommended use, care and maintenance of your Summit ATV Product.

Warnings and Precautions

- **FAILURE TO READ, UNDERSTAND AND FOLLOW THESE INSTRUCTIONS MAY LEAD TO SERIOUS INJURY OR DEATH!**
- **DO NOT OPERATE IF YOU HAVE BEEN USING DRUGS OR ALCOHOL!**
- **ALWAYS FOLLOW SEED / FERTILIZER MANUFACTURER'S GUIDELINES FOR USE!**
- **WEAR SAFETY GLASSES AT ALL TIMES WHEN USING THIS SPREADER!**
- **KEEP SPREADER POWER CORD AWAY FROM MOVING PARTS!**
- **ALWAYS SECURE SPREADER WITH THE ENCLOSED RATCHET STRAPS BEFORE USE!**
- **PLEASE READ AND UNDERSTAND THE ENCLOSED USAGE INSTRUCTIONS FROM MOULTRIE FEEDERS!**

Attaching the Spreader.

Please consult the enclosed spreader instructions for proper use. NOTE: this item **DOES NOT** ship with the ATV attachment brackets shown in the Enclosed Moultrie instructions. Please contact Moultrie Feeders - www.moultriefeeders.com - for more information on how to purchase these brackets.


Part 1. Assembly.

Step 1. Check to make sure you have all the proper parts to mount your spreader.

You should have received the following:

- 1 - Spreader with Lid
- 1 - Seed guard with two screws and nuts
- 2 - Ratchet straps
- 1 - Wiring harness with controls
- 1 - Spreader to 1" receiver bracket with L shaped Clevis pin.
- 1 - Spreader use instructions.

Step 2. Attach the Seed guard to the Spreader frame as shown in **Figure 1**.

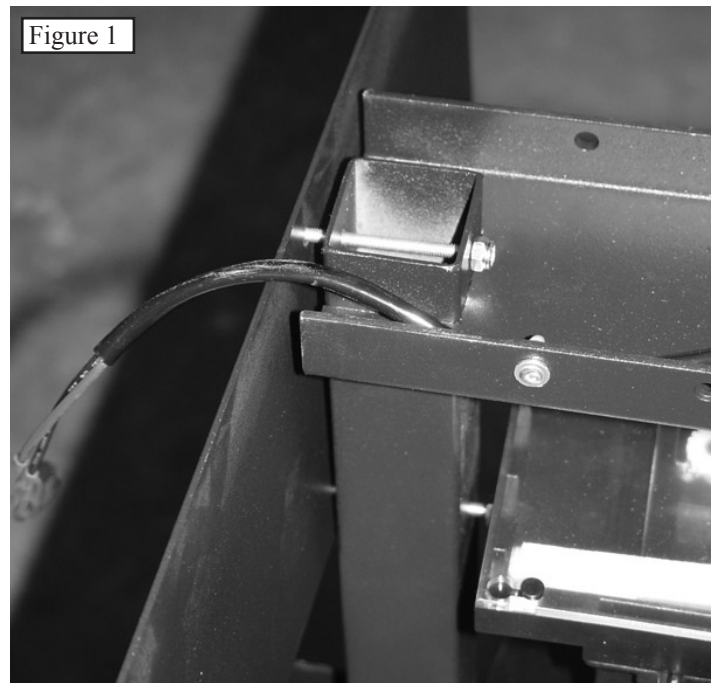

Part 2. Spreader attachment to Plot Mule.


Step 1. Slide the 1" receiver bracket into the Plot Mule and secure with the Clevis pin as shown in **Figure 2**.

Step 2. Drop the Spreader into the receiver bracket as shown in **Figure 3**.

Step 3. Use the two supplied ratchet straps to secure the Spreader to the Plot Mule. The straps run from the central eyelet on the Spreader (See **Figure 4**) to the front of the Plot Mule (See **Figure 5**).

Step 4. Hook up the Spreader motor and the Seed Gate wiring harness. The harness is keyed for proper attachment.

Step 5. CAUTION! Be sure to run the wiring harness away from any moving parts on the Plot Mule (See **Figure 6**). It is recommend that the harness be secured with wire ties so that it does not come loose during use. Connect the wiring harness to your ATV's power source.

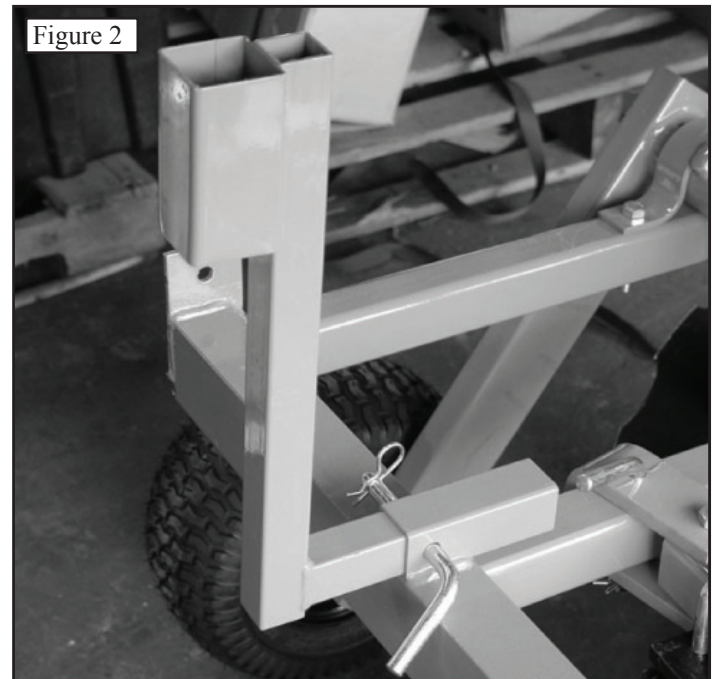

Part 3. Spreader attachment to Pak Mule.

Step 1. Slide the 1" receiver bracket into the Pak Mule receiver bracket under the tail gate and secure with the Clevis pin.

Step 2. Drop the Spreader into the receiver bracket as shown in **Figure 7**.

Step 3. Use the two supplied ratchet straps to secure the Spreader to the Pak Mule. The straps run from the central eyelet on the Spreader (See **Figure 8**) to the front of the Pak Mule (See **Figure 9**).

Step 4. Hook up the Spreader motor and the Seed Gate wiring harness. The harness is keyed for proper attachment.

Step 5. CAUTION! Be sure to run the wiring harness away from any moving parts on the Pak Mule. It is recommend that the harness be secured with wire ties so that it does not come loose during use. Connect the wiring harness to your ATV's power source.



Figure 5

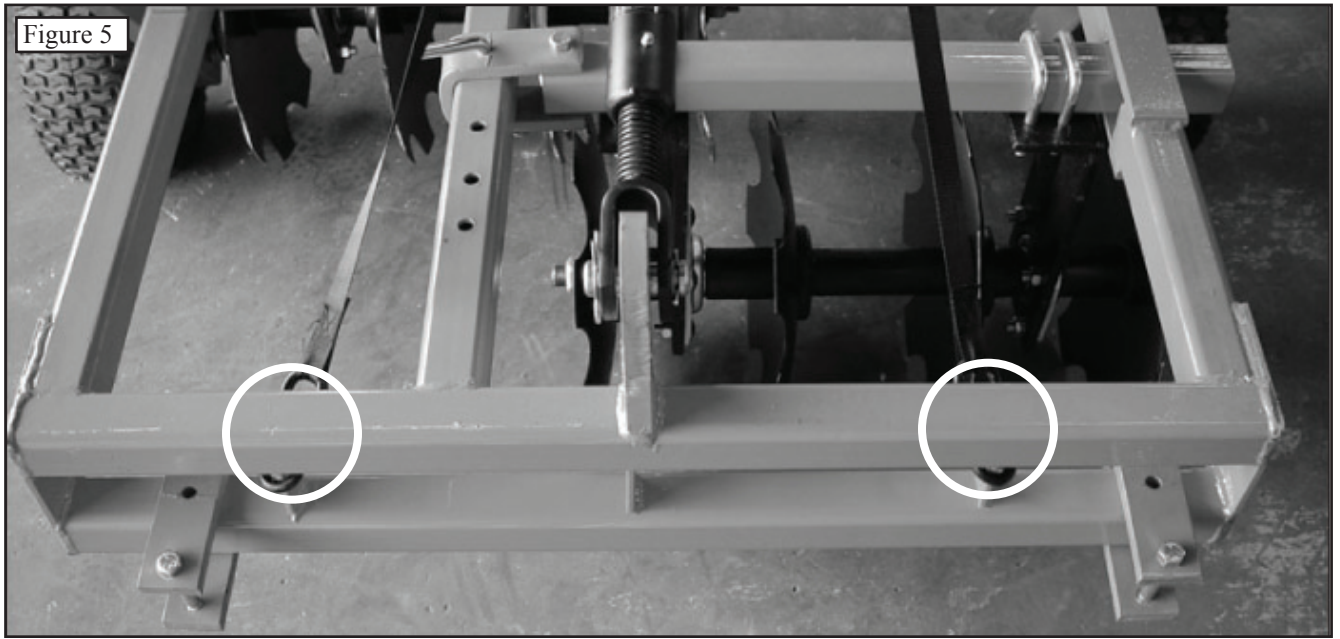


Figure 6

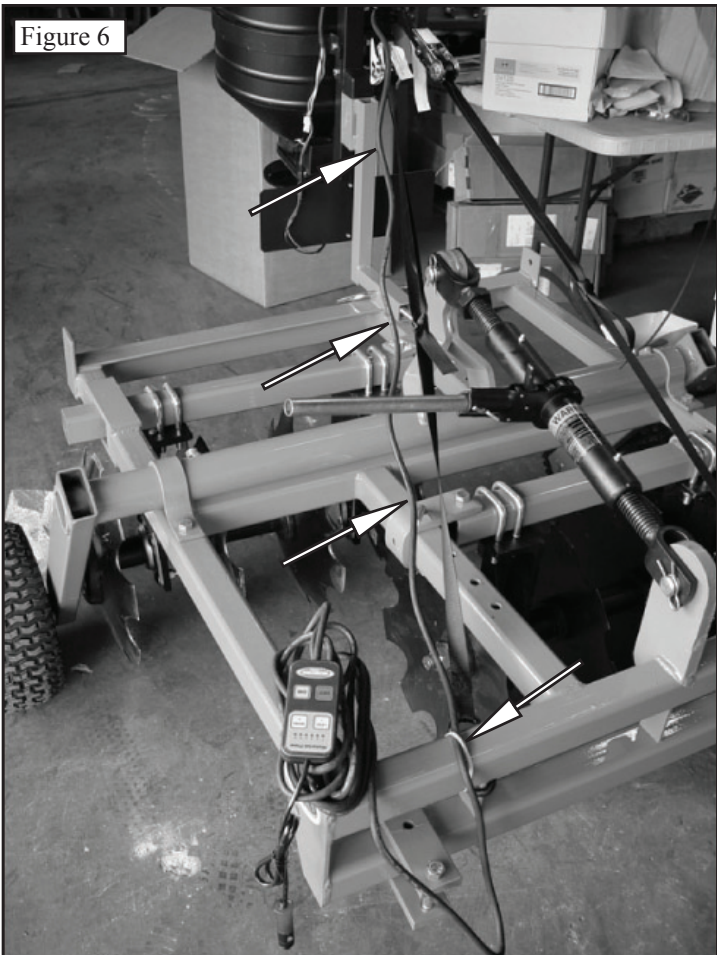


Figure 7

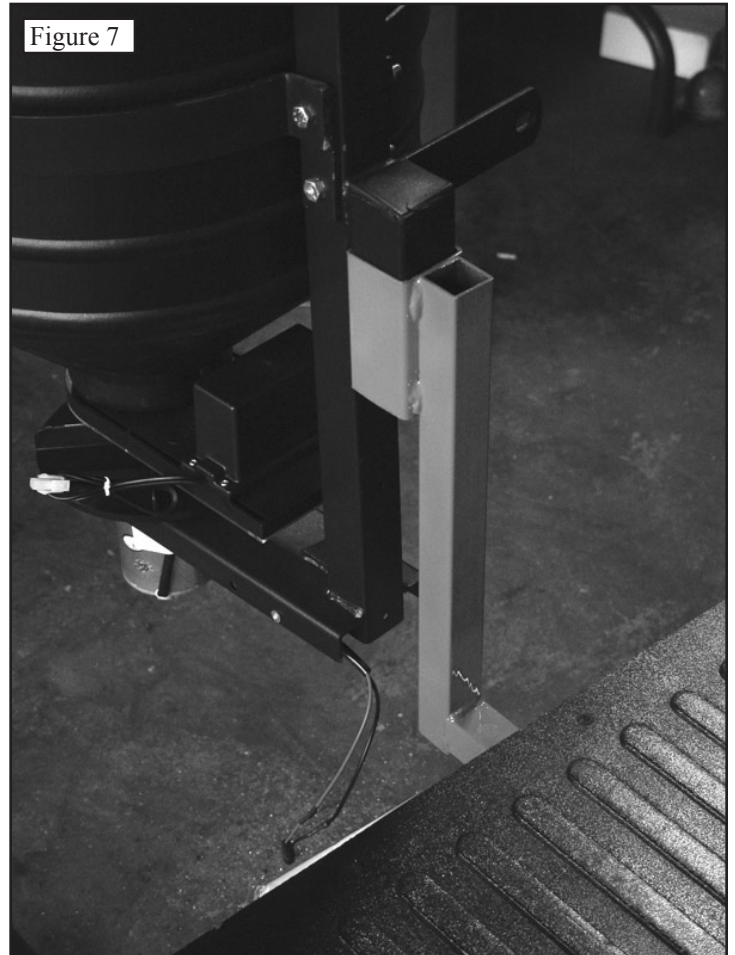


Figure 8



Figure 9



Limited Warranty

(A) Warranty

Summit Treestands, LLC (Summit) warrants to the original retail purchaser that all products manufactured by it are free from defects in material and manufacture at the time of shipment for twelve (12) months from the date of purchase. Summit will repair or replace any part found defective if the unit claimed to be defective shall be returned to Summit, postage prepaid, within the warranty period.

This warranty shall not apply to any product which has been subjected to misuse; misapplication; neglect (including but not limited to improper maintenance); accident; improper installation; modification (including but not limited to use of unauthorized parts or attachments); adjustment or repair. THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED (INCLUDING THOSE OF MERCHANTABILITY AND FITNESS OF ANY PRODUCT FOR A PARTICULAR PURPOSE), AND OF ANY OTHER OBLIGATION OF LIABILITY ON THE PART OF THE COMPANY.

(B) Limitation of Liability

It is expressly understood that Summit's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product, as stated above, and Summit will not be liable for any other injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material, arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Summit's products.

Summit reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.

Please fill out the warranty card on the back of these instructions and return to:

**SUMMIT Treestands, LLC.
715 Summit Dr.
Decatur, AL 35601**

You can also register your warranty card on line at:
www.summitstands.com/warranty.aspx

©(STLLC 2006)

Cut Along Line

Cut Along Line

Warranty Card for Summit Spreader PN 84003

Owners Name: _____ Street Address: _____

City: _____ State: _____ ZIP: _____ Phone: (____) _____

Date Purchased: _____ Purchased From (Dealer Name): _____ Price \$: _____

Your heard about us through: Magazine Advertisement Video Friend Summit Catalog

Other Please Explain: _____