



**H. Wilson Company**  
555 West Taft Drive  
South Holland, IL 60473  
Phone: (800) 245-7224  
Fax: (800) 245-8224  
Email: sales@hwilson.com  
Visit: www.hwilson.com

# WPS4HD / WPS4BR

## Electrical

### WPS4 7-outlet electrical

1. Insert the screws into the holes on the side of the cart where you want to position the electrical assembly. The screw head should be on the outside of the upright metal side panel. Please see photo below.
2. Fasten the wing nuts onto the screws from the opposite side of the panel. **DO NOT TIGHTEN ALL THE WAY YET.**
3. Line the slots on the back of the electrical over the screw heads that are on the outside of the upright side panel.
4. Lock the screw heads into place by sliding the assembly down into the slots and then tighten the wing nuts to secure.
5. Line the metal cord wraps vertically on either side of the electrical assembly as shown below. Attach with provided screws and wing nuts.

