

Instruction Sheet - OVERHEAD PROJECTOR TABLES

Model AVJ-OH



Customer Service Dept
2245 Delany Rd
Waukegan, IL 60087
Ph: 847/244-1800 • 800/323-4656
Fax: 847/244-1818 • 800/327-1698




PARTS LIST

- 1 - Top Stand Assembly
- 1 - Bottom Stand Assembly
- 4 - Large Bolts
- 4 - Wing Nuts
- 2 - Casters With Brake
- 2 - Casters Without Brake
- 1 - Power Cord
- 1 - "U" Bracket
- 1 - Cord Wrap
- 2 - Small Screws
- 2 - Small Nuts

Tools Required:
Screwdriver

A

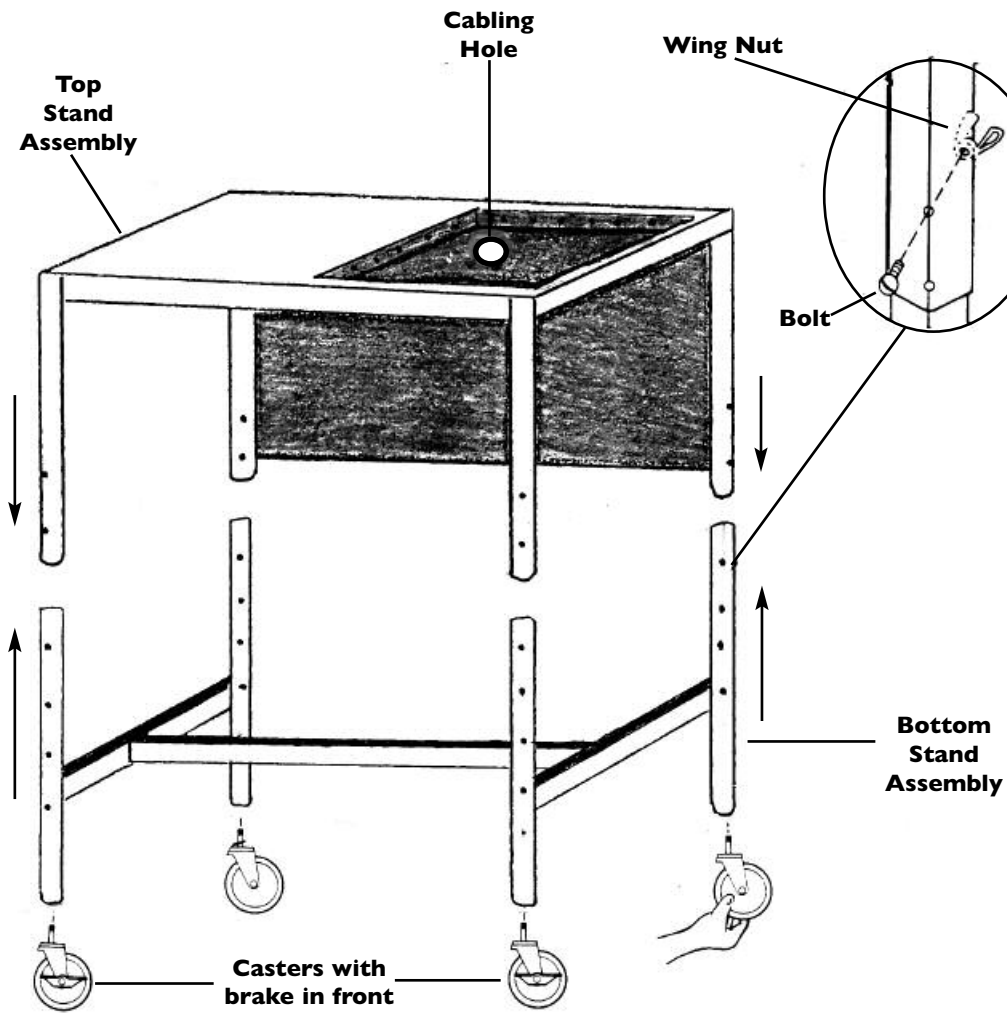


1. Turn bottom stand assembly upside down on a smooth surface. Push the four casters firmly into the caster socket holes in bottom of each leg as illustrated. **IMPORTANT:** Casters must be fully seated. Turn the bottom stand assembly right side up.
2. Position top stand assembly over bottom stand assembly as illustrated. Adjust top stand assembly up or down to desired height. Align holes in all four legs, insert bolts and fasten with four wing nuts as illustrated.

B

Note: Overhead pan is set flush with top shelf for shipping. See B-2 for setting instructions


1. Measure the height of your overhead projector - then choose the height of shelf and assemble

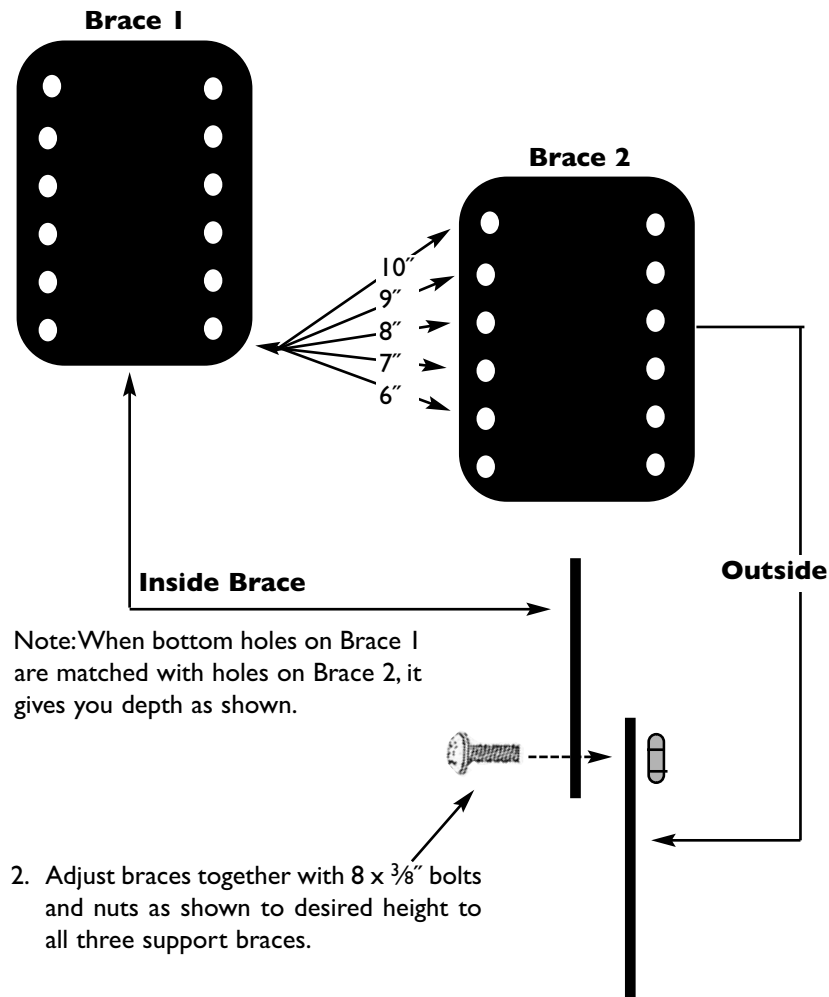

Note: When bottom holes on Brace 1 are matched with holes on Brace 2, it gives you depth as shown.

2. Adjust braces together with $8 \times \frac{3}{8}$ " bolts and nuts as shown to desired height to all three support braces.


3. Reattach platform to bottom holes of support braces with $8 \times \frac{1}{2}$ " bolts.

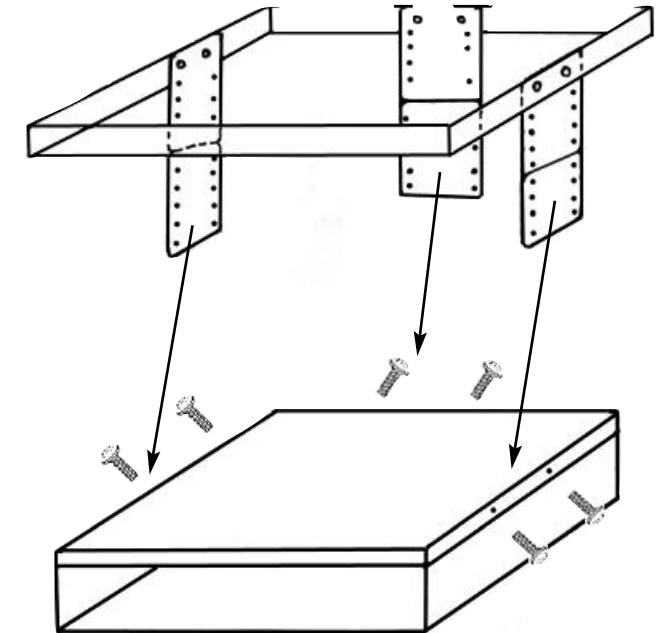

4. See reverse side for assembly of electric assembly.

ELECTRIC ASSEMBLY

C

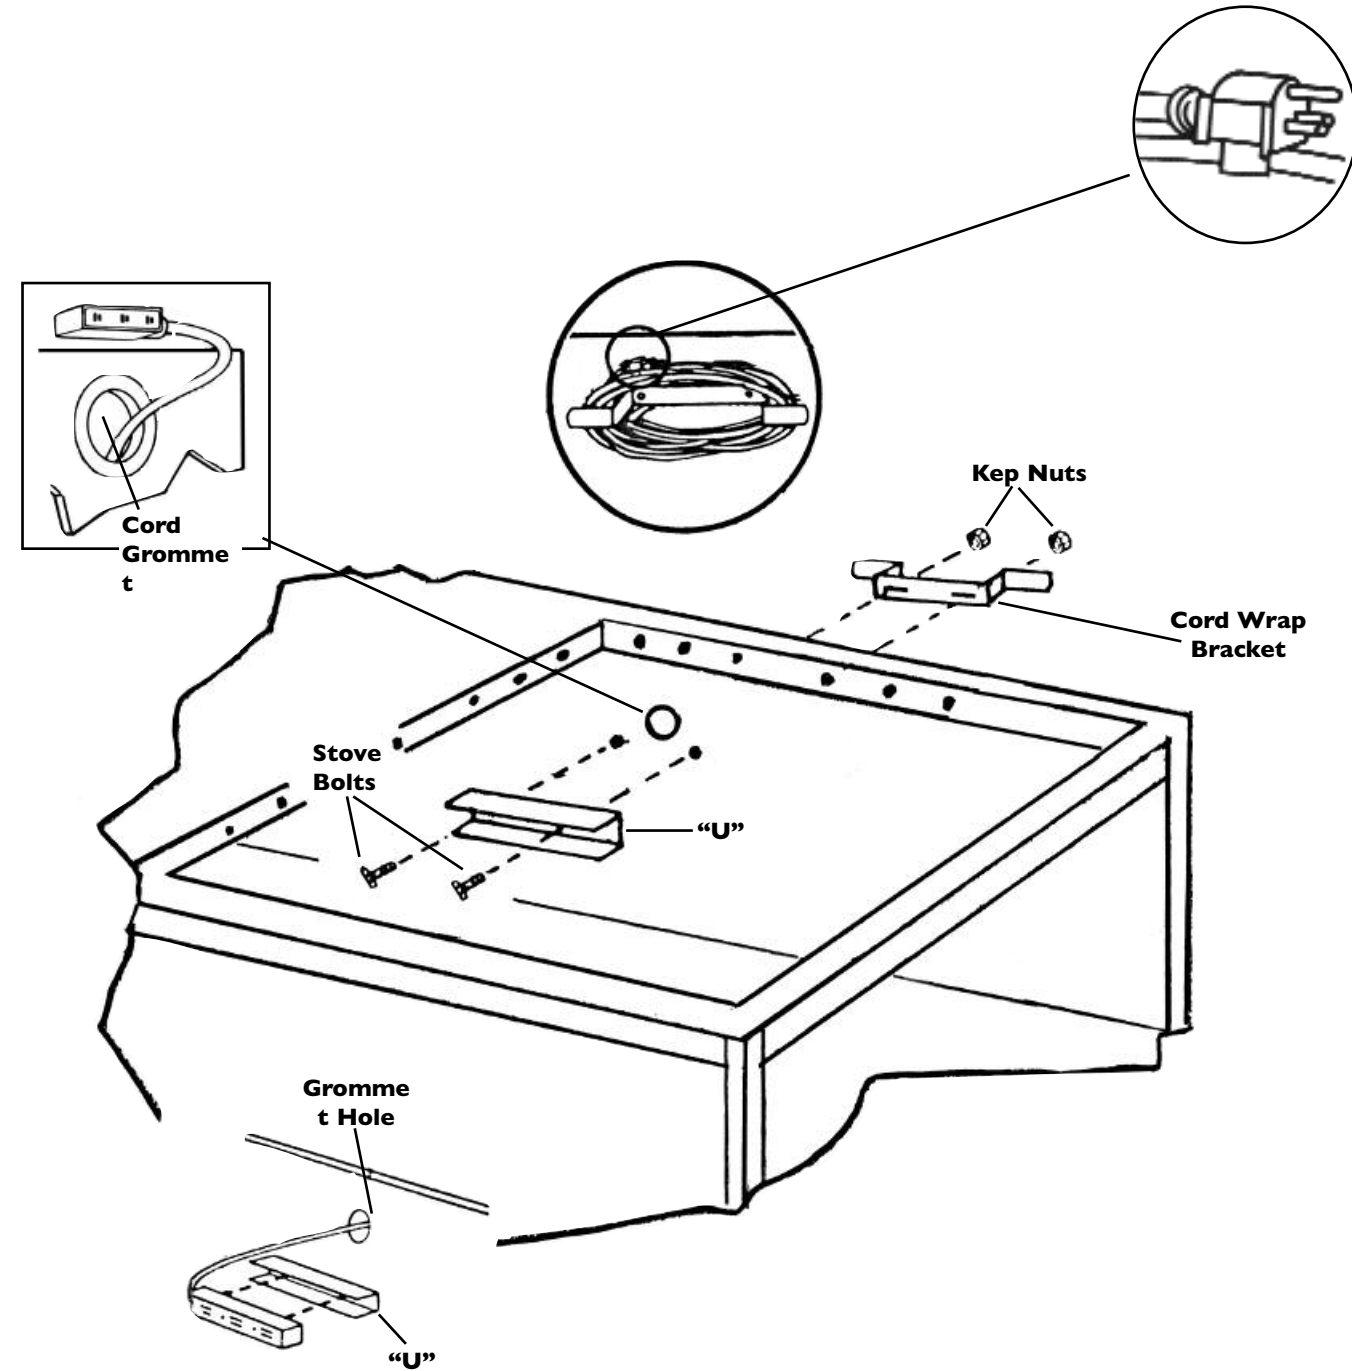

Press 3-outlet power cord into "U" bracket and feed remaining cord through grommet hole and wrap remaining cord around cord wrap bracket. For safety and neat appearance, secure plug to cord with plug snap.