 


Instruction Sheet

Model L-250

 
Customer Service Dept
Luxor
2245 Delany Rd
Waukegan, IL 60087
Ph: 847/244-1800 • 800/323-4656
Fax: 847/244-1818 • 800/327-1698

Step 1. For table top use, this easel may be used without the legs fully extended. For additional height options, pull legs outward until click is heard. For full floor height, locking buttons on back of each leg must be depressed. Separate legs as far as possible for stability. Adjust the pad holders by folding up and toward the leg and sliding up or down to the desired height.

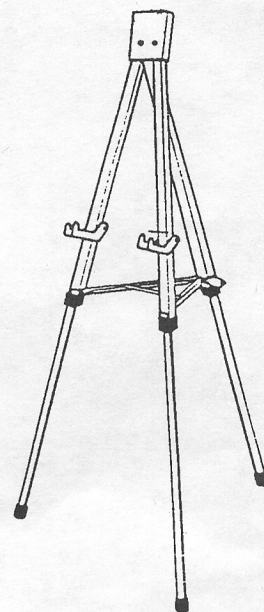


Pad Clamp Attachment

Step 2. To attach pad clamp to above easel, insert threaded bolt through hole and tighten with wing nuts.

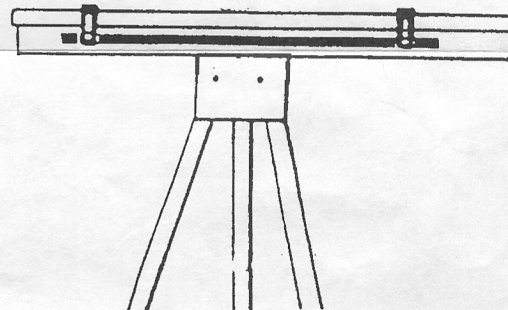

 Step 3. To use the clamp, position the top of your pad, single sheet or chart below the clamp and push upward. It is not necessary to lift clamp before inserting material in place. To remove, simply lift bar.

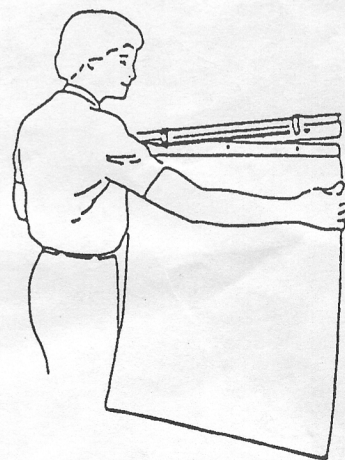

LUXOR