Instruction Sheet Endura Overhead Projector Tables Models OHT42, OHT42PS, and OHS42



Customer Service Dept 2245 Delany Rd • Waukegan, IL 60087 Ph: 847/244-1800 • 800/323-4656 Fax: 847/244-1818 • 800/327-1698



Parts List

OHT42

- 1 Top shelf w/handle
- 1 Middle shelf w/8 leg posts
- 1 Bottom shelf w/caster sockets
- 1 Set short legs
- 1 Set long legs
- 4 Casters (2 w/brake)
- 1 Electric assembly

1 - Set long legs 4 - Casters (2 w/brake)

OHS42

1 - Electric assembly

1 - Set short legs

1 - Top shelf w/utility tray


1 - Middle shelf w/8 leg posts

1 - Bottom shelf w/caster sockets

Tools Required:


Rubber mallet

Illustration A

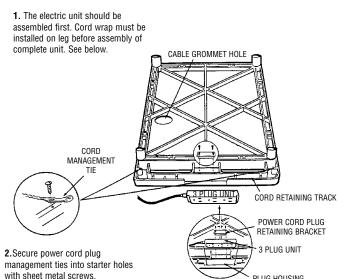

3. Firmly seat electric assembly 3 plug unit into handle plug housing as illustrated. Secure with power cord plug retaining bracket.


OHT42/OHS42 ONLY

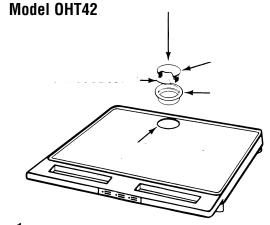

Install grommet ring by tapping into place with rubber mallet. Insert grommet cap as illustrated. For tables with electric assembly, snap off cord guide cover from grommet cap so equipment plug may be run through grommet plug unit, then insert grommet cap into grommet ring.


Model OHT42

Both Models

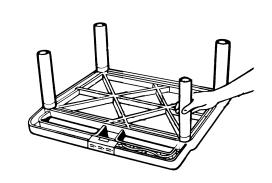


Lay top shelf (with handle) ribbed side up on a smooth surface. Push all 4 short legs onto leg posts.

Model OHS42

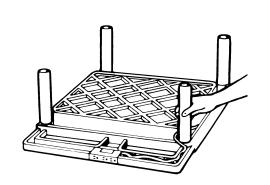


Lay top utility shelf (with handle) ribbed side up on a smooth surface. Push all 4 short legs onto leg posts.

Both Models

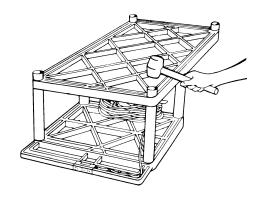

Position second shelf (with 8 leg posts) ribbed side up, over the 4 legs and insert leg posts into legs. Using a rubber mallet, firmly hammer bottom shelf into legs until all four legs are seated (flush) against the surfaces of both shelves.


Both Models

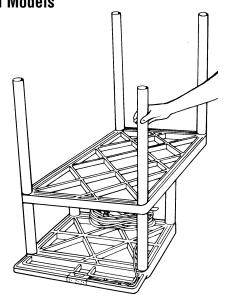

Push set of 4 long legs into leg posts of second shelf and firmly hammer until properly seated

Position bottom shelf, ribbed side up, over the 4 long legs and insert leg posts into legs. Using a rubber mallet, firmly hammer bottom shelf into legs until all four legs are seated (flush) against the surfaces of both shelves.


Both Models

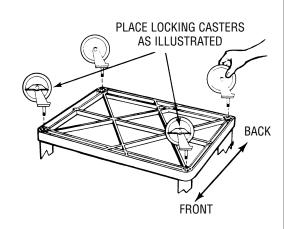


Push the four casters firmly into the holes in each corner of the bottom shelf. Important: casters must be fully seated. Tap firmly with rubber mallet to properly seat casters. Turn your table right side up. It is now ready for use.

If your Endura Overhead Projector Table does not have the Electrical Assembly and Cable-Track™ Cord


Management System, start by closing the electric plug housing in the handle of the top shelf as illustrated.

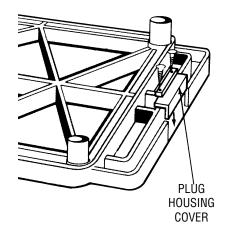

Model OHT42PS

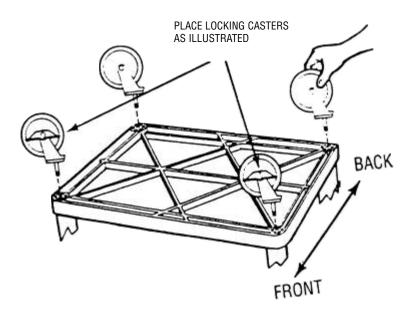

Push the four casters firmly into the holes in each corner of the bottom shelf. Important: casters must be fully seated. Tap firmly with rubber mallet to properly seat casters.

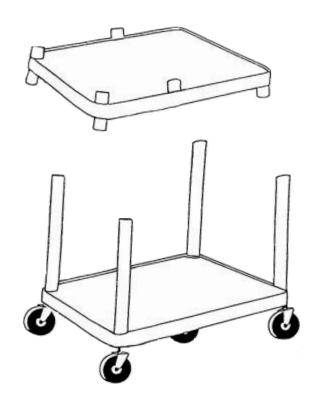

Insert longer legs onto the leg post on the bottom shelf and firmly hammer until properly seated. Then insert the leg post on the middle shelf into the legs.



Push smaller legs onto the leg post on the middle shelf.



Parts List

1 - Top shelf w/handle 1 - Middle shelf w/8 leg posts 1 - Bottom shelf w/caster sockets

1 - Set short legs 1 - Set long legs 4 - Casters (2 w/brake) 1 - Electric assembly 1 - Cord wrap 1 - Keyboard


OHT42PS

1 - Runner


Tools Required: Rubber mallet


IMPORTANT: Electric Assembly should

be assembled first.

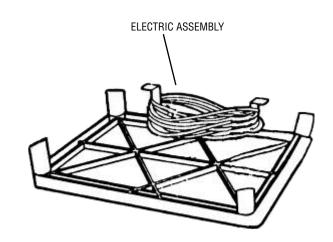


Align cord bracket to the pre-drilled holes on the underside of the middle and attach using two silver screws.

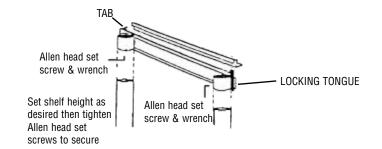

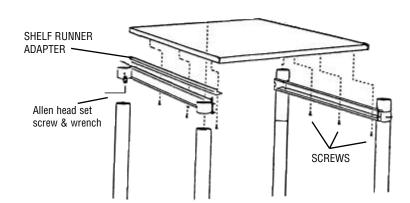

Slide runners onto the legs and tighten down to desired height. Align holes on the shelf adapters to the holes on the bottom of the keyboard and attach using six sheet metal screws. Slide the rear of the shelf adapters under the tab on the back of the runners and snap the front of the shelf adapters onto the back tongue on the front of runners.

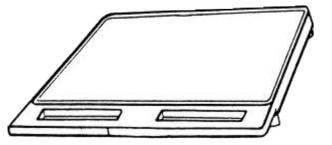

Insert the leg post on the top shelf into the smaller legs.