

Instruction Sheet

Model PCS-24



Customer Service Dept

Luxor

2245 Delany Rd

Waukegan, IL 60087


Ph: 847/244-1800 • 800/323-4656

Fax: 847/244-1818 • 800/327-1698




PARTS LIST:


- 2 - 2" Casters with brake
- 2 - 2" Casters without brake
- 1 - Allen wrench
- 1 - Assembly wrench
- 8 - Long Allen screws
- 6 - Medium Allen screws
- 11 - Short Allen screws
- 6 - Square nuts
- 4 - Pointed Phillips head screws
- 2 - Washers
- 4 - Hex head screws
- 2 - Spacers

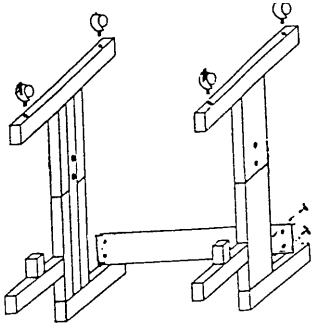


1. Screw casters into left and right leg assembly positioning casters with brake towards the front. Screw rear support panel onto back of left and right leg assembly, using 4 9/16" flat head screws. Use two phillips head screws and matching nuts to attach "U" bracket to rear support panel. The heads of the phillips head screws should be inside the "U" bracket.

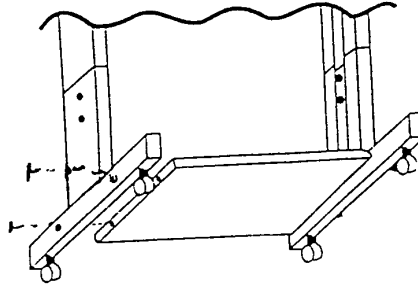


2. Attach lower shelf to unit using four 1 3/4" flat head screws.

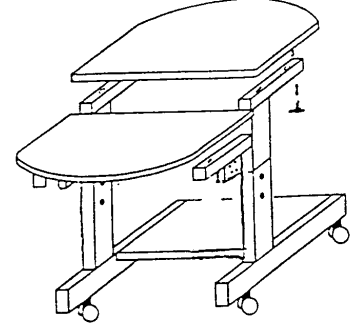


3. Attach keyboard shelf and monitor shelf to base assembly using 2 3/8" flat head screws, 4 per shelf.

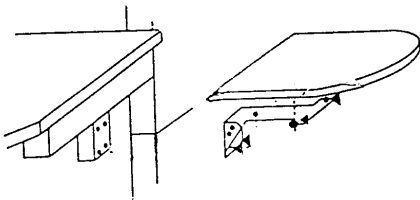

4. Attach mouse shelf bracket to mouse shelf using three silver phillips head screws into pre-drilled holes. Attach mouse shelf assembly to either left or right side of workstation, using four silver phillips head screws.

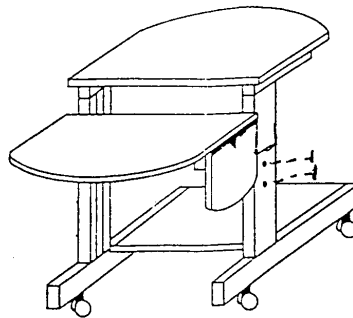

5. Using 4 flat head screws 9/16" long, adjust height of your workstation. Insert screws from outside of legs into threaded inserts in upper leg sections.

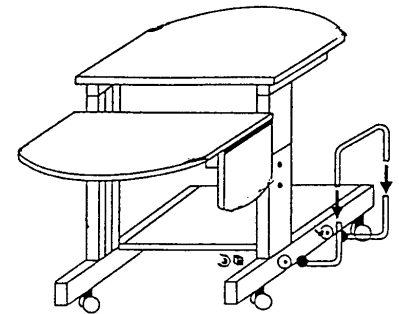

6. Install CPU holder on right or left side of workstation. Install nut and washer on silver "L" support. Put threaded end of "L" support through lower section of leg. Install plastic spacer and nut on inside of leg. Using the threaded portion of the "L", adjust for width of CPU by moving nuts. Slide upper portion of CPU holder over two silver "L" supports.

7. Snap surge protector into "U" bracket.