

# Instruction Sheet

## Models TH2642E and CH2642E



A Division of ACCO Brands, Corp.

300 Tower Parkway  
Lincolnshire, IL 60069  
(800)777-3750



TH2642E



CH2642E

### Parts List

#### Models TH2642E and CH2642E

- 4 - 4" casters, 2 w/brake
- 4 - bolts
- 4 - nuts
- 1 - cord wrap with bracket

- 1 - power cord assembly
- 4 - screws
- 1 - rubbermat


#### Tools Required:

- 1 - slotted screwdriver
- 1 - rubber mallet
- 1 - phillips screwdriver  
(for cabinet models)

#### For Cabinet Models Only:

- 2 - keys
- 1 - chrome handle
- 2 - phillips head screws


1

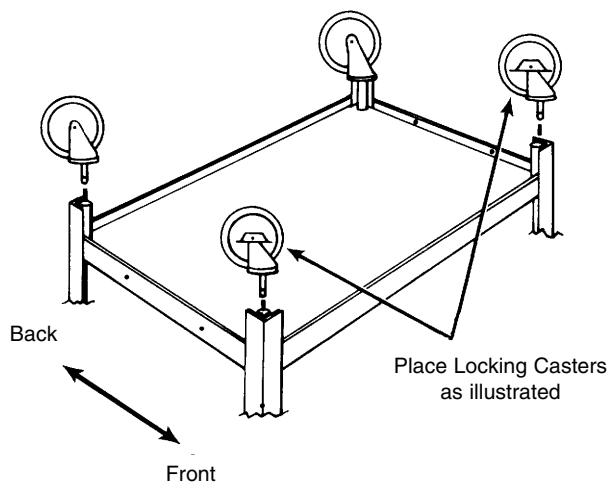

Turn bottom stand assembly upside down on a smooth surface. Push the four casters firmly into the caster socket holes in bottom of each leg as illustrated.

**IMPORTANT:** Casters must be fully seated. Tap with rubber mallet firmly to properly seat casters. Turn the stand right side up.

2


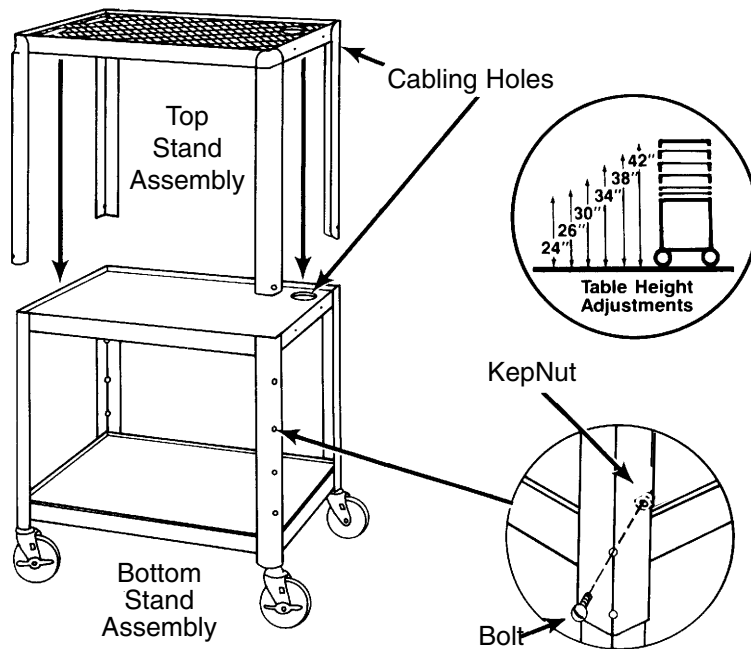


Position top stand assembly over bottom stand assembly, as illustrated.

**NOTE:** Be sure cabling hole in corner of top and middle shelves line up on top of each other.


Adjust top stand assembly up or down to desired height. Align holes in all four legs, insert bolts and fasten with four kep nuts, as illustrated.

3

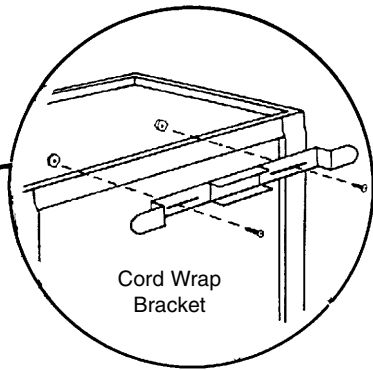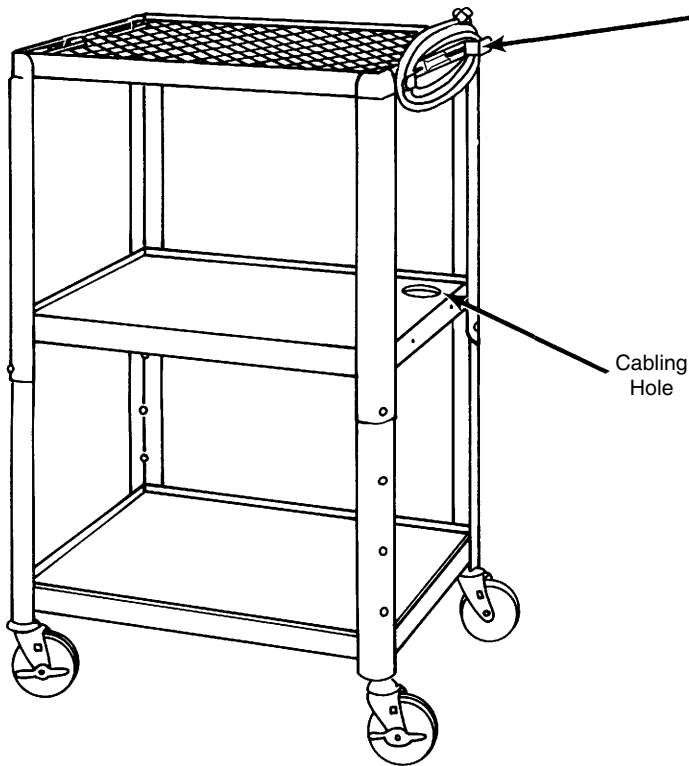

Position cord wrap bracket over mounting holes in end of table and secure with two small screws and nuts. SEE DRAWING A.


4

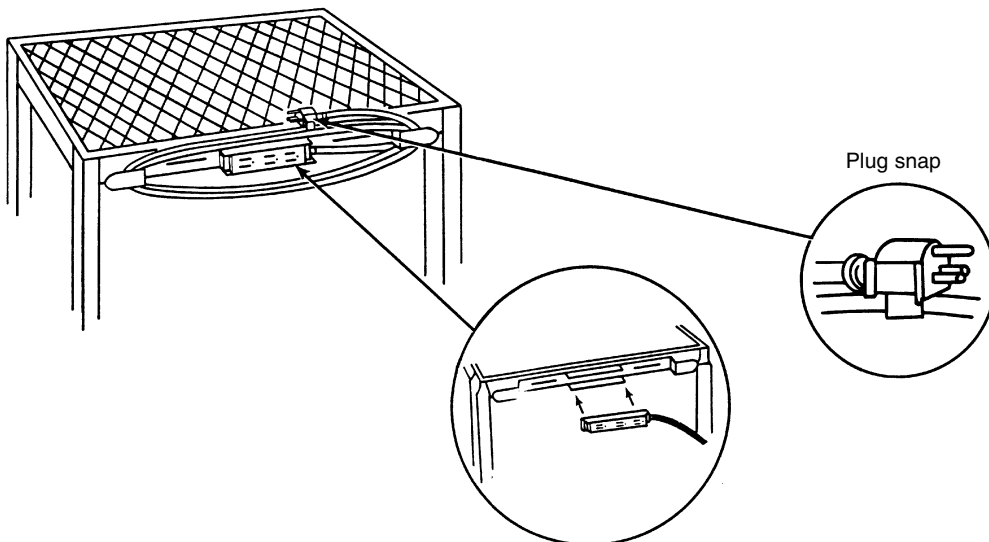

Press 3-outlet power cord into "U" bracket mounted on table and wrap remaining cord around cord bracket. For safety and neat appearance, secure cord plug to cord with plug snap, place rubber mat on top shelf.

5

**CABINET MODELS ONLY**

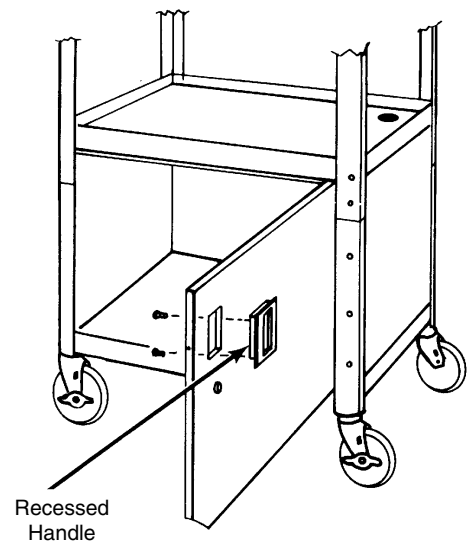

**For models with a cabinet.**  
Press chrome recessed handle into door and fasten with 2 phillips head screws.