

# Instruction Sheet

## Model TL48W, TL36W



Customer Service Dept  
2245 Delany Rd  
Waukegan, IL 60087

Ph: 847/244-1800 • 800/323-4656  
Fax: 847/244-1818 • 800/327-1698



### Parts List

- |                                 |                    |
|---------------------------------|--------------------|
| 1- Base                         | 2- bullet caps     |
| 1- Worksurface                  | 4- Luxor logo caps |
| 4- Uprights (3 for model TL36W) |                    |
| 2- Casters                      |                    |
| 2- Casters with brake           |                    |
| 1- Allen wrench                 |                    |
| 4- Allen head bolts             |                    |
| 4- Black screws                 |                    |

- 1- Separate and identify parts.
- 2- Using the diagram at right, attach back two uprights using allen head bolts and allen wrench. Fully tighten at this time. attach left and right upright but do not fully tighten at this time. These must remain loose.
- 3- Lay base and uprights on a smooth surface. Turn base up so the back two uprights are on the floor. Place worksurface over back two uprights at desired height and secure into place using black screws. Then attach left and right upright using black screws. Make sure you use the same hole location for all uprights.
- 4- Fully tighten left and right uprights at this time using allen wrench.
- 5- Install casters with brake in front. casters must be fully seated.
- 6- Install bullet caps using rubber mallet if necessary. Then stand unit in an upright position.
- 7- Install all Luxor logo caps into uprights using rubber mallet if necessary. Unit is now ready to use.

