

Instruction Sheet

Models TVP-44, TVP-32, TVP-44LT and TVP-32LT






Customer Service Dept
2245 Delany Rd
Waukegan, IL 60087
Ph: 847/244-1800 • 800/323-4656
Fax: 847/244-1818 • 800/327-1698



Parts List

- | | |
|----------------------------|------------------|
| 1 - Handle | 16 - Nuts |
| 1 - Power cord | 4 - Small screws |
| 2 - Swivel casters w/brake | 4 - Small nuts |
| 2 - Fixed casters | |
| 4 - Sure grip pads | |
| 6 - Cord ties | |
| 16 - Bolts | |
| 16 - Flat washers | |
- Tools required:**
Slotted Screwdriver
1/2" open end wrench

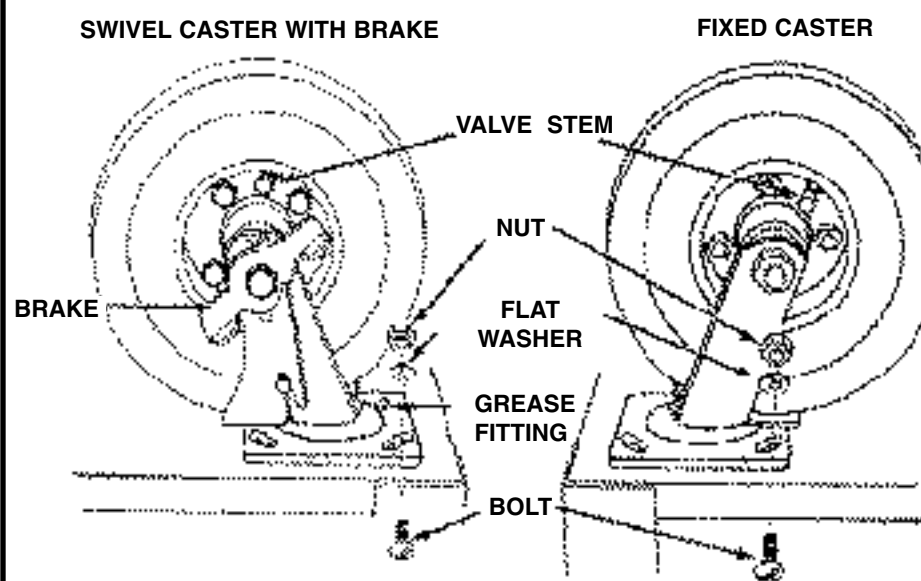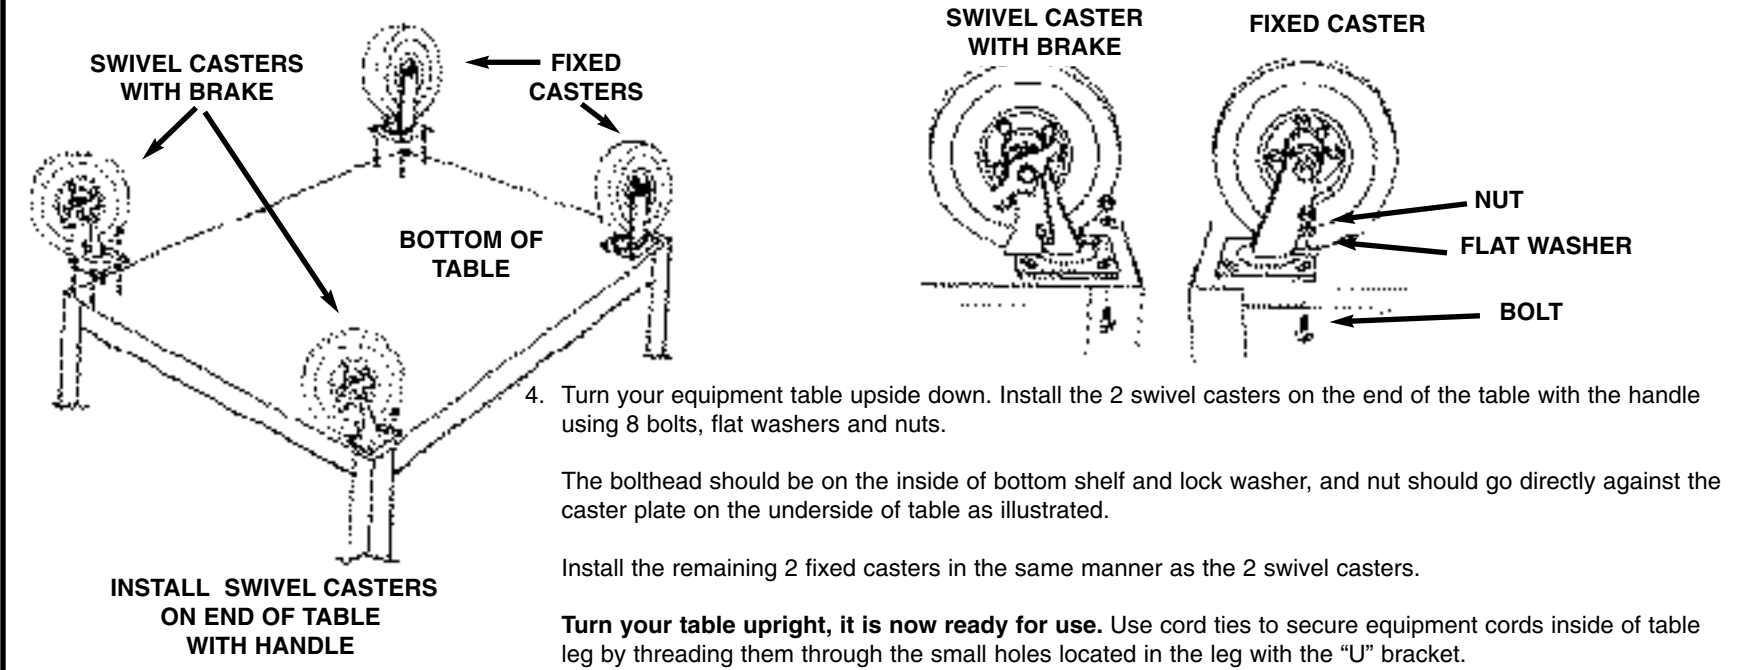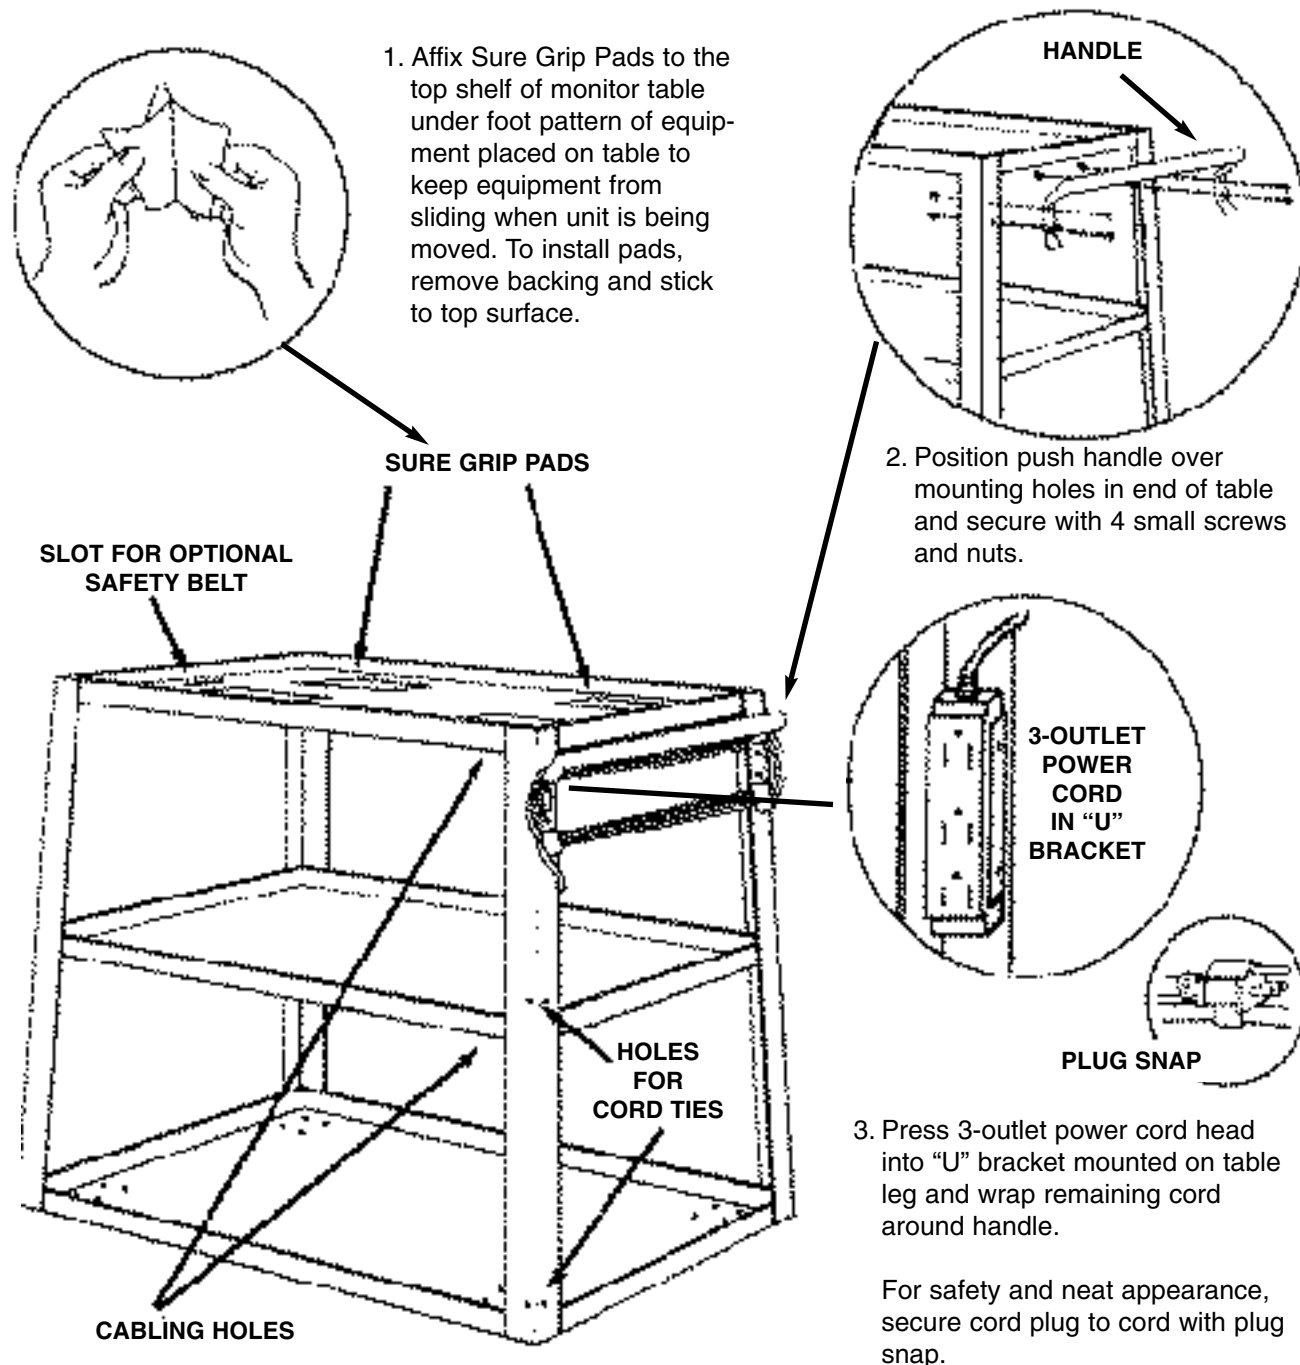

To assure proper operation of your equipment table:

1. Check tire pressure every 30 days. Pressure should be maintained at 50 lbs.
2. Grease fittings on swivel casters every 45 days using a standard grease gun, using regular multipurpose grease. (Both available at your local hardware store.)

CAUTION: Do not over grease. Using too much grease may cause seepage around the bearings and may cause grease to run down the wheel onto the floor.

Replacement parts may be purchased from your Luxor dealer should you encounter a problem with your pneumatic casters.

Part No.	Description
80111	Inner tube only
80109	8" pneumatic wheel w/o brake
80110	8" pneumatic wheel w/brake
80000	Tire only