

Instruction Sheet - TVW Video Stands

Models TVW-42, TVW-44, TVW-54 and TVW-554



Customer Service Dept
2245 Delany Rd
Waukegan, IL 60087
Ph: 847/244-1800 • 800/323-4656
Fax: 847/244-1818 • 800/327-1698



PARTS LIST

TVW-42

- 1 - Top shelf
- 1 - Bottom shelf
- 4 - Legs
- 4 - Hex head bolts
- 8 - Kep nuts
- 4 - Caster sockets
- 4 - 4" casters (2 w/brake)
- 1 - Cord wrap bracket
- 1 - Power cord
- 2 - Screws and nuts
- 1 - Wrench
- 4 - Sure grip pads
- 3 - Cord ties

TVW-44 & TVW-54


- 1 - Top shelf
- 1 - Middle shelf
- 1 - Bottom shelf
- 4 - Legs
- 4 - Hex head bolts
- 12 - Kep nuts
- 4 - Caster sockets
- 4 - 4" casters (2 w/brake)
- 1 - Cord wrap bracket
- 1 - Power cord
- 2 - Screws and nuts
- 1 - Wrench
- 4 - Sure grip pads
- 3 - Cord ties

TVW-554


- 1 - Top shelf
- 2 - Middle shelf, 20"x32"
- 1 - Middle shelf, 27"x32"
- 1 - Bottom shelf
- 4 - Legs
- 4 - Hex head bolts
- 20 - Kep nuts
- 4 - Caster sockets
- 4 - 4" casters (2 w/brake)
- 1 - Cord wrap bracket
- 1 - Power cord
- 2 - Screws and nuts
- 1 - Wrench
- 4 - Sure grip pads
- 3 - Cord ties

Tools Required:


- 1 - Rubber mallet
- 1 - Slotted screwdriver

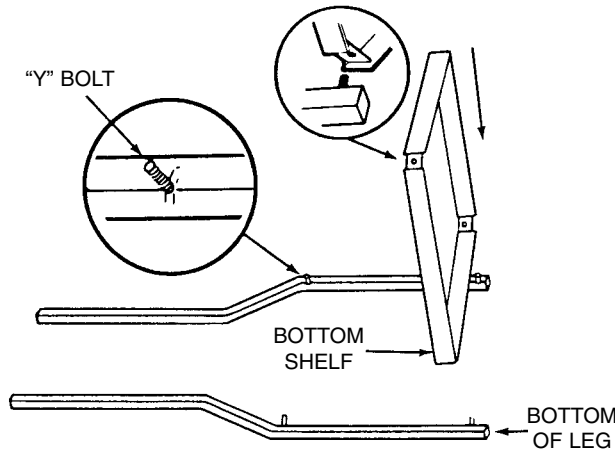


1
Lay two angled legs on flat surface as illustrated. NOTE: "Y" bolts on legs must all face inward and upward. Models with cabinets will have holes in each of the four legs. The two holes in each chrome leg must face toward each other on the short side of the table as shown. If your stand does not have a cabinet, the holes will not be used. Locate the bottom shelf. It is the only shelf without a cabling hole.

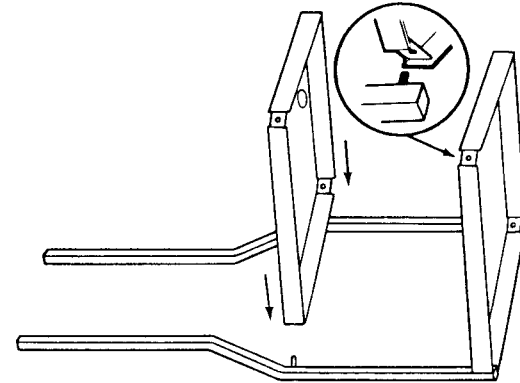


2
Insert "Y" bolts that are welded to the legs, into corner of the shortest side of bottom shelf. Align two small holes in shelf surface, toward the front of table. Screw on kep nuts and finger tighten only. (For model TVW-42 position bottom shelf into "Y" bolts on legs. Screw on kep nuts and finger tighten. Move onto Step #3) Locate center shelf/shelves with cable hole only. Position shortest side of shelf onto "Y" bolts on legs in the same manner as done with the bottom shelf. NOTE: Be sure two small holes in shelf surface face toward the front of table. Screw on kep nuts and finger tighten.

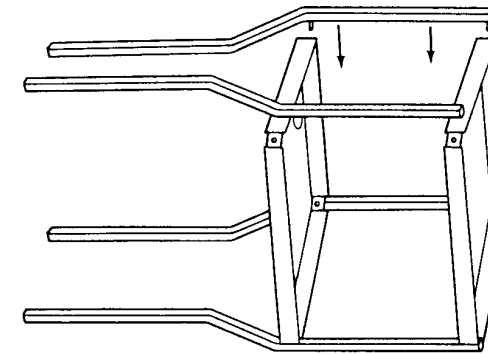


3
Place the two remaining legs into the shelf corners of middle and bottom shelves. (Bottom shelf for Model TVW-42) Screw on kep nuts and finger tighten.

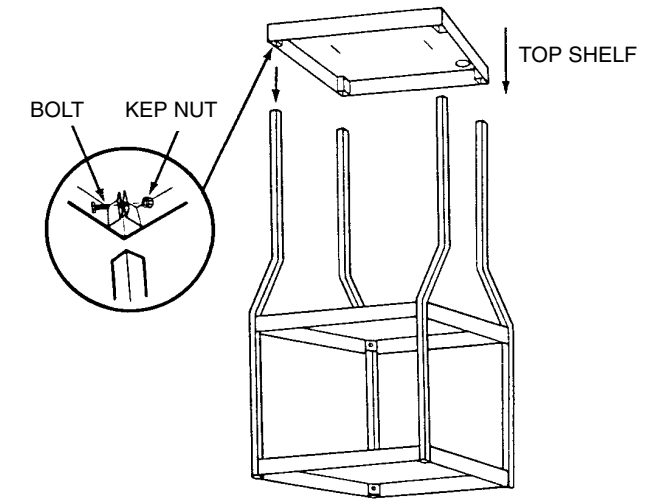


4
Turn table right side up and push top shelf onto the four legs making sure the two small holes in shelf surface face the back of the cart. IMPORTANT: Tap firmly with rubber mallet until completely seated. Insert bolt in each corner leg bracket on the underside of top shelf as illustrated. Screw on kep nuts. Now tighten all nuts with wrench provided.

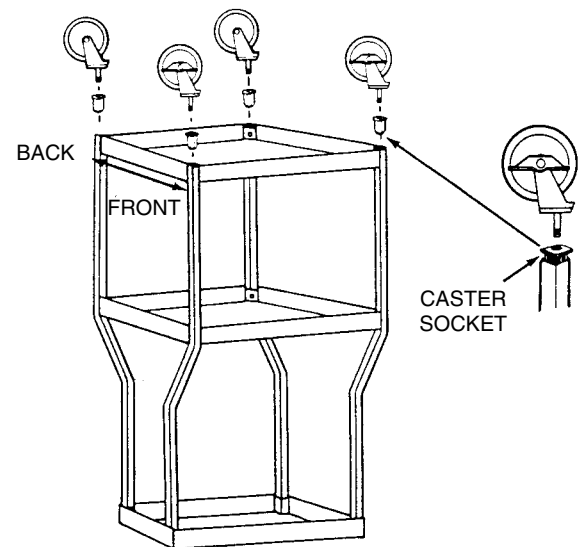


5
Turn table bottom side up. Use rubber mallet to tap caster sockets into bottom of all four legs. IMPORTANT: Casters must be fully seated. Tap firmly with rubber mallet to properly seat casters. Be certain to keep locking casters facing the front on the widest side of the table as illustrated.

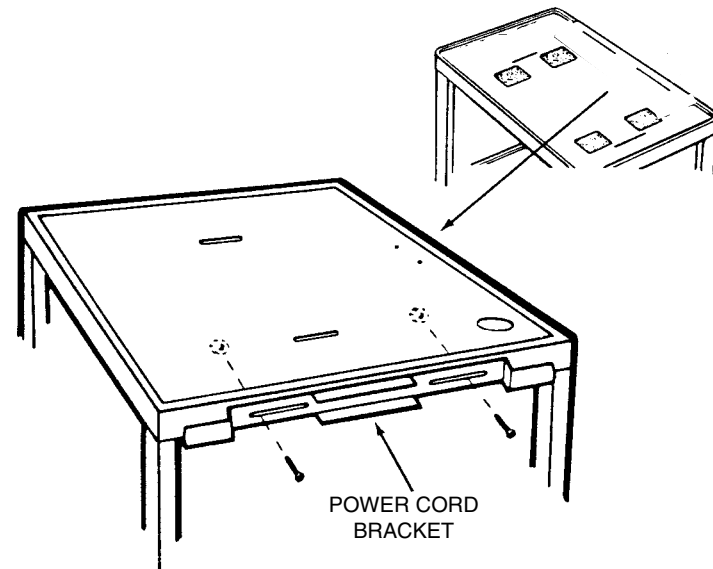

6
Turn table right side up. Position power cord bracket over mounting holes and screw into place. To attach OPTIONAL slant bar, align two holes in slant bar over two small holes in top shelf surface and secure with two sheet metal screws.

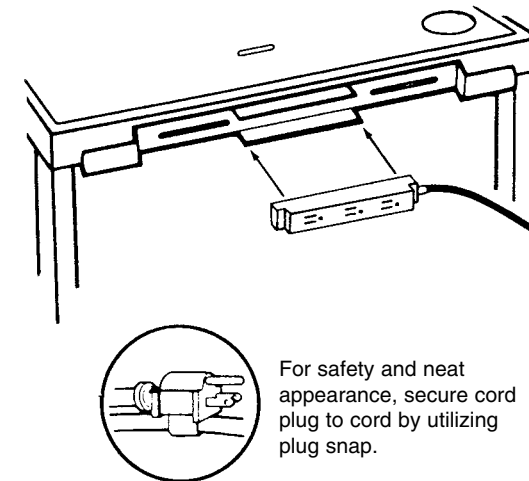

7
Press outlet assembly into place and wrap remaining cord around cord bracket. Your Luxor video table is now ready for use.

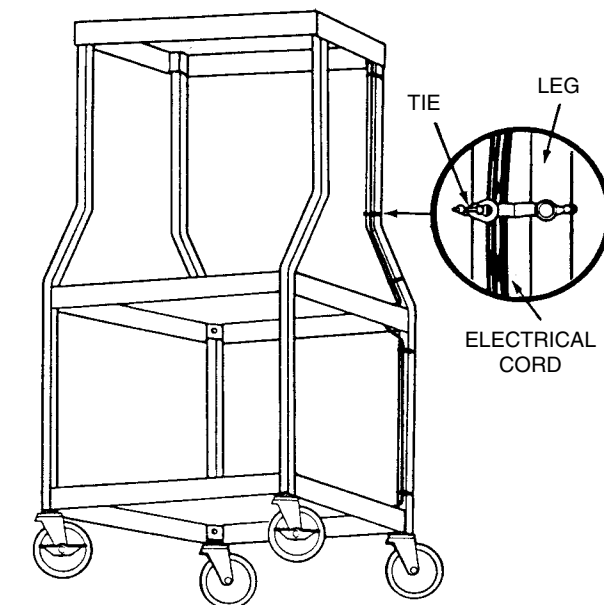

8
Use cord ties provided to secure equipment cords to legs.