
Instructions For — Electrical Assembly and Cable-TrackTM Management System Your Endura mobile equipment table incorporates the Cable-TrackTM 15 foot surge suppressing electric assembly (U.L. & C.S.A. listed) which is built into the safety handle. Please review these last values are fully as a few handle.

cord management system. This exclusive feature manages electrical

is built into the safety handle. Please review these instructions carefully

CTMS © 1992

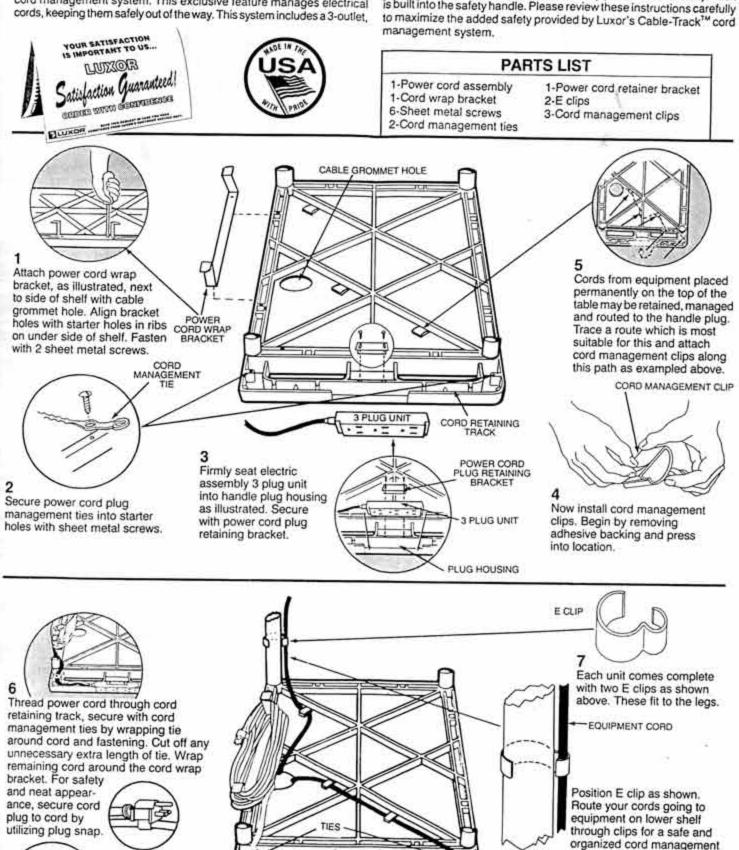

CORD RETAINING TRACK

CORD MANAGEMENT TIE

Instruction Sheet - Endura Video Production Centers Endura Models VP-34, VP-34B and VP-40B

Congratulations for having chosen an excellent Luxor product.

Your purchase is backed by Luxor's satisfaction guarantee. Luxor is a service oriented company. As a service to you, we are enclosing a "satisfaction guaranteed" request card. Should a problem arise needing our assistance simply fill out the card and fax it to us toll-free or mail postage paid to Luxor. Be sure to include your

telephone number. Upon receipt of your service request, we will give it immediate attention to be sure that you will be completely satisfied with your purchase.

Thank you for your confidence.

Customer Service Department LUXOR CORPORATION 2245 Delany Road Waukegan, IL 60087









PARTS LIST

Models VP-34 & VP-34B

- 1-Top shelf w/handle
- 1-Middle shelf w/8 leg posts
- 1-Bottom shelf w/caster sockets
- 2-Sets legs
- 4-Casters 2 w/brake (VP-34)
- 2-Casters w/brake (VP-34B)
- 2-Mono-pod brackets
- 1-Mono-pod camera mount 4-Sure grip pads
- 4-Small screws
- 4-Small screws 1-Grommet assembly 1-Grommet assembly

- Tools Needed: 1-Slotted screwdriver 1-Rubber mallet
 - 1-Steel hammer for models with big wheels.

Model VP-40B

1-Set long legs

1-Set short legs

2-Casters w/brake

4-Sure grip pads

2-Mono-pod brackets

1-Mono-pod camera mount

1-Top shelf w/handle

1-Middle shelf w/8 leg posts


1-Bottom shelf w/caster sockets


IMPORTANT:

The electrical unit should be assembled first


If your Endura Video Production Center has the Electrical Assembly and Cable-Track™ Cord Management System, see reverse side of this sheet for assembly instructions.

If your Endura Video Production Center does not have the Electrical Assembly and Cable-Track™ Cord Management System, start by cong the electric plug housing in the handle of the top shall illustrated below.

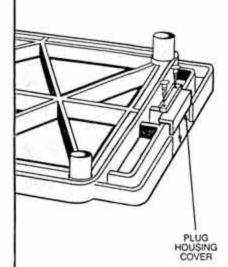


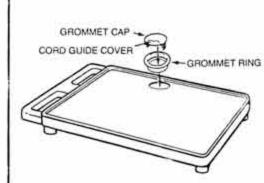


Install grommet ring by tapping into place with rubber mallet. Snap off cord guide cover from grommet cap so equipment plug may be run through grommet to plug unit, then insert grommet cap into grommet ring.

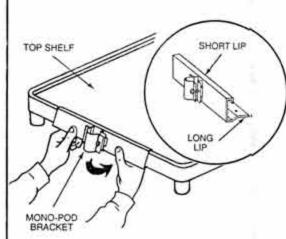


Mount the first mono-pod bracket on the top shelf opposite the handle as illustrated. Hook the short lip of the bracket over the top edge of the top shelf. Press down om the side of the bracket snapping the long lip onto the bottom edge of the shelf.

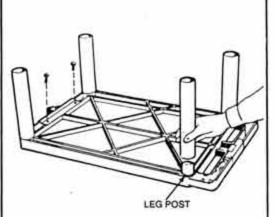


3 Lay top shelf (with handle), ribbed side up on a smooth surface. Slide the bracket along the shelf edge to align holes in the long lip with the holes in underside of shelf. Secure bracket with two sheet metal screws. Push all 4 short legs onto leg posts.

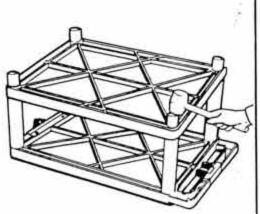


Position center shelf (with 8 leg posts) ribbed side up over the 4 legs and insert leg posts into short legs. Using a rubber mallet, firmly hammer center shelf into legs until all four legs are seated (flush) against the surfaces of both shelves.

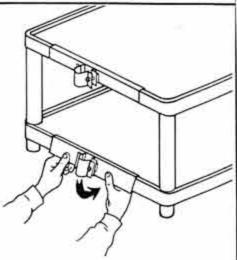


Mount second mono-pod bracket on center shelf in the same manner as in step #2.

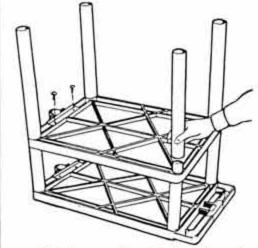


Slide the second bracket along the center shelf edge to align holes in the long lip with the holes in underside of shelf Secure bracket with two sheet metal screws. Push the remaining 4 legs into leg posts of center shelf.

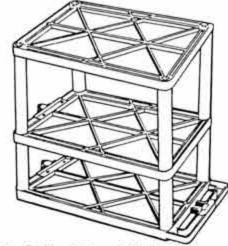


Position bottom shelf, ribbed side up. over the 4 long legs and insert leg posts into legs. Firmly hammer bottom shelf until seated onto all 4 legs.

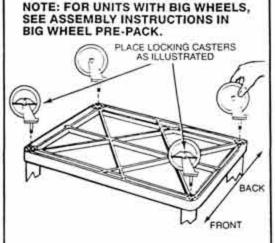

8 Push the four casters firmly into the holes in each corner of the bottom shelf. Important: casters must be fully seated. Tap firmly with rubber mallet to properly seat casters. Turn your Endura Video Production Center right side up.

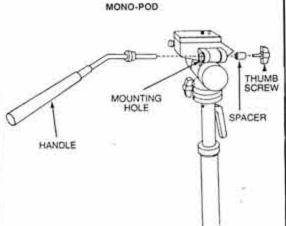

Remove thumb screw and spacer from mona-pod handle. Slide handle through hole in mono-pod head (opposite level). Put spacer back over end of handle then secure with thumb screw.

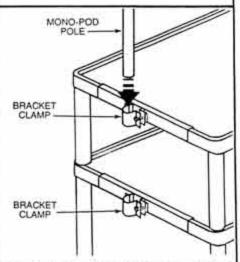

10 Loosen the screws from both mono-pod bracket clamps. Slide mono-pod down through both clamps. Tighten the screws on each bracket clamp to secure monopod in desired position.

Your Endura Video Production Center is now ready for use.

