

WTFS93E

Assembly Instructions

Part List

- 3 Bottom Shelves
- 6 Middle Shelves
- 3 Top Shelves
- 9 Fluted Leg Packs
- 9 Panel A (SP1414 - perforated front panel)
- 2 Panel B (FRD1420 - side door panel)
- 4 Panel C (SPG1414 - perforated back panel w/ grommet hole)
- 5 Panel D (SD1414 - back door panel)
- 4 Panel E (FRP1420 - perforated side panel)
- 4 Casters w/ Brake
- 4 Casters w/o Brake
- 2 Shelf Connection Hardware Pack
- 1 W2OSB Box
- 1 W2OSB Plate Hardware Pack
- 2 44" Chrome Tubes
- 1 WTFS Box
- 1 Power Strip w/ 25' Cord
- 1 Cord Wrap
- 5 Grommets
- 3 Inlays

Notes

Box Labeled WT41C-L Contains:

- 1 - FRD1420
- 1 - FRP1420
- 2 - SP1414

Box Labeled WTCDBP Contains



- 1 - SD1414
- 1 - SPG1414


WTFS93E

Assembly Instructions

1



Bolt the shelves together using the supplied hardware kit (4 bolts, 4 nuts and 4 washers).

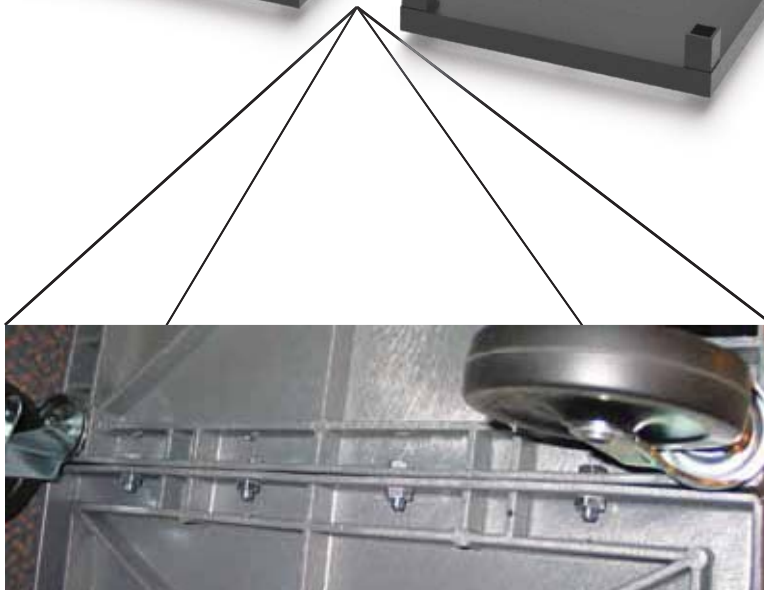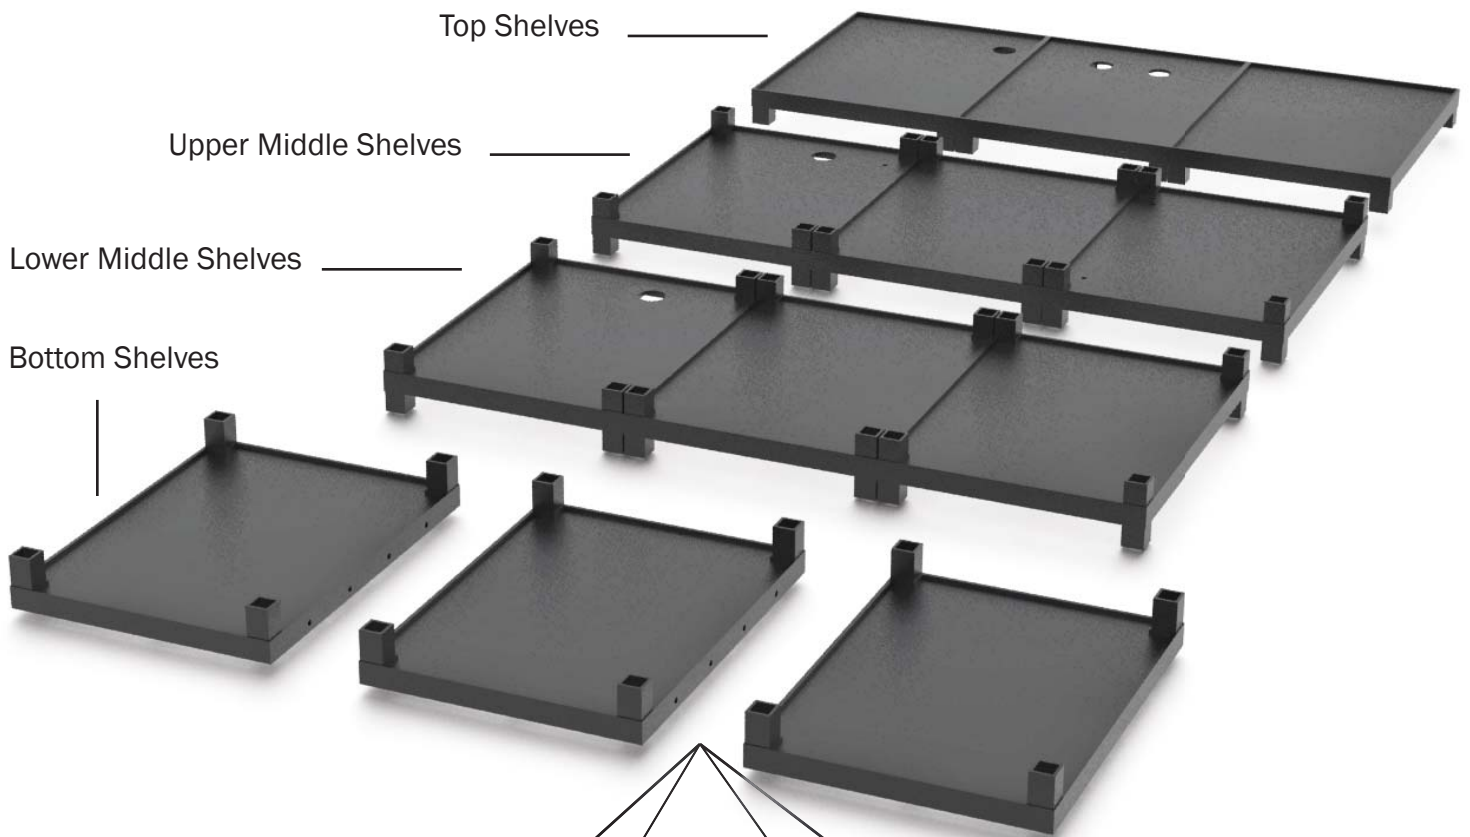

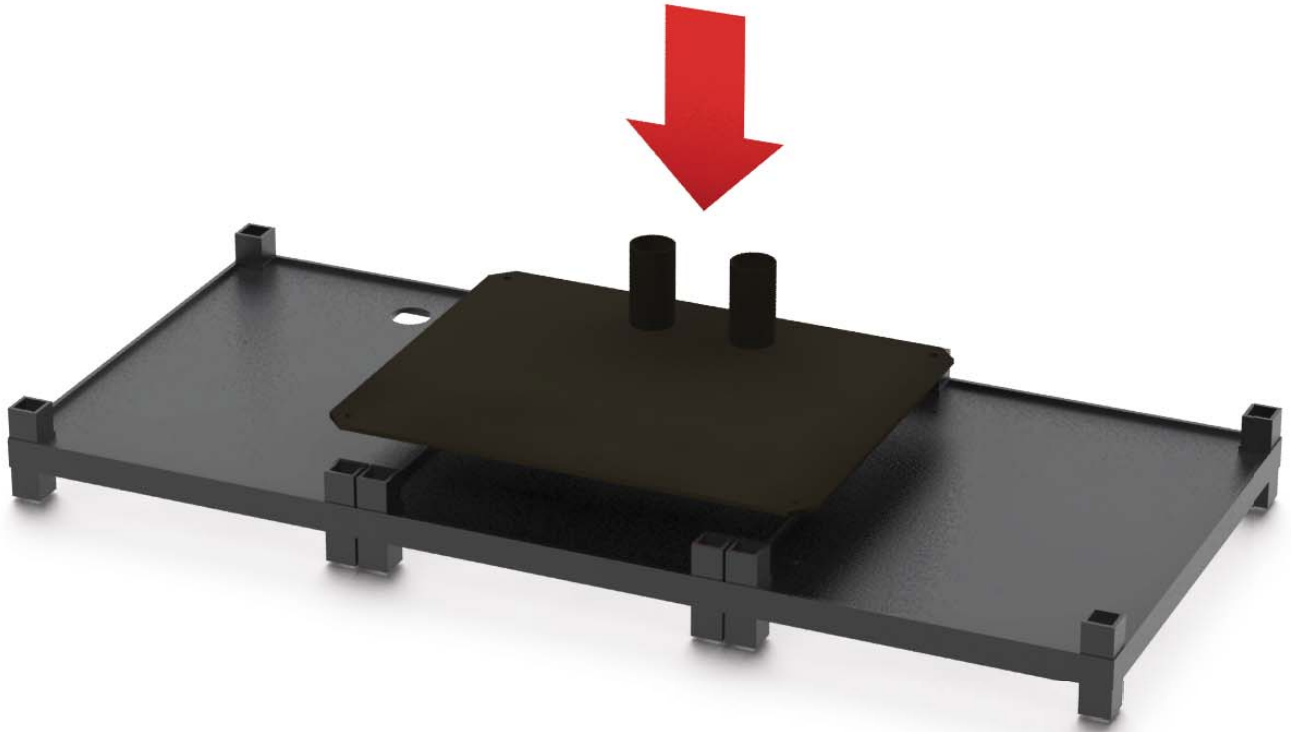

2

With assistance, attach the metal base plate to the upper middle shelf assembly using the provided hardware (4 bolts, 4 nuts and 4 washers).

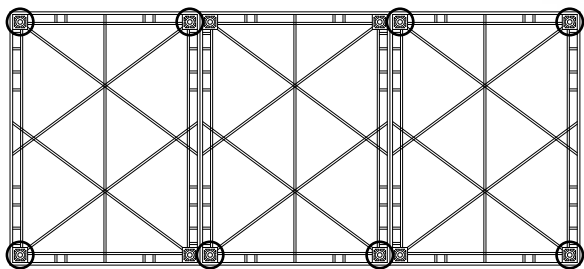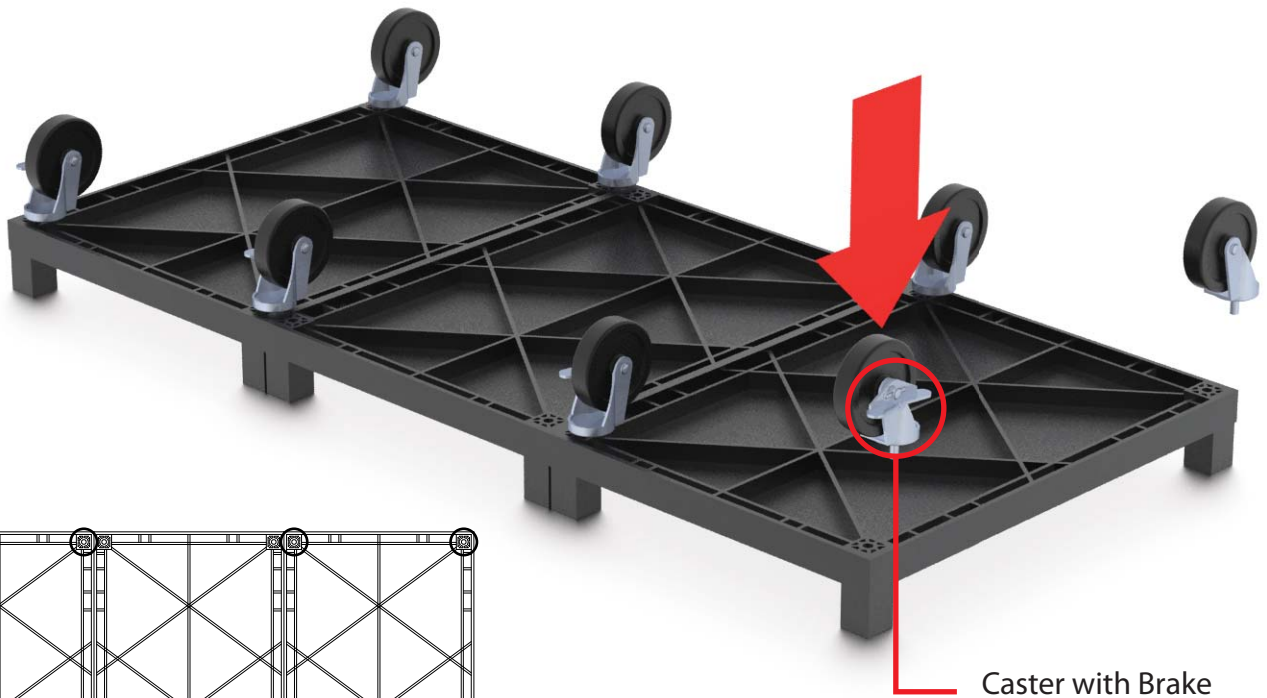

FRONT


3

Using the diagram above, insert the casters into the bottom shelf assembly. The casters with brakes go to the front. Using a rubber mallet, tap the casters firmly into place.




4

Turn the bottom shelf assembly over, and insert legs. The flutes of the legs will face each other.

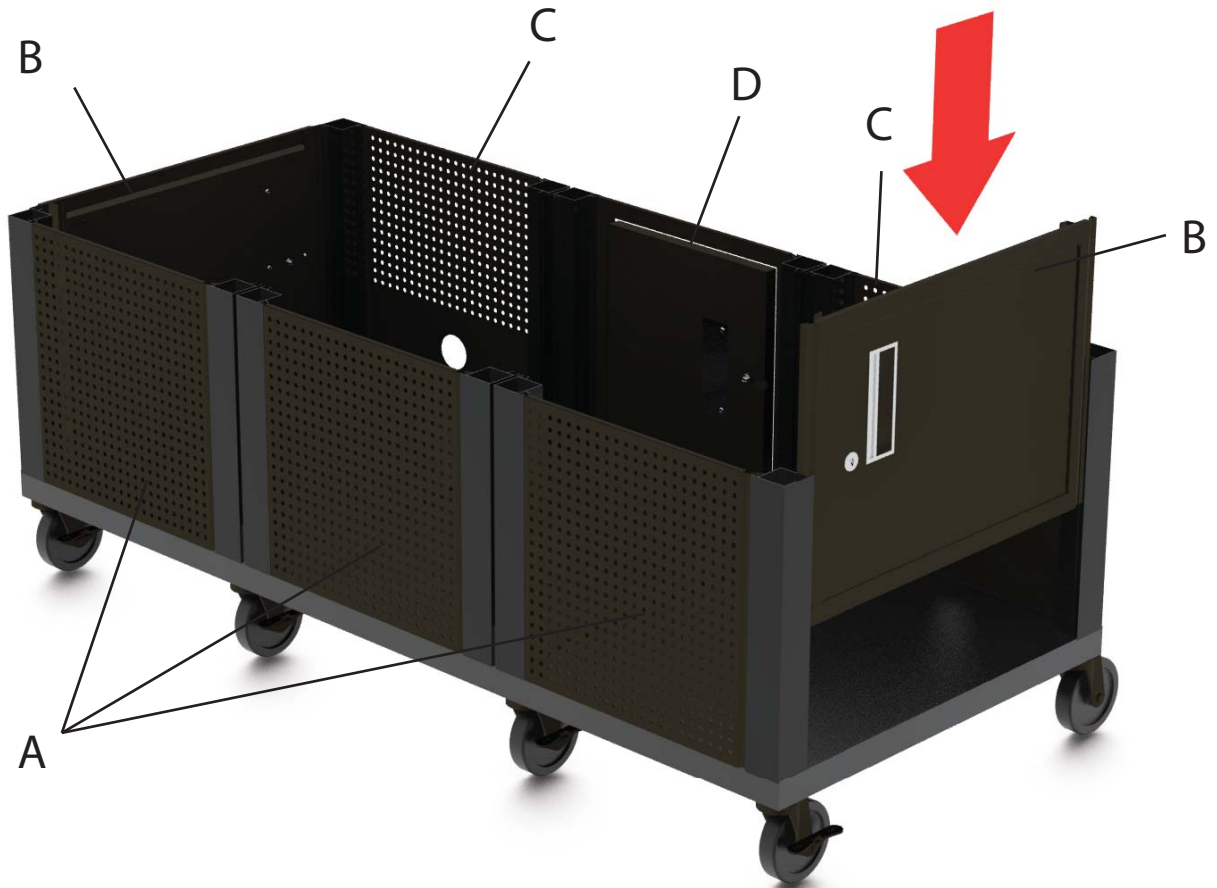

5

Insert the panels into the fluted legs. Panel A x 3 to the front, Panel B x 2 on the sides, Panel C x 2 and Panel D to the back.

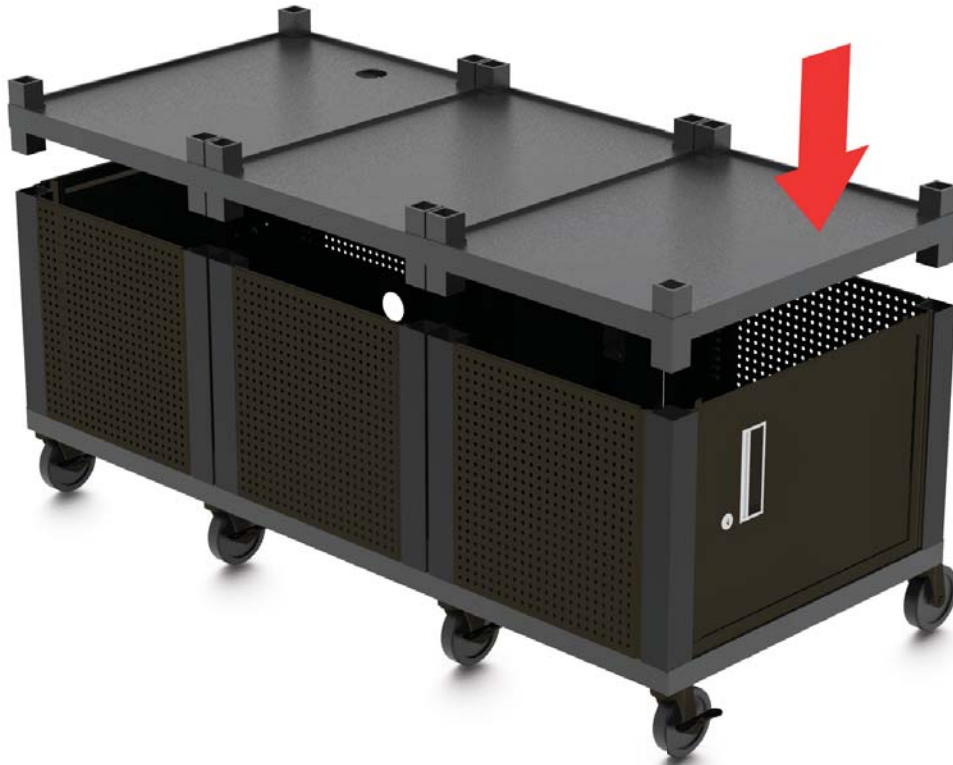

6

Insert the bottom middle shelf assembly into the legs. Using a rubber mallet, tap the assembly firmly into the legs.



7

Insert the fluted legs into the bottom middle shelf assembly, making sure the flutes face each other.



6

Insert the panels into the fluted legs. Panel A x 3 to the front, Panel E x 2 in the sides, Panel C and Panel D x 2 to the back.



7

With assistance, insert the upper middle shelf assembly into the legs. With a rubber mallet, firmly tap the assembly into the legs.



8

Insert the fluted legs into the upper middle shelf assembly, with the flutes facing each other.




9

Insert the panels into the fluted legs. Panel A x 3 to the front, Panel E x 2 on the sides, Panel C and Panel D x 2 to the back.




10

Insert the top shelf assembly into the legs. With a rubber mallet, tap the assembly firmly into place. Insert inlays and grommets.

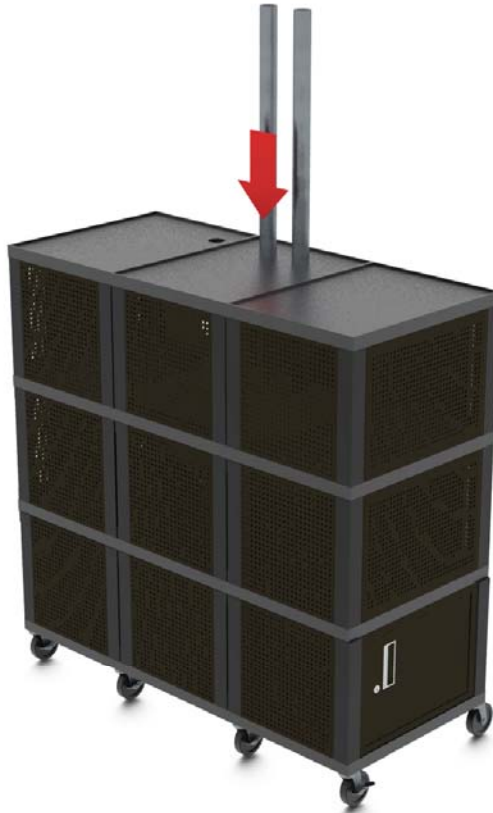

11

Insert the 2 Chrome tubes through the holes in the top shelf assembly, and secure them with the provided bolts.

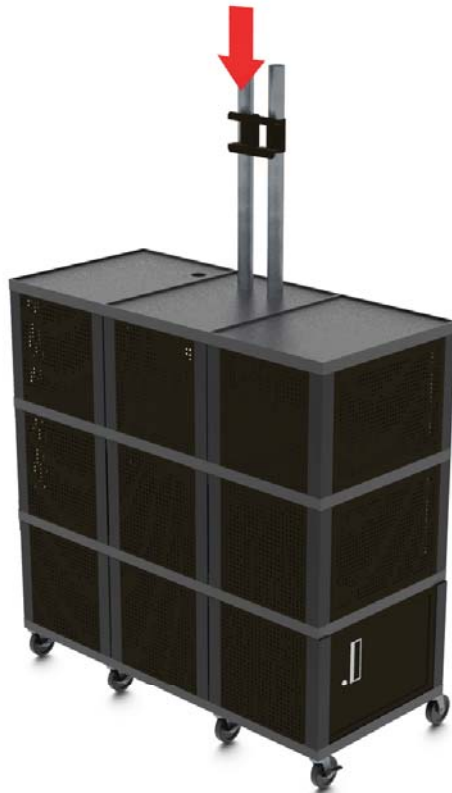

12

Attach the top bracket to the chrome tubes at a desired height, and secure in place with the provided hardware.



13

Attach the WTFS plate to the top bracket, with the 4 - 5/16 - 18" bolts, washers and nuts. Follow the WTFS instructions for attaching the Display.