

PO Box 290 Waukegan, IL 60079 Phone: 800-245-7224 Fax: 800-245-8224 www.hwilson.com sales@hwilson.com

H. Wilson Company

Parts for WCALCDM

- (1) 1 1/4" 25" long inner adjustable pipe
- (1) 1 1/2" 23 1/2" long outer adjustable pipe, attached to mounting bracket (1) ceiling mounting bracket

(4) plastic spacers

- (4) arms
- (1) mounting assembly
- (5) M6 hexhead screws
- (16) 6mm washers
- (1) M10 screw
- (2) 10mm washers

(4) L brackets, no slots

(12) 6mm nuts
(12) 6mm shoulder screws
(1) 10mm nut
(4) 3" screws & (4) washers
(4) slotted L brackets

Instructions:

1. Secure ceiling bracket to ceiling using (4) 3" screws and washers. Place washer on the outside of hole of mounting bracket, then screw in the 3" screws. Diagram A.

NOTE: Do NOT attach to a drop ceiling.

2. Secure 1 1/2" - 15" long inner adjustable pipe to ceiling mount by screwing it in. See Diagram A.

3. Attach (4) arms to mounting assembly using 6mm shoulder screws. Do not tighten. Determine correct position of arms for projector location and then tighten the (4) nuts. See Diagram B

4. Take one slotted L bracket and attach to top of slotted arm bracket using (1) 6mm shoulder screw, nut and 6mm washer. Then take unslotted L bracket and attach to outside of slotted L bracket using (1) 6mm shoulder screw, nut and 6mm washer. Continue doing this to all four arms. Diagram D

5. Attach this assembly to other part of mounting bracket using M6 hexhead screws. Do NOT tighten. Determine correct position of arms for projector location and then tighten the (4) nuts. Diagram D.


6. Connect projector to arms and bracket assembly using screws that are recommended by your installer. Align arm and bracket assembly over the female fittings on your projector. Place nut over female fitting on top of arm. Thread screw through the nut and into the female fitting on the projector. When screw is in palce securely, tighten nut. Do not over tighten. OPTIONAL: We have provided (4) spacers to prevent marring of LCD surface; to create ventilation where necessary, and to allow level attachment of projector if necessary. See Diagram B or C.


7. Take projector and bracket & arm assembly which is attached to the outer 23 1/2" long pipe and slide outer pipe over mounted inner pipe assembly and secure to your desired length. Insert the bolt and washer on the outside of the bracket and tighten into the welded nut on the inside of the bracket. Diagram E.


OPTIONAL: For tilting position loosen the (2) bolts in Slot A located on side of mounting bracket. Adjust for preferred tilt. Level or up to 10 degree tilt. Tighten bolts when tilt is correct.


8. To secure to the ceiling mounting bracket, use (1) M6 hexhead screw.

WCALCDM Universal Adjustable Height LCD Projector Mount

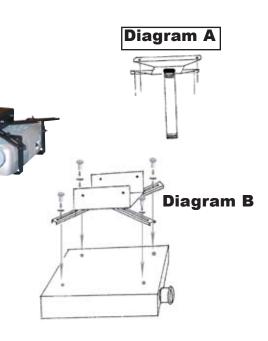

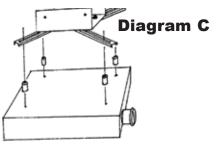

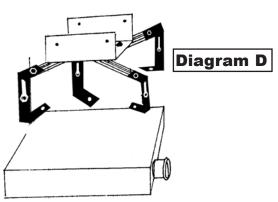

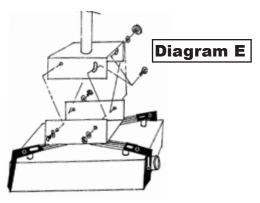

Please have a professional install this H. Wilson Product.