



Instructions for ReAction Cam HD

 
THANK YOU for your purchase of the Game Spy ReAction Cam HD. Please read this booklet before using the unit. If you should have any questions about this product or any other Moultrie product, please contact us using the information on the back of this booklet. Please register your camera at www.moultriefeeders.com to activate your warranty.

I GETTING STARTED

The Game Spy ReAction Cam provides the ability to capture, store and review still images and videos.

To use the ReAction Cam, install two AA Alkaline batteries under the Battery Door. Insert an SD card into the SD Card Slot under the rubber flap on the back of the unit. The maximum capacity of the SD card is 16GB.


Secure the ReAction Cam HD by sliding one of the 3 provided mounting options onto the mounting track. The camera can be mounted to a variety of objects by using the universal mount with provided straps, the bow mount, or the hat clip.

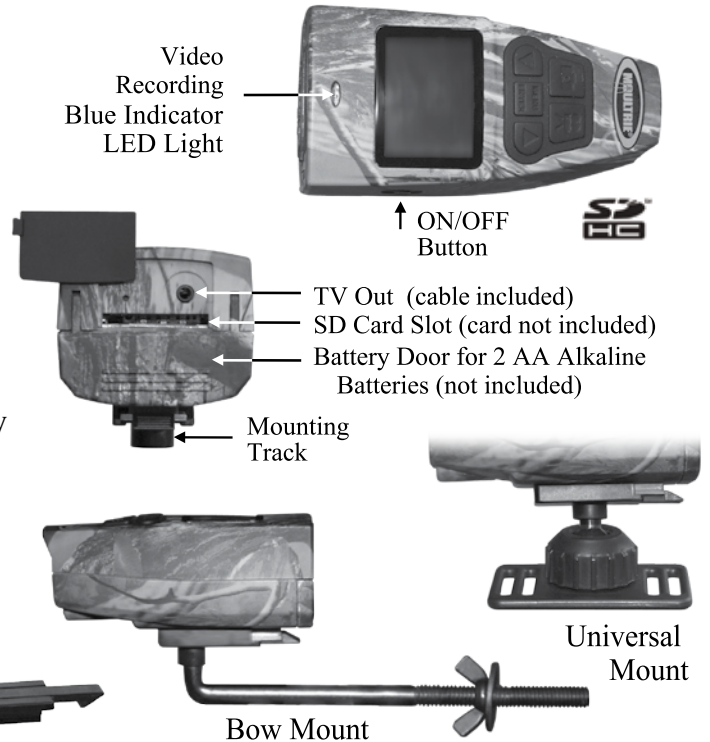

Mounting Strap



 Hat Clip

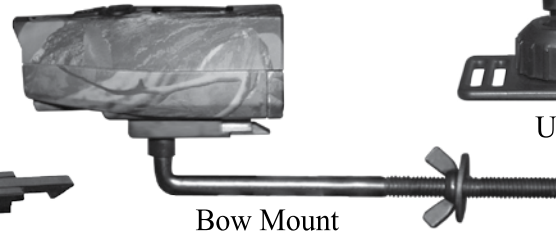

Bow Mount



Universal Mount

II BUTTON OPERATION

 
MENU/ENTER BUTTON – Displays the available functions including Playback, Standard Features, Advanced Features and Setup. This also is the Enter Button for Selecting an option.

UP BUTTON – Advances to the previous option in the menu or zooms in when taking a picture of recording a video (2X, 4X, 6X, and 8X).

DOWN BUTTON – Advances to the next option in the menu or zooms out when taking a picture or recording a video (2X, 4X, 6X, and 8X).

CAMERA BUTTON – Takes a still picture or multiple still pictures in multi-shot mode.

VIDEO BUTTON – Starts and stops video recording. Blue light indicates recording in process. Instant Record: If camera is powered OFF, holding the Video Button for a second will turn on the camera and will immediately begin recording video; however, the LCD display will be turned off (the blue recording light will be blinking indicating you are recording). To save battery life, the LCD will initially dim while recording and then turn off. You can turn on the LCD by pressing any other button.

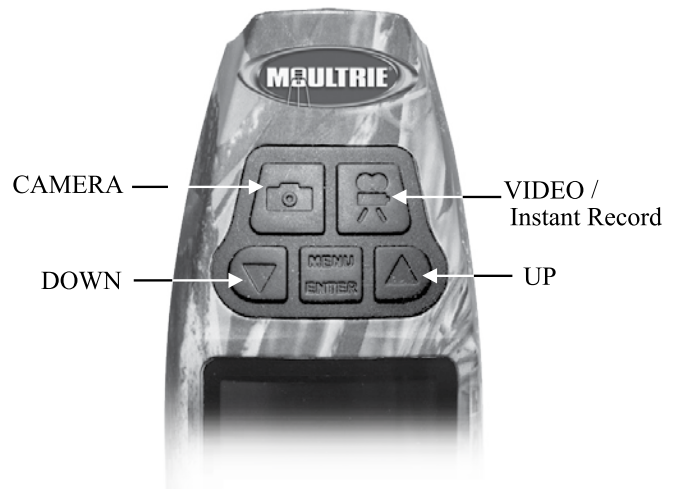

III MENU

Press the MENU/ENTER button to enter the Main Menu. Use the Up and Down Buttons to move through the options and the MENU/ENTER button to select and a highlighted menu option.

Playback Menu

- Main Screen - returns you back to the main screen
- Playback – Displays the stored photos or videos. Use UP/DOWN Buttons to scroll through saved photos or videos.
- Play Current Video – Plays current video selected. Press the Video Button to stop playback.
- Play All Video – Plays all videos consecutively.
- Slideshow – Presents a slideshow of all photos.
- Delete Current File – Allows you to delete currently selected photo or video.
- Delete All Files – Allows you to delete all files on SD card.
- View Files – Allows you to locate and view files using the UP/DOWN Buttons

Standard Features Menu

- Back – Takes you back to the Main Menu.
- Video Resolution – Allows you to adjust video resolution to High (1280x720), Medium (800x600) or Low (640x480).
- Photo Resolution – Adjusts photo resolution to High (5MP 2592x1944), Medium (3MP 2048x1536) or Low (1.3MP 1280x960).
- Photo Multi-Shot – You can choose how many photos are taken in one shot (1-10). The rate is up to 4 photos per second.

 
Advanced Features Menu

- Back – Takes you back to the Main Menu.
- Anti-Shake – Feature that reduces shaking blur when recording video.
- Audio-Recording – Allows you to record sound.
- Time-Stamp - Embeds a time and date on your picture or video.
- Auto-Stop - Feature that automatically stops video recording after 5, 10, 15 or 30 minutes.

Setup Menu

- Back – Takes you back to the main menu.
- Date/Time – Sets the proper date and time.
- LCD Brightness – Sets the brightness of the screen display.

IV LCD DISPLAY INDICATORS

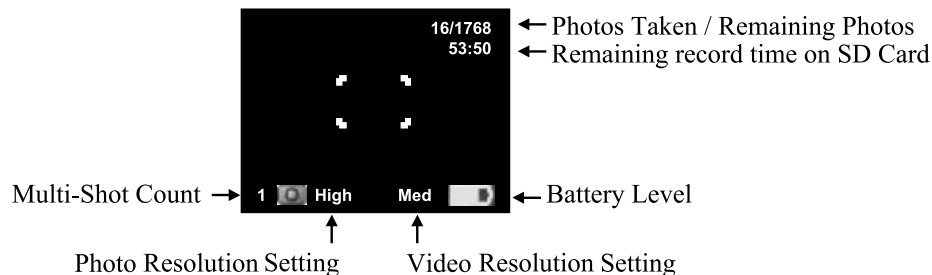

V VIDEO PLAYBACK ON A COMPUTER

The provided mini CD contains a video player that is compatible with the High Definition video files shot using the ReAction Cam. This video player is compatible with PC or Mac systems. To load this video player, simply insert the mini CD into your CD drive. The disk should begin the auto load sequence automatically, just follow the on screen instructions. If the CD does not begin auto installation, simply go to My Computer, and click on your CD ROM drive. Next click on the “Setup.exe” icon and setup will begin. For Mac users click on the file folder “macosx”, and then click on the setup file that matches your Mac OS version.



Our Service Department will gladly answer any questions you have.
Call 800-653-3334, Monday - Friday, 8:00 AM to 5:00 PM CST.
www.moultriefeeders.com