



Universal Digital Replacement Timer

INSTRUCTIONS:


Universal Digital Timer will feed up to 6 times per day and has been factory set to feed at 7:00am and 6:00pm for six seconds. To change settings or add feed times, follow the instructions below.

Customer Service will gladly answer any questions you may have on Moultrie products, call 800-653-3334 Monday-Friday 8:00am to 5:00pm CST. You can also visit moultriefeeders.com for instruction manuals and FAQs.

I CONNECTING THE TIMER

If you have a Moultrie compatible feeder, plug the white Universal Digital Timer (UDT) plug into the mating connector on the motor. If you do not have a Moultrie compatible feeder, use the provided

Wirenuts to connect the feeder motor's **Black** wire to the UDT's **Green** wire (-) and the feeder motor's **Red** wire to the UDT's **White** wire (+). Connect the **Timer** to the 6-Volt battery by attaching the Red Alligator Clip to the positive terminal (+) and the Black Alligator Clip to the negative (-) terminal.

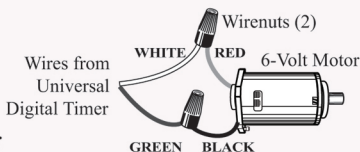

II PROGRAMMING AND TESTING THE TIMER

SET TIME OF DAY: Press the UP or DOWN button until the correct time of day appears. Press and release button to single-step through the minutes or hold down to advance quickly. The feeder will not run while buttons are being pressed and waits 10 seconds from the last button press before it is activated. The feeder is activated when the display alternates between the CURRENT TIME and %BATTERY.

SET FEED TIME: Press the SET button until the correct Timer Number appears in the upper right hand corner. Press the UP or DOWN button to set the Feed Time. Press the SET button again to set the RUN-TIME SECONDS which can range from zero to twenty seconds. Set the RUN-TIME SECONDS to zero to disable the specific timer.

TEST TIMER: To test the Timer, PRESS AND HOLD the SET button while the RUN-TIME SECONDS are displayed. Release the button and get away from the feeder when the message "TESTING GET AWAY" appears on the display. The display will countdown five seconds before activating the motor for the number of RUN-TIME SECONDS programmed. The test feature is useful for assessing the amount of feed to dispense.

The Battery Level is displayed every seven seconds. It is recommended that the battery be replaced when the %BATTERY reading is 25% or below.

See Moultrie's entire line of feeder accessories at www.moultriefeeders.com. While at the website sign up to receive Moultrie's Grow the Hunt Newsletter which features tips and techniques on Moultrie products.