

Instructions for using the Safety Rope **WARNING!**

When attaching the safety line to the tree, be sure the adjustable prussic hitch has been completely inserted through the loop at the end of the safety rope as shown in (FIG 7).
FIG 7




This must be done **BEFORE** you begin to climb with a climbing treestand. Always adjust the safety rope to minimize the slack. **NEVER** allow more than 36 inches total combined slack in the rope and tether strap. The more slack you have in the safety line, the farther you will fall. This may result in injury or prevent you from returning to the tree stand after falling.

The adjustable prussic hitch should be snug to the safety line. It should be tight when sliding it on the safety rope. If necessary, gently pull on the prussic loop to increase the tension of the prussic on the safety rope.

1. Put the loop end of the safety rope around the tree.
2. Thread the knot end and the adjustable prussic hitch all the way through the loop end of the safety rope (FIG 7).
3. Open the prussic hitch loop and insert the harness tether safety clip through this loop as shown in (FIG 8). **Screw the locking collar completely closed to secure the safety clip.**

FIG 8

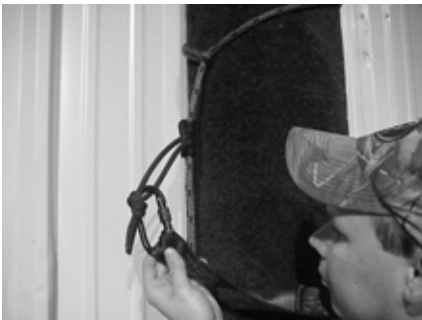

4. Slide the adjustable prussic hitch up the safety rope to a comfortable hunting position and pull on the end of the prussic hitch to secure it to the safety rope see (FIG 9).

FIG 9



5. Tie an overhand knot in the safety rope about a foot under the prussic hitch (FIG 10). This will help maintain your position on the safety rope in the event of a fall.

FIG 10



6. This is an adjustable safety rope. Always adjust the safety rope to minimize the slack needed for hunting. **NEVER** allow more than 36 inches total combined slack in the rope and tether strap (FIG 11). The more slack you have in the safety line, the farther you will fall. This may result in injury or prevent you from returning to the tree stand after falling.

FIG 11



Summit TreeStands
1-256-353-0634