



150 Industrial Road
Alabaster, AL 35007

Customer Support

Phone: 888.811.WING (9464)
Fax: 205.408.6157

(Monday – Friday, 9am – 4:30pm CST)

Web: wingscapes.com/contactus
Email: customerservice@wingscapes.com

Find Us Online

Website: wingscapes.com

YouTube: youtube.com/wingscapes

Facebook: facebook.com/wingscapes

Blog: wingscapes.com/blog

Twitter: @wingscapes


The Everlasting Birdfeeder (BETA) from WINGSCAPES should dispense seed for many weeks before requiring more seed. This feeder dispenses seed according to user programmable schedule. This dramatically extends intervals between filling the feeder. It also can have the effect of “training” wild birds to visit at certain times of the day (note: this will require consistent, long term use).

How Long Will My Feeder Run?

This will depend on how many seconds your feeder runs each day and what size seed you use. The following table shows your feeder's capacity (measured in days) based on several daily feeding amounts. FYI – Black Oil Sunflower (recommended) dispenses at a rate of about 1.5 oz. per second.

Ounces Dispensed per Day	1.5	3	4.5	4
Feeder Capacity (in days)	149	75	50	37

SPECIFICATIONS

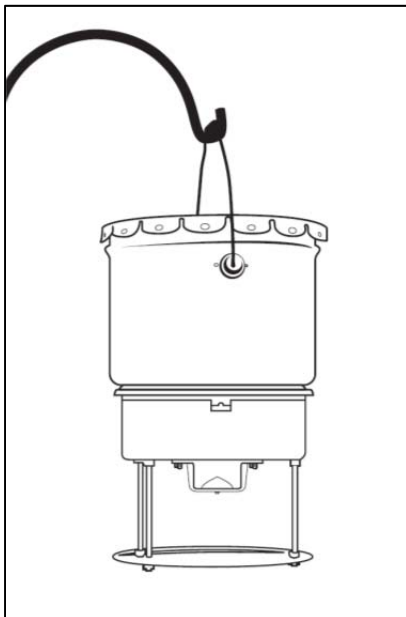

Model #	WSBF01-00131
Weight (with battery, NO seed)	7 lbs.
Weight (with seed)	14 – 16 lbs.
Seed Capacity	1.75 gal.
Battery Type	6-Volt, 5 Amp-Hour Alkaline “lantern” style Battery. Energizer & Duracell brands are recommended.
Battery Life	6-9 months (maybe less in very cold temps)
Seed Type	Black Oil Sunflower is recommended. “Shelled” seeds are not recommended in warm or humid conditions.

INSTRUCTIONS

Step 1: Installing the Battery

Remove the two thumbscrews holding the bottom cover in place. Remove bottom cover and install a 6-Volt, 5 Amp-Hour Alkaline Battery. Sometimes this battery type is referred to as a “lantern” battery. (Energizer & Duracell brands are recommended).

Attach the Red Alligator Clip to the positive terminal (+) and the Black Alligator Clip to the negative (-) terminal. It is recommended that the battery be replaced when the %BATTERY reading is 25% or below. **CAUTION: Wear eye protection when changing batteries.**



Step 2: Configuring and Testing the Feeder

Your bird feeder will feed up to six times per day and has been factory set to feed at 7:00am and 6:00pm for six seconds. To change the factory settings or add additional feed times, follow the instructions below. The Battery Level is displayed every seven seconds. It is recommended that the battery be replaced when the %BATTERY reading is 25% or below.

SET TIME OF DAY: Press the UP or DOWN button until the correct time of day appears. Press and release button to single-step through the minutes or hold down to advance quickly. The feeder will not run while buttons are being pressed and waits 10 seconds from the last button press before it is activated. The feeder is activated when the display alternates between the CURRENT TIME and %BATTERY.

SET FEED TIMES: Press the SET button until the correct Timer Number appears in the upper right hand corner as shown. Press the UP or DOWN button to set the Feed Time.

SET RUN DURATION: Press the SET button again to set the RUN-TIME SECONDS which can range from zero to twenty seconds. Adjust RUN-TIME SECONDS using the chart below. Set the RUN-TIME SECONDS to zero to disable the specific timer.

Runtime per Day (seconds)	1	2	3	4
Ounces Dispensed per Day	1.5	3	4.5	4
Feeder Capacity (in days)	149	75	50	37

TEST TIMER: To test the Timer, PRESS AND HOLD the SET button while the RUN-TIME SECONDS are displayed. Release the button and get away from the feeder when the message “TESTING GET AWAY” appears on the display. The display will countdown five seconds before activating the motor for the number of RUN-TIME SECONDS programmed. The test feature is useful for assessing the amount of feed to dispense.

