



SUMMIT
EST. 1981
TREESTANDS

Summit Treestands, LLC
715A Summit Dr.
Decatur, AL 35601
256-353-0634
www.summitstands.com

Setup Instructions

**RUN
-N-
GUN**
GROUND BLIND



! WARNING

Keep all flame and heat sources away from this blind fabric!

This blind is made with fabric which meets CPAI-84 Specifications. IT IS NOT FIRE PROOF! The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

DO NOT place a stove, camp fire or other flame source in or near your blind. DO NOT cook, light, light or refuel a stove or any other heat source inside your blind.

Do not operate any fuel burning device (lantern, heater, stove, etc) in this blind.

Combustion consumes oxygen and can produce dangerous levels of carbon monoxide which could lead to serious injury or death.

Always maintain adequate ventilation inside your blind at all times!

When positioning this blind, always carefully consider the possibility of falling rocks or tree limbs, lightning strikes, flash floods, avalanches, strong winds and other objective hazards.

Always use the included anchors to secure the blind to the ground.

Never occupy the blind with all window flaps closed.

Make sure all bystanders are clear when opening or closing the blind.

Before use, always secure the inside hub by placing the Velcro strips around the base of the hub.

Limited Warranty

(A) Warranty

Summit Treestands, LLC (Summit) warrants to the original retail purchaser that all products manufactured by it are free from defects in material and manufacture at the time of shipment for twelve (12) months from the date of purchase. Summit will repair or replace any part found defective if the unit claimed to be defective shall be returned to Summit, postage prepaid, within the warranty period.

This warranty shall not apply to any product which has been subjected to misuse; misapplication; neglect (including but not limited to improper maintenance); accident; improper installation; modification (including but not limited to use of unauthorized parts or attachments); adjustment or repair. THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED (INCLUDING THOSE OF MERCHANTABILITY AND FITNESS OF ANY PRODUCT FOR A PARTICULAR PURPOSE), AND OF ANY OTHER OBLIGATION OF LIABILITY ON THE PART OF THE COMPANY.

(B) Limitation of Liability

It is expressly understood that Summit's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product, as stated above, and Summit will not be liable for any other injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material, arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Summit's products.

Summit reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.

▪ Blind Setup

Step 1. Remove blind from carrying bag.

Step 2. Pick the blind up by the top hub and extend the legs as shown in *Figure 1*.

Step 3. Lay the blind flat on the ground. Extend the two accessible legs and “lock” them into position. Do this by pulling out on the center of the leg as shown in *Figure 2*.








Step 4. Flip the blind over and lock the remaining two legs.

Step 5. Sit in front of the closed end of the blind and place both feet on the top of the center hub. Make sure your feet are on either side of the hub grommet with the center hole open. *See Figure 3*.

Step 6. Once your feet are secure, grab the pull rope and pull back. At the same time, extend your legs and rock back to pick the blind up off the ground. *See Figure 4 and 5*.

Step 7. Pull the rope until the center hub shaft pops through the hole and locks as shown in *Figure 6*.

Step 8. Stand the blind upright. On the inside of the blind fasten the safety strap around the hub as shown in *Figure 7 and 8*.

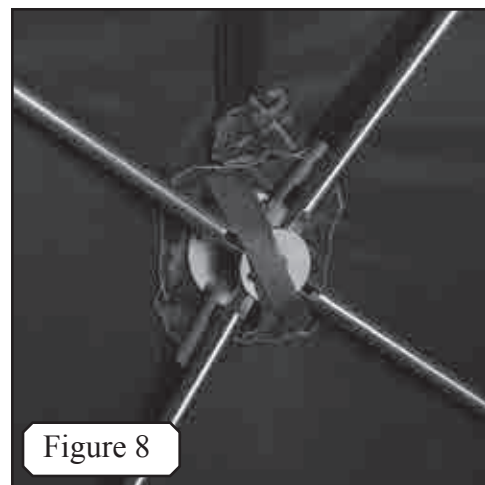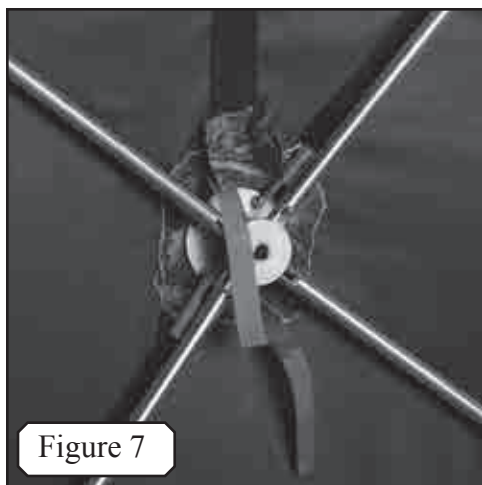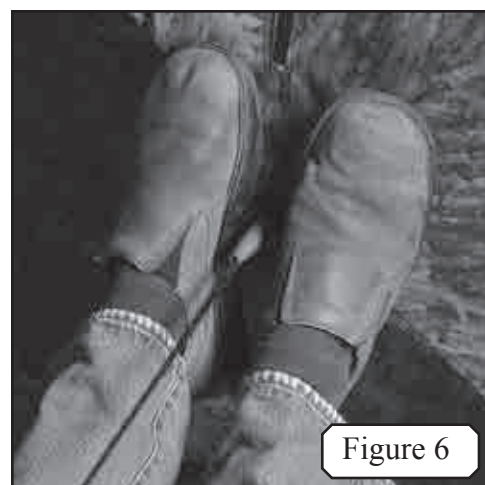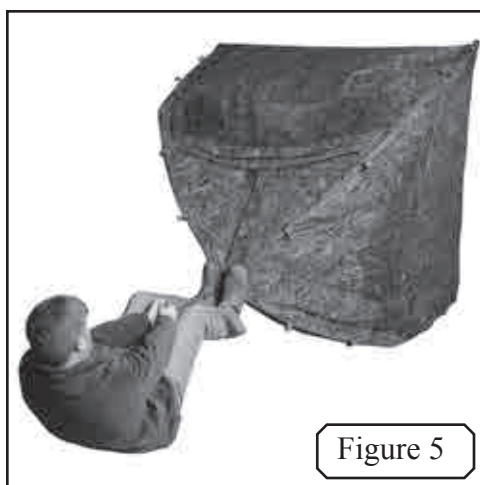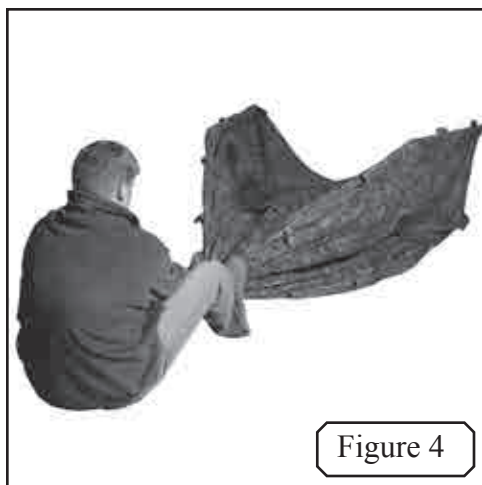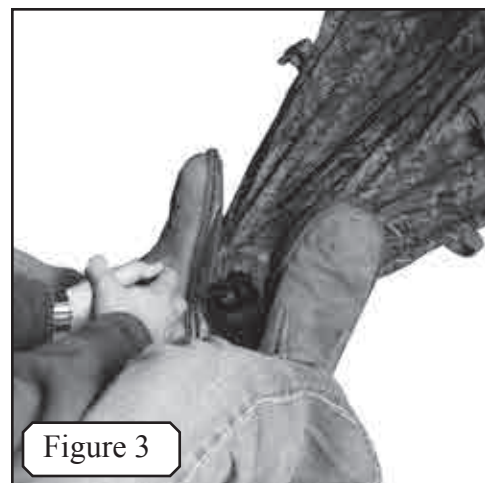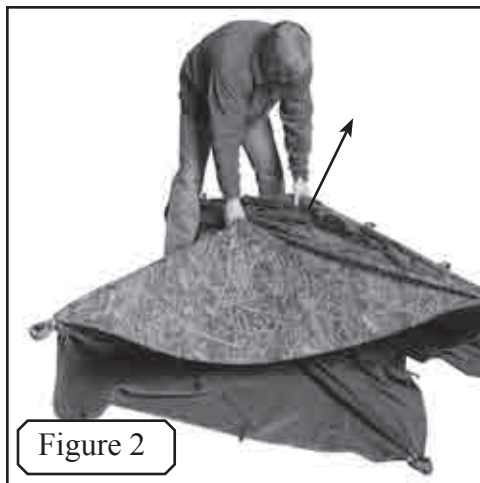

▪ Blind Take Down

Step 1. Remove the safety strap from the bottom of the blind hub.

Step 2. Roll the blind over onto any side.

Step 3. Turn away from the blind and position the center hub behind you.

Step 4. While holding the blind with both hands, strike the hub shaft with the bottom of your boot as shown in *Figure 9*. This will cause the blind to collapse.

Step 5. Fold the legs up by bending them in at the middle to return the blind to storage OR proceed to the next section to pack the blind for quick carrying.





▪ Run-N-Gun Setup (Quick Carry)

Step 1. Follow **Steps 1 - 4** from the Blind Take Down section above.

Step 2. Take the Run & Gun strap - *Figure 10* - with the buckle and loop it around the top section of the blind about 2 ft. down (*See Figure 11*).

Step 3. Take the other strap and loop it around the blind below the hinges on the legs. Thread the second strap through the buckle of the first strap. This will make a carrying strap for the blind as shown in *Figure 12*.

Step 4. Adjust the strap for carrying on your shoulder as shown in *Figure 13*.

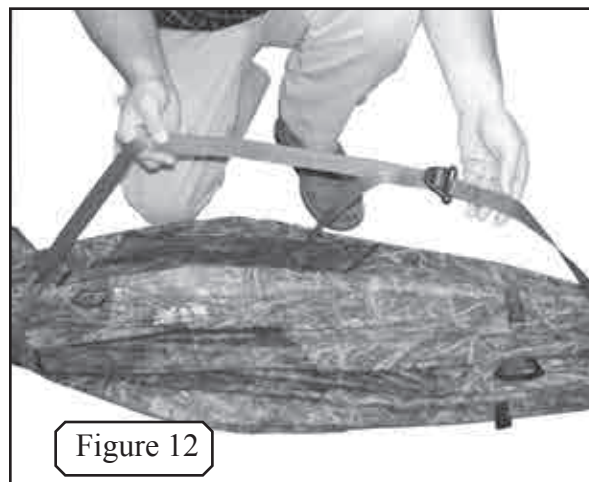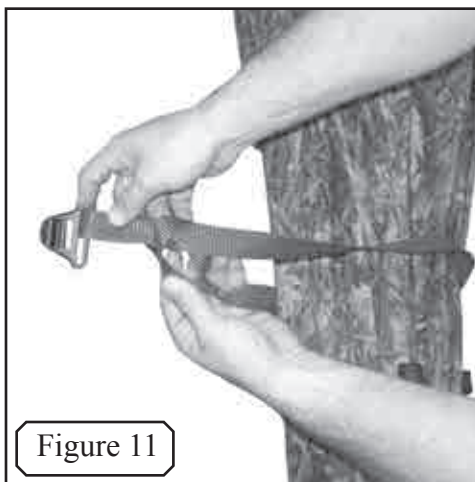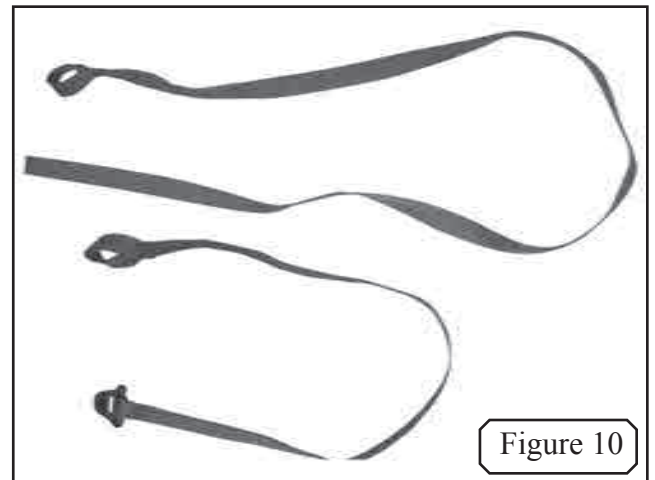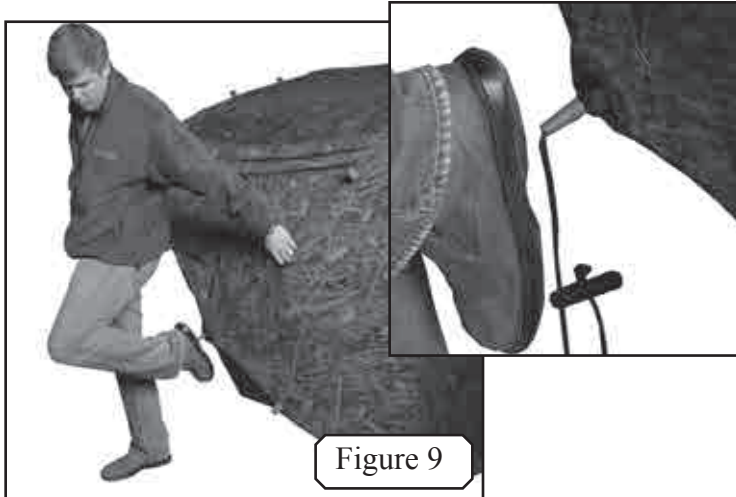

▪ Alternate Setup / Single Man Blind

Step 1. Follow **Steps 1 - 8** from the Blind Setup Section of these instructions.

Step 2. Roll the blind over onto the door side.

NOTE: The side with the zippered door must be facing the ground as shown in *Figure 14*.

Step 3. From inside the blind, loosen the Velcro from around the lug but do not remove the fabric from the lug. See *Figure 15*. Repeat for the other side.





Step 4. Un-Velcro the leg pole from the capture pocket on both sides of the blind as shown in *Figure 16* and remove the leg as shown in *Figure 17*.



Repeat for other side. **NOTE: You MUST remove the legs from the two capture pockets BEFORE attempting to fold the legs over. Failure to do this may result in damage to the blind.**

Step 5. Once the leg has been removed from the Velcro Pocket, slide the skin down the leg until it is at the center joint. Once past the joint, fold the end of the leg over. *See Figure 18.*

Step 6. Your finished blind should look like *Figure 19.*

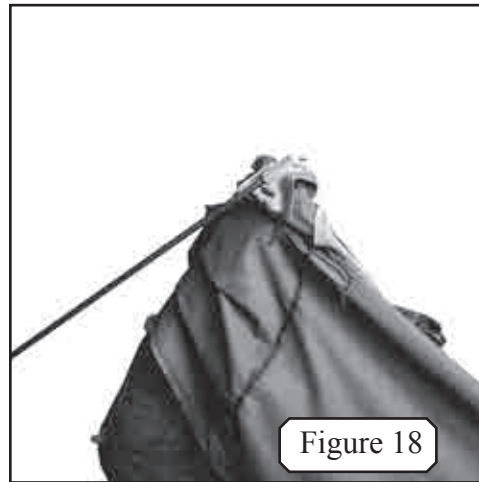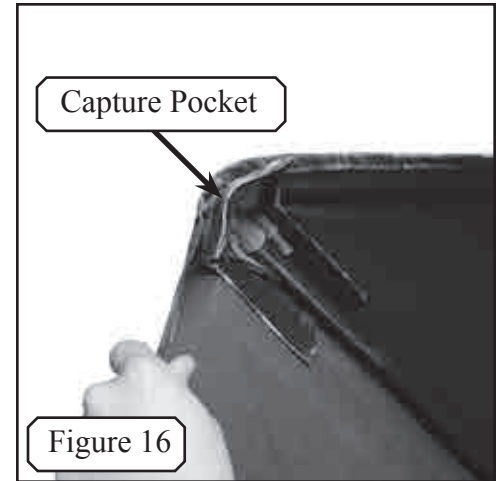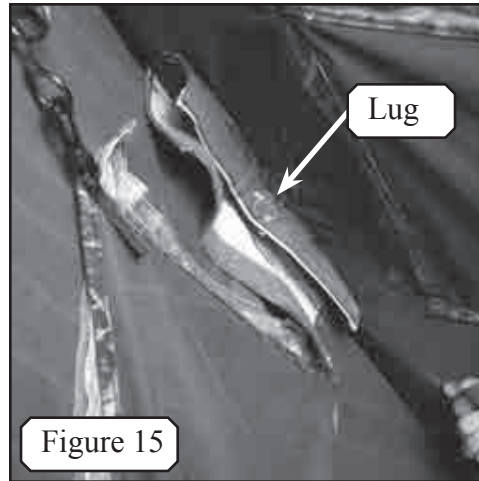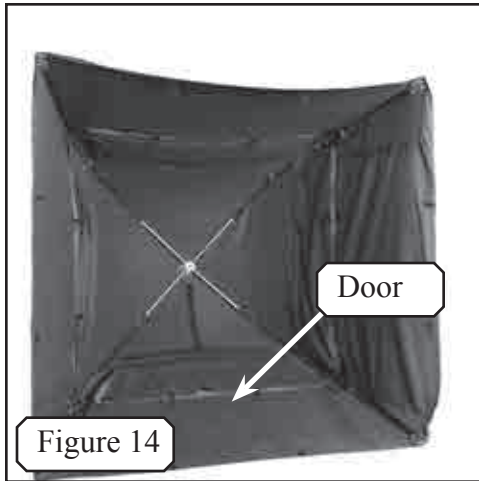

▪ Alternate Setup Take Down

Step 1. Flip the blind back onto the door side.

Step 2. Straighten and lock both legs that were folded back in **Step 5 of the Alternate Setup section.**

Step 3. Unfasten the lug from the fabric as shown in *Figure 20.* Pull the loose fabric back over the legs but do not attempt to pull it over the ends of the legs.

Step 4. Flip the blind over onto the side that you are currently working on (180 degrees). The door side should be facing up.

Step 5. Pull the fabric over the leg and fully seat the leg into the capture pocket as shown in *Figure 21.* **NOTE: The leg MUST BE fully captured by the pocket.**

Step 6. Secure the Velcro strap over the leg as shown in *Figure 22.*

Step 7. Insert the lug back into the fabric, fasten Velcro around lug joint. Repeat for other side.

