



OpenShot

Instruction Booklet - 2007

You **MUST** also view the enclosed DVD **BEFORE** using your new treestand!!
Weight Limit 300 lbs. Total. **DO NOT EXCEED THIS LIMIT!**
Tree size 8" to 20"

READ ME FIRST!!!

Please read carefully **BEFORE** using your new Summit Climbing Treestand.

Congratulations! You have purchased the finest commercially available treestand on the market today. Summit Climbing Treestands are designed and built to provide years of trouble-free, successful hunting with a minimum of maintenance and care. They are certified to meet the requirements of the Treestand Manufacturers Association (TMA) Standards. This booklet is provided to you to outline the recommended use, care and maintenance of your Summit Climbing Treestand.

Warnings and Precautions

- **IT IS IMPORTANT TO NOTE THAT A TREESTAND FALL CAN OCCUR AT ANY TIME AFTER LEAVING THE GROUND!**
- **YOU MUST FULLY READ, UNDERSTAND AND FOLLOW THESE INSTRUCTIONS! PLEASE CONTACT SUMMIT TREESTANDS IF YOU HAVE ANY QUESTIONS ON THE USE OF THIS PRODUCT! FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE SERIOUS INJURY OR DEATH!!**
- **BEFORE USING ANY TREESTAND, BE SURE YOU MAINTAIN FULL BODY SAFETY HARNESS ATTACHMENT TO THE TREE AT ALL TIMES AFTER LEAVING THE GROUND!!! YOU MUST STAY CONNECTED TO YOUR FALL ARREST SYSTEM AT ALL TIMES AFTER LEAVING THE GROUND!**
- **DO NOT USE THIS OR ANY OTHER TREESTAND IF YOU HAVE BEEN USING DRUGS (EVEN PRESCRIPTION) OR ALCOHOL OR ARE PHYSICALLY IMPAIRED IN ANY WAY! NEVER USE A TREESTAND WHEN FEELING ILL, NAUSEOUS OR DIZZY!**
- **FOR YOUR SAFETY, DO NOT USE ANY TREESTAND DURING RAIN, LIGHTNING, WINDSTORMS, WHEN TREES ARE WET OR ICY, OR ON TREES THAT ARE LEANING, TREES THAT APPEAR DEAD OR DISEASED, ON LOOSE BARKED TREES OR ON UTILITY POLES!!! NEVER RELY ON A TREE BRANCH FOR SUPPORT!**
- **DO NOT USE ANY TREESTAND IF YOU HAVE NOT FOLLOWED THE MANUFACTURERS CARE AND MAINTENANCE GUIDELINES! NEVER MODIFY YOUR STAND BY MAKING REPAIRS, REPLACING PARTS, ALTERING PARTS OR ATTACHING ANYTHING TO IT UNLESS EXPLICITLY AUTHORIZED BY SUMMIT TREESTANDS!**
- **ALWAYS INSPECT THE STAND / CABLE SYSTEM OR HANGING STRAPS AND ANY SAFETY GEAR BEFORE EACH USE! IF ANY PROBLEMS ARE FOUND - DO NOT USE THE STAND! CONTACT CUSTOMER SERVICE FOR THE APPROPRIATE REPAIR / REPLACEMENT PROCEDURE!**
- **NEVER ALLOW THE SAFETY HARNESS TETHER TO GET UNDER OR AROUND YOUR NECK!**
- **IT IS IMPORTANT THAT YOU REMEMBER TO BE PREPARED IF YOU HAPPEN TO FALL AND EMPLOY YOUR SAFETY HARNESS WHILE IN A TREESTAND. STAY CALM AND DO NOT PANIC. YOU MUST BE PREPARED TO RECOVER FROM YOUR FALL BY EITHER CLIMBING BACK ONTO YOUR TREESTAND OR USING A DEVICE SUCH AS THE "TREE DESCENDER" (AVAILABLE FROM SUMMIT, WWW.SUMMITSTANDS.COM, 256-353-0634). PRIOR TO HUNTING: YOU MUST NOTIFY SOMEONE OF YOUR HUNTING LOCATION AND WHEN YOU WILL RETURN!**
- **DO NOT USE ANY TREESTAND UNLESS YOU ARE IN GOOD PHYSICAL SHAPE. THE ABILITY TO DO SEVERAL PUSH-UPS, CHIN-UPS, SIT-UPS, ETC. IS REQUIRED FOR YOUR SAFETY!**
- **ALWAYS USE A HAUL LINE TO RAISE AND LOWER UNLOADED FIREARMS AND BOWS! FIREARMS MUST BE PULLED UP UNLOADED, CHAMBER OPEN AND MUZZLE DOWN!**
- **NEVER CLIMB WITH ANYTHING IN YOUR HANDS OR ON YOUR BACK - USE A HAUL LINE!**
- **PRACTICE USING YOUR TREESTAND AND SAFETY HARNESS AT A LOW LEVEL (5 FEET) UNTIL YOU MASTER ITS USE!**
- **BE WELL RESTED AND NEVER GET IN A HURRY. HURRYING CAUSES ACCIDENTS!!**
- **INSTRUCTIONS (WRITTEN AND VIDEO) SHOULD BE REVIEWED AT LEAST ANNUALLY. IF YOU LOAN OR SELL THIS TREESTAND, IT IS YOUR RESPONSIBILITY TO FURNISH THE BUYER A COPY OF THESE INSTRUCTIONS AND THE VIDEO THAT CAME WITH THE TREESTAND. MAKE SURE THEY WATCH THE VIDEO AND READ / UNDERSTAND THE INSTRUCTIONS!**

Warning

Before each use of your Summit Treestand, **ALWAYS** inspect the treestand for any structural damage, cracks, cable wear or abrasion that may have occurred in transporting your treestand. **DO NOT USE IF ANY DAMAGE IS FOUND! DO NOT** leave your treestand outdoors when it is not being used. **Any tubing that is allowed to fill with rainwater and freeze WILL rupture or burst. DO NOT use your treestand if this happens.**

Section 1. Assembling Your New Treestand.

Please contact us at www.summitstands.com or 256-353-0634 to obtain any missing parts or if your DVD does not work.

Backpack Straps. The backpack straps consist of three parts - two 1" wide straps each with sewn in loop and a 2" wide strap with buckles and a loop sewn in. Place the looped end on the 2" wide strap around the middle of the second platform rung from the front of the stand as shown in **Figure 1**. Push all of the remaining 2" strap through the loop as shown in **Figure 2**. Place the looped end of the 1" wide strap around the stand tubing (A) and bring the loose end back through the loop as shown in **Figure 3**. Repeat for other side. Thread the loose end of each 1" strap through the buckle on the 2" strap as shown in **Figure 4**. The completed assembly should look like **Figure 5**.

RapidClimb Stirrups. The two (2) RapidClimb stirrups fit on the curved upright arms of the platform. Simply slide one stirrup on each side of the platform so that they are on the inside of the platform and facing down as shown in **Figure 6**. Once positioned, secure with the bolt and wing nut provided as show in **Figure 7**. Occasional readjustment may be required as your footwear needs change. Wrap the supplied bungee cord around one side of the curved platform upright bars and push the S-hook through the loop as shown in **Figure 8**. Hook the S-hook around the opposite curved platform upright bar and back onto itself as shown in **Figure 9**. The stirrups may have to be adjusted for the stand to fold flat.

Section 2. Use of the Openshot Climbing Treestand (NOTE: Footrests Shown are NOT INCLUDED and may be purchased separately at www.summitstands.com).

Part 1. Attachment To The Tree.

Step 1. Attach the base platform to the tree first. To do this, pull down and hold the QuickDraw cable spring as shown in **Figure 10**. This will release the locking tab from the cable, allowing you to remove it from the cable bracket.

Step 2. Take one end of the cable around the tree and begin to slide it down into the tubing as shown in **Figure 11**.

Once the cable is slides easily into the tubing (it helps to bend the cable upward while pushing down on it), you are ready to place it in its final position.

Step 3. Pull the cable towards the back of the tree and "seat" one of the cable stops against the back of the bracket, as shown in **Figure 12**. The QuickDraw cable spring will "lock" into place behind one of the cable stops.

Step 4. Your cable bracket should now look like **Figure 13**.

WARNING: If the QuickDraw cable spring does not lock into place behind the cable stop, **DO NOT USE THE TREESTAND!** Contact Summit to obtain the proper corrective action.

Step 5. If necessary, go to the other side of the tree and position the other end of the cable by repeating the steps of pulling the QuickDraw cable spring, sliding the cable into the tubing, and assuring that the QuickDraw cable spring has locked into position.

NOTE: The sole purpose of the plastic coating on the cable is to eliminate noise. After some use you may notice some abrasions, peeling or possibly cuts in the coating. This coating does not affect the performance or safety of your treestand. It is there to eliminate unnecessary noise when sliding the cable down into the tubing.

WARNING: DO NOT USE THE CABLE IF IT HAS BROKEN OR DAMAGED METAL STRANDS! Call immediately to order a replacement if this should occur.

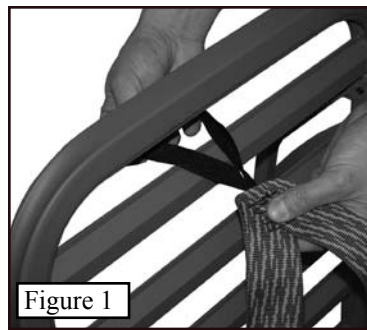


Figure 1

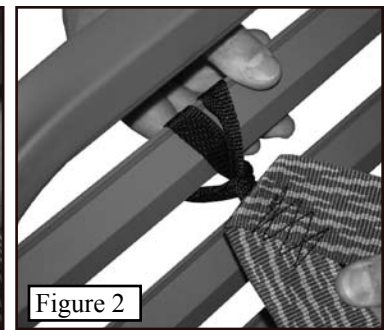


Figure 2

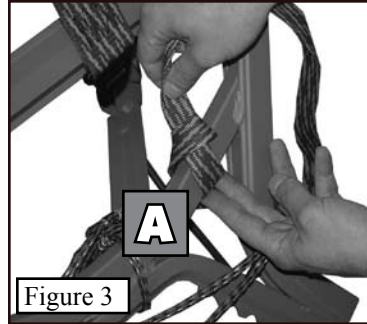


Figure 3

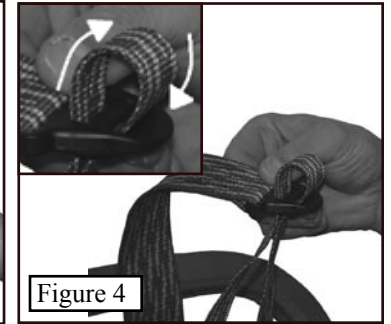


Figure 4

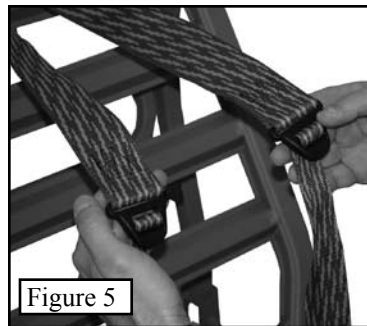


Figure 5

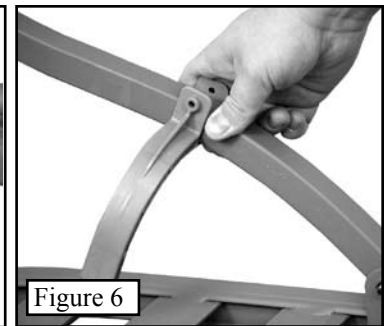


Figure 6

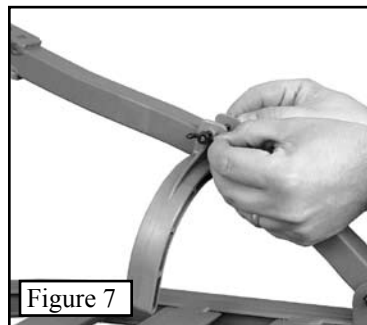


Figure 7

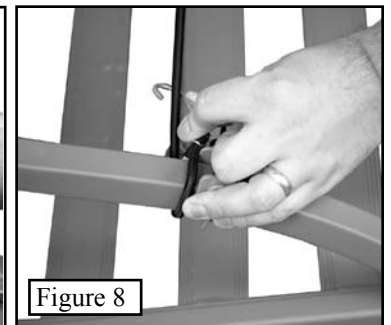


Figure 8

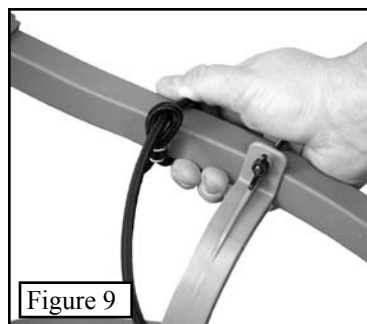


Figure 9

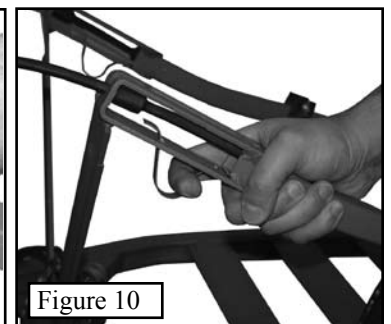


Figure 10

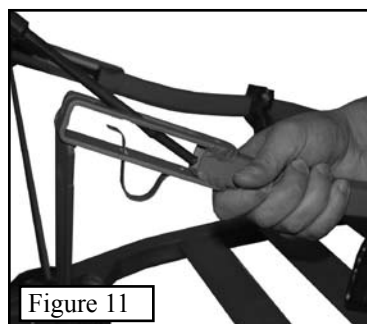


Figure 11

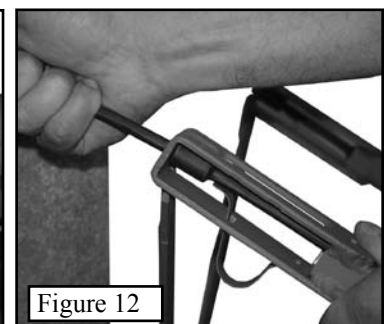


Figure 12

To ensure that your treestand is level at the height at which you will be hunting, observe the relative change in the tree diameter between the base of the tree and the final treestand height. It is very important to adjust the treestand base platform and seat at the base of the tree such that the treestand base platform will be level at the height you hunt. Trees commonly found in swamp or marsh areas have a tendency to swell at their base, and these may require a greater starting angle in order for your treestand to be level - as compared to a normally tapered tree.

WARNING: Usually, the front edge of the treestand (the edge away from the tree) should be 4-6 inches higher than the edge against the tree (See **Figure 14**). The treestand seat climber attaches above the standing platform and should also have the same basic angle as the platform before you start to climb. **WARNING:** The standing platform and climber **MUST BE** attached to each other with the tether rope supplied, as shown in **Figure 15**. Wrap the rope around **TWICE** before tying it off.

Part 2. Climbing With Your New Stand.

Step 1. Now that your platform and seat section are attached to the tree, you are ready to climb. **WARNING:** It is **MANDATORY** that you use a safety harness as you climb. Be sure to read the safety harness instructions for proper use of your safety harness. Simply attach the safety line to the tree above the seat climber and secure it to the harness for climbing as shown in **Figure 16**.

Step 2. Your RapidClimb stirrups and bungee heel cords should be already attached to your treestand. To climb, back your heel into the bungee heel cord (**Figure 17**) then simply slide your boot under the RapidClimb stirrup. Make sure that your boot is secure under the stirrup as shown in **Figure 18**. **WARNING:** At this point **IT IS REQUIRED THAT YOU** attach your safety harness to the safety line around the tree.

Step 3. To begin climbing, raise your seat climber up to about waist height and grasp the upright arms very firmly as shown in **Figure 19**.

Step 4. Rest your weight with your arms on the two upright arms and disengage the platform by lifting and rotating the edge against the tree down. Raise the platform. See **Figure 20**.

Step 5. To re-engage the platform, rotate the edge against the tree upwards as shown in **Figure 21**. **WARNING: DO NOT JUMP OR BOUNCE ON THE PLATFORM OR SEAT** to attempt to cause it to “dig” into the tree. It is not necessary and may cause you to inadvertently disengage the platform or seat.

Step 6. Now ease your weight back onto the platform (to ensure that you have not placed it on an unseen knot or limb on the backside of the tree), then slide your safety harness rope up the tree. **Repeat steps 3-6** until you are at your desired hunting height.

WARNING: DO NOT TIP YOUR WEIGHT ONTO YOUR TOES unless you are ready to move the platform. This will tend to disengage the platform from the tree. The RapidClimb stirrups are located in such a position that equal distribution of weight will secure the platform to the tree while climbing.

WARNING: DO NOT USE the Openshot without an Openshot seat climber. The climber provided with this stand is designed to aid you in the correct operation of the treestand while climbing by keeping your weight away from the tree. The seat climber is also built so that it fits securely with the platform for carrying.

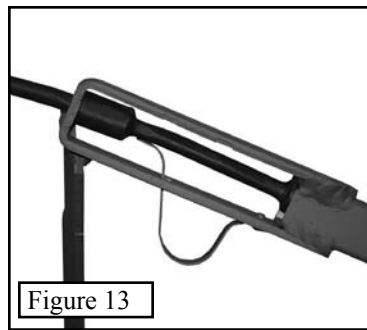


Figure 13

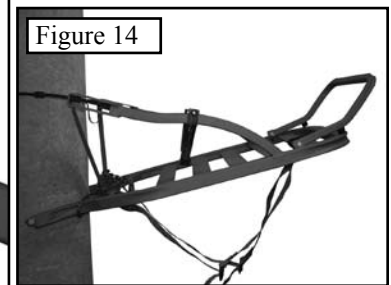


Figure 14

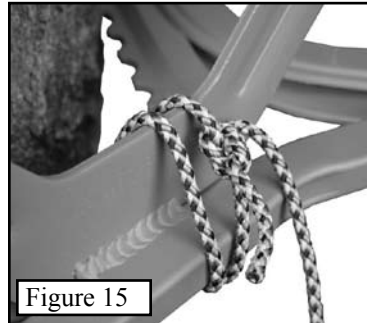


Figure 15

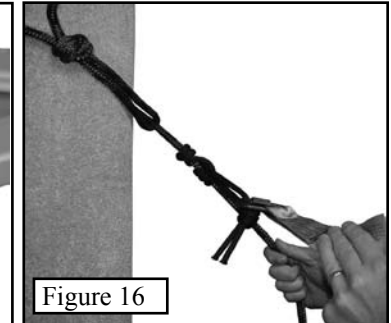


Figure 16

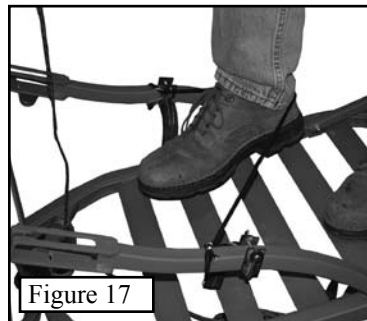


Figure 17



Figure 18



Figure 19



Figure 20



Figure 21

Part 3. Using Your New Stand.

WARNING: NEVER DISCONNECT FROM YOUR SAFETY LINE ONCE YOU ARE IN THE TREE!!

Step 1. When you get to your hunting height (do not climb higher than 15 feet; it is unnecessary) and have assured that your treestand is level, position your seat climber slightly below waist level. Slightly lower will be more comfortable but higher makes for less movement when you stand.

Step 2. Wrap the supplied green tourniquet buckle strap (1" strap with spring loaded buckle) around the tree and through the seat frame as shown in **Figure 22**. Securely tighten the strap to prevent the notched teeth area from losing contact with the tree.

Step 3. With your safety harness attached to the tree above the climber, simply pull your feet, one at a time, from their secured position under the RapidClimb stirrups.

Step 4. Position your safety harness to minimize the amount of slack in the safety line and tether strap then carefully sit down. The seat height can be easily raised or lowered by adjusting the height of the climber on the tree.

Part 4. Climbing Down With Your New Stand.

Step 1. Reattach your treestand platform to you feet - **KEEP YOUR HARNESS SECURELY ATTACHED TO THE TREE** until reaching the ground. **Follow the steps in Part 2, Step 2.**

Step 2. Disconnect and store the strap that has held the seat frame to the tree (shown in **Figure 22**).

Step 3. Place the seat climber at above waist level and grasp the upright arms as you did in climbing (see **Figure 23**).

Step 4. While firmly grasping the seat climber upright arms, disengage the platform by lifting up and tipping the edge closest to the tree downward. Once the platform has been dislodged, you can lower it down. Make slow even movements of 10-12 inches at a time.

Step 5. To re-engage, rotate the top edge of the treestand closest to the tree upwards. Now carefully place your weight back on the treestand. **WARNING: DO NOT JUMP OR BOUNCE ON THE PLATFORM OR SEAT** to attempt to cause it to "dig" into the tree. It is not necessary and may cause you to inadvertently disengage the platform or seat.

Step 6. Slide your safety harness rope down to about chest height and **repeat steps 3-6** until you have reached the bottom of the tree. **NEVER disconnect your harness until reaching the ground.**

Part 5. Backpacking / Carrying Your New Treestand.

Your treestand is designed to "nest" together as one unit making it easy to transport.

Step 1. Stand the platform on its end as shown in **Figure 24**.

Step 2. Take the seat climber and position it between the arms on the platform as shown in **Figure 25**.

Step 3. Secure the seat climber to the platform with the supplied green strap with tourniquet buckle. See **Figure 26**.

Step 4. Use the backpack straps to carry the unit at shown in **Figure 27**.

Section 3. Maintenance and Care of Your Treestand.

Because of the quality construction techniques used in manufacturing, your Summit Treestand is very durable under normal hunting conditions. However, since all hunting equipment that is exposed to the elements requires some maintenance and care, the following guidelines for caring for your treestand should be used. **WARNING: DO NOT** leave your treestand outdoors when it is not being used. **Any tubing that is allowed to fill with rainwater and freeze WILL rupture or burst. DO NOT use your treestand if this happens.** If your treestand is exposed to the elements, it will be necessary to cover the seat to prevent rain and moisture from saturating the material.

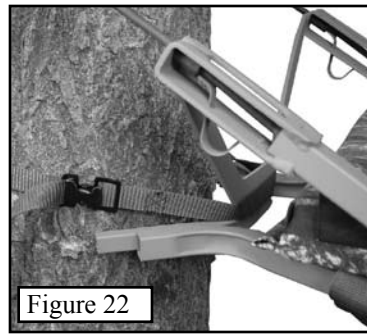


Figure 22

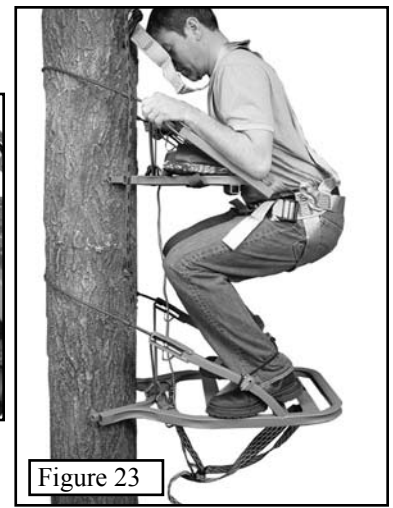


Figure 23



Figure 24



Figure 25

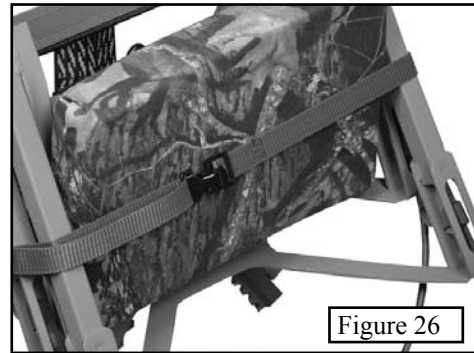


Figure 26



Figure 27



**Visit us on the web at
www.summitstands.com
for accessories and
upgrades!**

This will extend the life of the seat material as well as make it more comfortable the next time it is used.

The powder coat finish that is applied at the factory is very durable and should need touch ups only in areas of heavy wear or accidental impact.

Should you damage any part of your Summit Treestand, contact your nearest authorized Summit dealer or the factory to obtain the proper corrective action procedure and/or replacement parts for the treestand. Unauthorized repairs, modifications, or alterations will void the warranty and could degrade the integrity of the treestand. You must perform periodic inspections of the treestand for damage. **WARNING: DO NOT** use the treestand if **ANY** obvious or suspected damage is observed. It is **VERY IMPORTANT** to inspect the cable on your climbing treestand to ensure that there is no sign of frayed, damaged or broken strands. If **ANY** such damage is noticed, you must replace your cable **IMMEDIATELY**. Replacement covering for the cables is also available. **NOTE:** The plastic covering on the cables serves **ONLY** as a noise reducer. Over time your cable cover will begin to wear. This is normal.

WARNING: Look for nicks, gouges, cuts, cracks, bends, corrosion or similar damage that can be the result of improper use or accidental damage. For instance, this could occur if someone else used the treestand without knowledge of its proper use, or if the treestand were dropped, hit by a motor vehicle or subject to corrosive conditions, etc. Summit Treestands have the highest structural integrity by design, material selection and manufacturing techniques, but as its owner, only your continued care will assure trouble free performance. When the above-mentioned guidelines are followed, your Summit Treestand will provide years of successful hunting.

Section 4. Adjustments

The only adjustments that may be required on your Summit Treestand would be the RapidClimb Stirrups, backpack straps or seat height. The RapidClimb Stirrups should be adjusted before you go hunting. Put your hunting boots on and step into the stirrups with the treestand platform on a flat surface. Loosen the wing nut and slide the stirrups until they securely fit your boots, then re-tighten the wing nuts.

To loosen the backpack straps, simply pull up on the thumb tabs. To tighten them, pull down on the loose tag ends of the straps. This can be done before or after the treestand is on your back.

Since the seat is fixed in the frame, seat height may be adjusted by raising or lowering the seat climber's position on the tree. Be sure to always reconnect the green tourniquet buckle strap once you have set the seat at a desired height.

Good Hunting and Hunt Safe!

HUNT TOMORROW...

...USE YOUR SAFETY HARNESS TODAY!

©(STLLC 2007)

Summit products are manufactured under one or more of the following US Patents: 5,937,969; 5,971,104; 5,975,242; 5,979,603; 6,125,966; 6,182,792; 6,397,973; D,417,011; D,420,147

Summit Bucksteps and RapidClimb Stirrups are Patent Pending

Harness Suspension

It is necessary and very important that someone knows your hunting location and time of return. It is also very important that you carry (on your person) emergency communication devices such as a cell phone, two-way radio, whistle, signal flare or preferably a PLD (Personal Locator Device - FCC approved July, '03). When triggered, a PLD will transmit an emergency signal to local rescue teams identifying your location via satellite GPS coordinates. Wilderness outfitters and the internet are sources for these PLD's.

Suspension trauma or blood pooling can occur when suspended motionless in a harness for periods of time. This can lead to unconsciousness. **WARNING: IF YOU HAVE TO HANG IN THE TREE BEFORE HELP ARRIVES, YOU NEED TO EXERCISE YOUR LEGS BY PUSHING OFF FROM THE TREE OR BY USING THE ENCLOSED SUSPENSION RELIEF STRAP. SEE THE TREESTAND HARNESS INSTRUCTIONS AND THE ENCLOSED INSTRUCTIONS FOR MORE INFORMATION.**

Self extraction may be necessary in the unfortunate situation that A) No one knows your location, B) Your communication efforts are exhausted, and C) You're confident that you have the strength, dexterity and ability to perform self-extraction and D) You decide this is your "absolute last resort". It is necessary to carry a device to assist with this self-extraction. Simple devices such as screw-in steps or a rope "Tree Descender" (available from Summit) will allow you to remove the weight from your harness. This may enable you to return to the treestand/ladder/climbing steps or slowly descend the tree.

Tips

You will easily learn how to use your Summit treestand more efficiently and make it more effective for your hunting.

With proper practice you can learn to level your platform without climbing down to re-position the cable. Pulling the cable against the backside of the tree while you're supporting the platform with your legs can do this. While the cable is against the tree, position the platform level and engage the front edge against the tree. This puts a slight bend in the cable while keeping the platform level. Only minor level adjustment, however, can be made using this technique. (The DVD shows this technique).

Sometimes on a cold, dry, hard bark tree a rubbing noise can be produced at the scalloped edge that engages the tree. This comes from friction forces. It can be eliminated a couple of ways. First, simply re-positioning your platform slightly will in most cases eliminate the noise. Second, a liquid or candle/bowstring wax can be applied at the intersection of the tree and the scalloped edge to reduce the friction. Also, using a file to remove the finish and slightly upset (roughen) the smooth metal surface contact points on the scallops can eliminate the noise.

Changing your sitting position can relieve muscle stress and reduce fatigue. This will allow a longer hunt and perhaps an opportunity for a shot. Although it must be done slowly and quietly, repositioning and changing the height of your seat by raising or lowering the seat frame just a couple of inches could make a difference. This changes the hip to knee angle. Moving the seat straps, again slowly and quietly, forward or backward on their support bar will alter the sitting position also. Being comfortable will result in no movement and reduce being detected by game either from sight or from sound.

Limited Warranty**(A) Warranty**

Summit Treestands, LLC (Summit) warrants to the original retail purchaser that all products manufactured by it are free from defects in material and manufacture at the time of shipment for sixty (60) months from the date of purchase. Summit will repair or replace any part found defective if the unit claimed to be defective shall be returned to Summit, postage prepaid, within the warranty period.

This warranty shall not apply to any product which has been subjected to misuse; misapplication; neglect (including but not limited to improper maintenance); accident; improper installation; modification (including but not limited to use of unauthorized parts or attachments); adjustment or repair. THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED (INCLUDING THOSE OF MERCHANTABILITY AND FITNESS OF ANY PRODUCT FOR A PARTICULAR PURPOSE), AND OF ANY OTHER OBLIGATION OF LIABILITY ON THE PART OF THE COMPANY.

(B) Limitation of Liability

It is expressly understood that Summit's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product, as stated above, and Summit will not be liable for any other injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material, arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Summit's products.

Summit reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.

Please fill out the warranty card and return to:

SUMMIT Treestands, LLC.
715 Summit Dr.
Decatur, AL 35601

BOX CONTENTS OPENSLOT

PN	DESCRIPTION	QTY
81064	OpenShot Platform	1
81058	OpenShot Seat Climber	1
85070	OpenShot Foam Seat	1
30700	Climbing Cable	2
71048	Accessory Packet	1

71048 ACCESSORY PACKET CONTENTS

PN	DESCRIPTION	QTY
83032	Summit 4 Point Safety Harness	1
83023	Safety Line with Prussic Hitch	1
10512	Locking Clip for Safety Line / Harness	1
10953	Suspension Relief Strap with Instructions	1
85005	Backpack straps (3 Pieces)	1
30536	Umbilical Rope	1
30285	Tourniquet Strap with Buckle (green)	1
10534	Stirrup	2
30341	Stirrup Bungee with hook	1
	2007 DVD	1


Written Treestand Instructions

Written Instructions for Summit Harness

21070 Stirrup Hardware Kit 1

21070 STIRRUP HARDWARE KIT CONTENTS

PN	DESCRIPTION	QTY
10621	1 3/4" Bolt (10-24)	2
10623	Wing Nut (10-24)	2

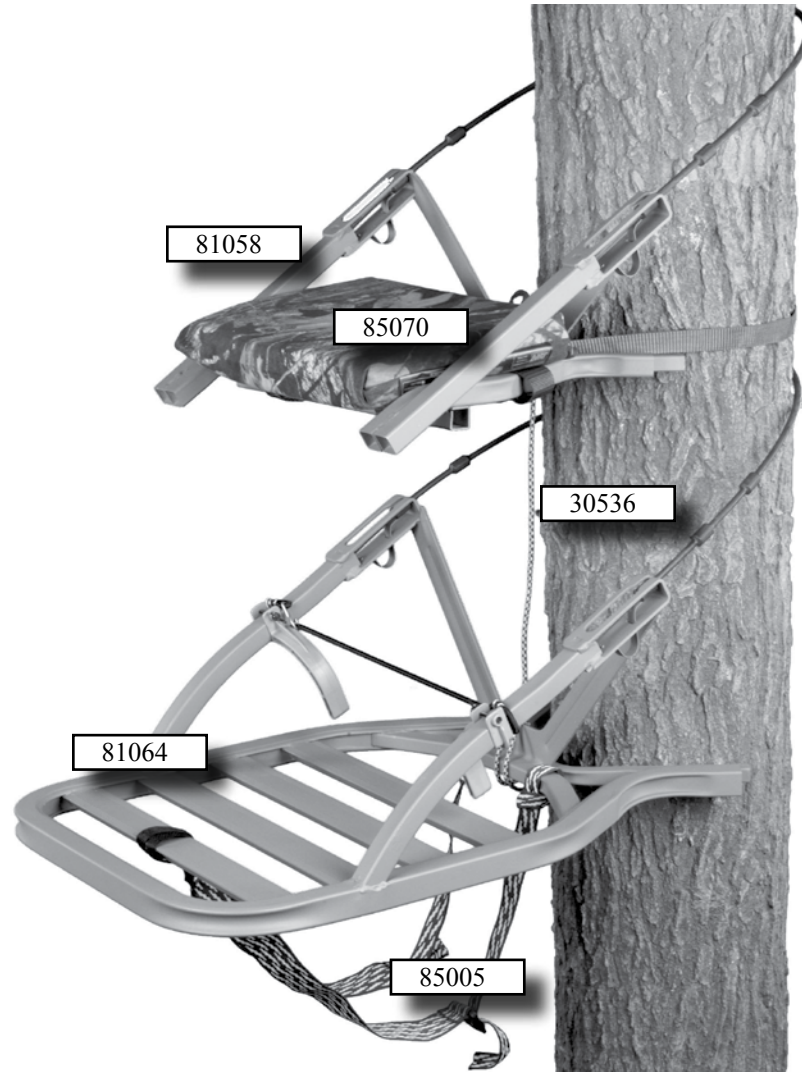

Cut Along Line

Warranty Card for OpenShot (PN 81048) Treestand

Owners Name: _____ Street Address: _____

City: _____ State: _____ ZIP: _____ Phone: (____) _____

Date Purchased: _____ Purchased From (Dealer Name): _____ Price \$: _____

Your heard about us through: Magazine Advertisement Video Friend Summit Catalog

Other Please Explain: _____

You can also register your warranty card on line at: www.summitstands.com/warranty.aspx