



Summit Shooter Xtreme

PN 85240

© 2013 Summit Treestands, LLC
715A Summit Dr. Decatur, AL 35601
(256) 353-0634
info@summitstands.com
www.summitstands.com



- READ AND UNDERSTAND ALL OF THE MANUFACTURER’S WARNINGS AND INSTRUCTIONS BEFORE USE. CONTACT SUMMIT TREESTANDS FOR ANY QUESTIONS. FAILURE TO DO SO COULD RESULT IN INJURY OR DEATH!
- KEEP HANDS AWAY FROM SCISSORING TUBING WHEN OPENING OR CLOSING THE SHOOTING BENCH.
- NEVER USE YOUR SHOOTING BENCH ON UNEVEN OR SLOPING TERRAIN.
- NEVER REST RIFLES AGAINST SHOOTING BENCH AS IT MAY ROTATE.
- NEVER SIT ON THE TOP OF THE SHOOTING BENCH.
- ALWAYS PRACTICE SAFE FIREARM HANDLING.



1 INDEX

<i>GENERAL WARNINGS AND PRECAUTIONS</i>	<i>PG 1</i>
<i>SECTION 1 - INDEX</i>	<i>PG 1</i>
<i>SECTION 2 - PARTS LIST</i>	<i>PG 1</i>
<i>SECTION 3 - ASSEMBLY</i>	<i>PG 2 - 3</i>
<i>SECTION 4 - SETUP AND USE</i>	<i>PG 4</i>
<i>SECTION 5 - LIMITED WARRANTY</i>	<i>PG 4</i>

2 PARTS LIST

BOX CONTENTS

<i>DESCRIPTION</i>	<i>QTY</i>
LEG ASSEMBLY WITH CENTER TUBE	1
SEAT ADJUSTMENT RING	1
LARGE NYLON BUSHING	2
SEAT ARM	1
MOLDED TOP WITH FRAME	1
PADDED SEAT	1
HAIR PIN CLIP	1

3 ASSEMBLY

1. Position the main leg assembly as shown in **figure 1**.
2. Remove one of the wire lock pins and fold the leg down. Reinsert the wire lock pin in the rear hole as shown in **figure 2**. Repeat for all legs.
3. Slide the seat adjustment ring onto the center post as shown in **figure 3**.
4. Slide one large nylon bushing (shown in blue) onto the center post as shown in **figure 4**. Slide the seat arm (shown in green) onto the center post and seat it on the nylon bushing.

⚠ CAUTION
Keep fingers and hands away from pinch points when folding legs



5. Slide the remaining large nylon bushing onto the center post as shown in **figure 5**.
6. Slide the completed molded top with frame onto the nylon bushing as shown in **figure 6**.




ASSEMBLY (continued)

7. Pivot the bench up and insert the threaded knob as shown in **figure 7**.

8. Insert the seat post into the hole on the seat arm and secure using the hair clip pin as shown in **figure 8**.

9. Screw the shooting rest into the threaded hole on the end of the bench. Use the wing nuts to tighten the rest once you have it at your desired height. (*see figure 9*)

CAUTION
Threaded knob must be inserted while using the shooting bench.

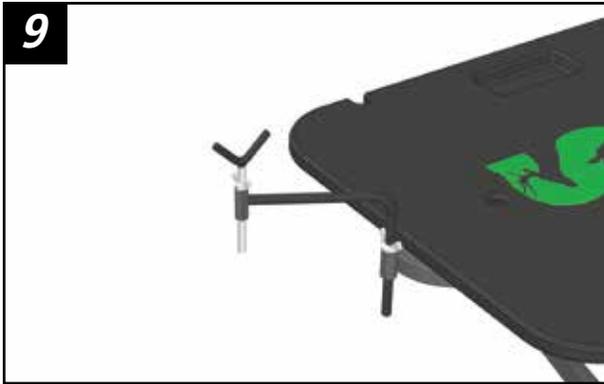

4 **SETUP AND USE**

1. Remove lock pins from figure 2 to collapse legs. Use caution when folding the legs up - keep hands and fingers away from pinch points.

5 **LIMITED WARRANTY**

(A) Warranty

Summit Treestands, LLC (Summit) warrants to the original retail purchaser that all products manufactured by it are free from defects in material and manufacture at the time of shipment for twelve (12) months from the date of purchase. Summit will replace any part found defective if the unit claimed to be defective shall be returned to Summit, postage prepaid, within the warranty period.

This warranty shall not apply to any product which has been subjected to misuse; misapplication; neglect (including but not limited to improper maintenance); accident; improper installation; modification (including but not limited to use of unauthorized parts or attachments); adjustment or repair. **THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED (INCLUDING THOSE OF MERCHANTABILITY AND FITNESS OF ANY PRODUCT FOR A PARTICULAR PURPOSE), AND OF ANY OTHER OBLIGATION OF LIABILITY ON THE PART OF THE COMPANY.**

(B) Limitation of Liability

It is expressly understood that Summit's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product, as stated above, and Summit will not be liable for any other injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material, arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Summit's products.

Summit reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.

Please take the time to fill out the warranty card online at <http://www.summitstands.com/warranty> or fill out and mail in the enclosed warranty card.



Banc de tir Xtreme Summit

PN 85240

© 2013 Summit Treestands, LLC
715A Summit Dr. Decatur, AL 35601
(256) 353-0634
info@summitstands.com
www.summitstands.com



- LISEZ ET COMPRENEZ TOUS LES AVERTISSEMENTS ET TOUTES LES INSTRUCTIONS DU MANUFACTURIER AVANT L'UTILISATION. CONTACTEZ SUMMIT TREESTANDS POUR TOUTES QUESTIONS, SINON VOUS POURRIEZ VOUS EXPOSER À DES BLESSURES OU LA MORT!
- GARDEZ VOS MAINS LOIN DES TUBES COUPANTS LORS DE L'OUVERTURE OU DE LA FERMETURE DU BANC DE TIR.
- N'UTILISEZ JAMAIS VOTRE BANC DE TIR SUR UN TERRAIN INÉGAL OU EN PENTE.
- NE VOUS ASSOYEZ JAMAIS SUR LE DESSUS DU BANC DE TIR.
- MANIPULEZ TOUJOURS VOTRE ARME À FEU DE FAÇON SÉCURITAIRE.
- NE POSEZ JAMAIS RIFLES CONTRE LES TIRS BANC COMME POUVOIR TOURNER.



1 INDEX

<i>AVERTISSEMENTS GÉNÉRAUX ET PRÉCAUTIONS</i>	<i>PAGE 5</i>
<i>SECTION 1 - INDEX</i>	<i>P 5</i>
<i>SECTION 2 - LISTE DES PIÈCES</i>	<i>P 5</i>
<i>SECTION 3 - ASSEMBLAGE</i>	<i>P 6 - 8</i>
<i>SECTION 4 - INSTALLATION ET D'UTILISATION</i>	<i>P 8</i>
<i>SECTION 5 - GARANTIE LIMITÉE</i>	<i>P 8</i>

2 PARTS LIST

CONTENU DE LA BÔITE

<i>DESCRIPTION</i>	<i>QUANTITÉ</i>
STRUCTURE POUR LES PATTES AVEC TUBE CENTRAL	1
ANNEAU D'AJUSTEMENT DU SIÈGE	1
GROSSE BAGUE EN NYLON	2
SUPPORT DU SIÈGE	1
DESSUS MOULÉ AVEC CHÂSSIS	1
SIÈGE REMBOURRÉ	1
CHEVILLE DE VÉROUILLAGE	1

3 ASSEMBLAGE

1. Placez la structure principale des pattes tel qu'illustré à la **figure 1**.
2. Enlevez une des chevilles de verrouillage métallique et pliez les pattes. Réinsérez la cheville de verrouillage métallique dans le trou arrière tel qu'illustré à la **figure 2**. Répétez l'opération pour tous les pieds.
3. Glissez l'anneau d'ajustement pour le siège sur le poteau central tel qu'illustré à la **figure 3**.
4. Glissez une grosse bague en nylon (montrée en bleu) sur le poteau central tel qu'illustré à la **figure 4**. Glissez le support du siège (montré en vert) sur le poteau central et appuyez-le sur la bague en nylon.

⚠ CAUTION

Gardez vos doigts et vos mains loin des endroits où vous pourriez les pincer lorsque vous pliez les pattes.

1



2



3



4



5. Glissez la grosse bague en nylon restante sur le poteau central tel qu'illustré à la **figure 5**.
6. Glissez le dessus assemblé avec châssis sur la bague en nylon tel qu'illustré à la **figure 6**.

5



6



ASSEMBLAGE (suite)

7. Faites pivoter le banc vers le haut et insérez le bouton fileté tel qu'illustré à la **figure 7**.

8. Insérez le poteau du siège dans le trou du support du siège et fixez-le en utilisant la cheville de verrouillage tel qu'illustré à la **figure 8**.

9. Vissez l'appui-arme dans le trou fileté à l'extrémité du banc. Utilisez les écrous à oreilles pour serrer les parties restantes lorsque le banc sera à la hauteur désirée. (**voir la figure 9**)

CAUTION
Le bouton fileté doit être inséré lors de l'utilisation de banc de tir.



4 **INSTALLATION ET D'UTILISATION**

1. Retirer les goupilles de verrouillage de la figure 2 pour réduire jambes. Gardez vos doigts et vos mains loin des endroits où vous pourriez les pincer lorsque vous pliez les pattes.

5 **GARANTIE LIMITÉE**

(A) Garantie

La compagnie Summit Treestands, LLC (Summit) garantit à l'acheteur original que tous ses produits manufacturés sont sans défauts du matériel et de fabrication lors de l'expédition et ce pour douze (12) mois à partir de la date d'achat. Summit remplacera toute pièce défectueuse si le module soi-disant défectueux est retourné à Summit port payé, à l'intérieur de la période de garantie.

Cette garantie ne s'applique pas à tout produit qui aurait subi un usage impropre ou abusif, négligé (notamment un mauvais entretien); accident; mauvaise installation, modification (notamment l'utilisation de pièces non-autorisées ou pièces ajoutées); ajustement ou réparation. LA GARANTIE MENTIONNÉE PRÉCÉDEMMENT REMPLACE TOUTE AUTRE GARANTIE, MENTIONNÉE EXPRESSÉMENT OU IMPLICITEMENT (INCLUANT LES GARANTIES DE COMMERCIALISATION ET D'ADAPTATION DE TOUT PRODUIT À UN OBJECTIF PARTICULIER), ET TOUTE AUTRE OBLIGATION DE RESPONSABILITÉ DE LA PART DE LA COMPAGNIE.

(B) Limitation de responsabilité

Il est expressément entendu que la responsabilité de Summit pour ses produits, que ce soit dû à une violation de la garantie, de la négligence, de la responsabilité sans faute ou autrement, est limitée à la réparation du produit, tel que mentionné ci-haut, et Summit ne sera pas responsable pour toute blessure, perte, dommage ou frais encourus, que ce soit une cause directe ou indirecte, notamment de la perte d'usage, de salaire ou dommage matériel résultant de la vente, de l'installation, de l'utilisation ou l'incapacité d'utiliser le produit, ou la réparation ou le remplacement des produits de Summit.

Summit se réserve le droit de faire des modifications ou transformations à ses produits en tout temps, qui, selon son opinion, pourrait améliorer la performance et l'efficacité du produit. Summit n'est pas obligé de faire ces modifications ou transformations aux produits déjà en service.