# INSTRUCTION SHEET
## CSC58KD

**LUXOR**

2245 Delany Road
Waukegan, IL 60087
Ph: 847/244-1800 • 800/323-4656
Fax: 847/244-1818 • 800/327-1698



**CSC58**

## PARTS LIST

**Parts:**

1- back pannel
2- Side pannes
1- Frame
2- shelves
1- bottom
1- lid
1- keyboard assembly
1- mouse shelf
1- base frame
4- casters two with brake
1- bottom frame cover
1- middle frame cover
4- shelf mounts

---

**1**

Interlock back and side pannels.



**2**

Insert frame into lip on front, inside of side pannels. Screw on bottom and middle frame cover.
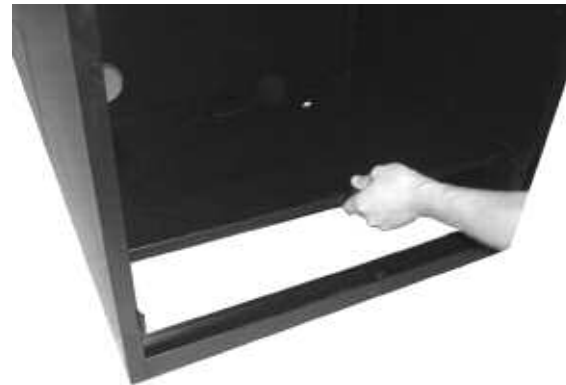


**3**

Slide door onto track on top of unit.



**4**

Close door and put top on. Push down firmly to secure.
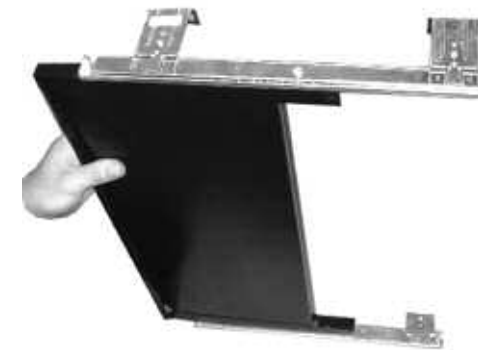


**5**

Slide bottom shelf into place.



**6**

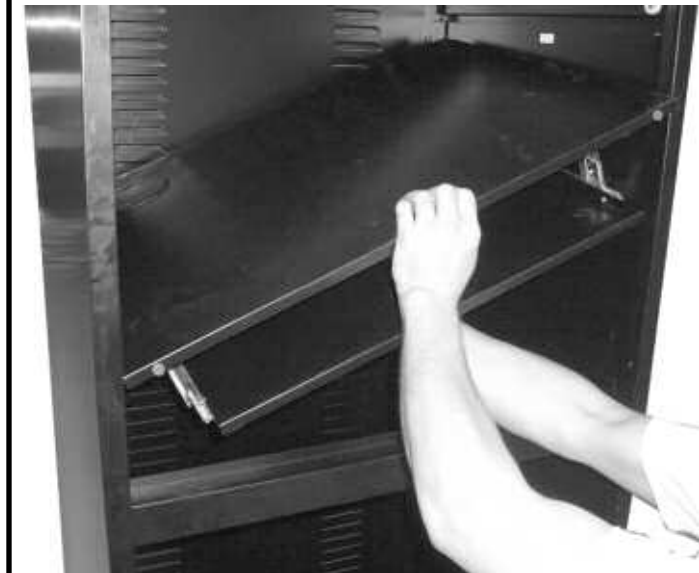Turn middle shelf upside down and install keyboard shelf mounts facing in toward middle of shelf.



**7**

Install keyboard mounts on keyboard shelf facing up and to the inside.



**8**

Turn middle shelf and keyboard shelf upside down and mount keyboard shelf to bottom of middle shelf using the mounts installed in steps 6 & 7.



**9**

Tilt midde shelf with keyboard shelf to the side and insert into unit. Straighten shelf out and lower it into place.



**10**

Insert hinge pins into mounts on front of unit.
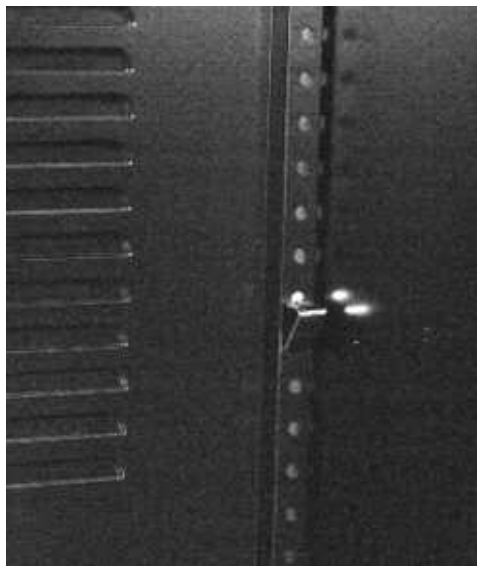
**11**

Lower doors onto hinge pins.



**12**

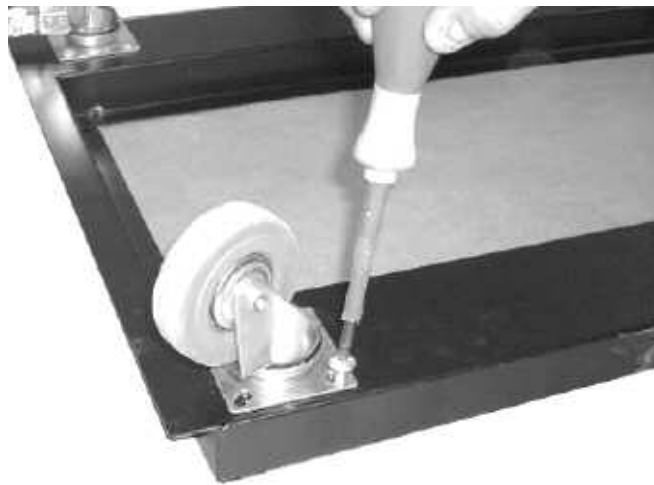Install shelf mounts on inside of unit in all 4 corners. Make sure to install at same height.



**13**

Place remaining shelf on shelf mounts.



**14**

Install casters on bottom of base frame. Make sure both locking casters are on the same side (usually the front of the unit, either long side).



**15**

Turn base frame with casters over and with the help of an assistant lift unit onto base frame.



**LUXOR**