

Summit Gun Rest

PARTS LIST

PN	Description	QTY
xxxxx	L Shaped Gun Rest Tube	1
xxxxx	Gun Rest Bracket	1
xxxxx	2 3/4" bolt	1
xxxxx	Large screw on Nut	1
xxxxx	Nylon Bushings	4

Installation Instructions

Step 1. Unfasten a portion (approximately 8") of the comfort pad in the center of the perimeter tube on your stand. See **Figure 2.**

Step 2. Slide the Gun Rest bracket onto the perimeter stand tubing as shown in **Figure 1 and 2.** The open end of the bracket should face the tree.

Step 3. Insert two of the nylon bushings into the bracket - one on top and one on bottom.

Step 4. Insert the remaining two bushings into the Gun Rest tube.

Step 5. Insert the long bolt through the bracket from the top.

Step 6. Slide the Gun Rest tube up onto the long bolt from the bottom.

Step 7. Install the large nut and tighten securely.

Step 8. Reinstall the comfort pad on the front of the stand.

NOTE: This gun rest is designed to work on closed front stands only.

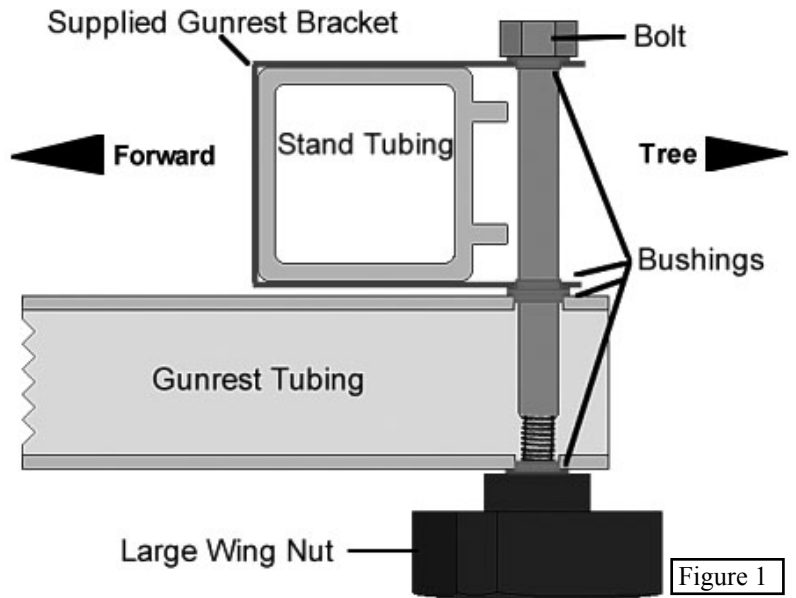


Figure 1



Figure 2

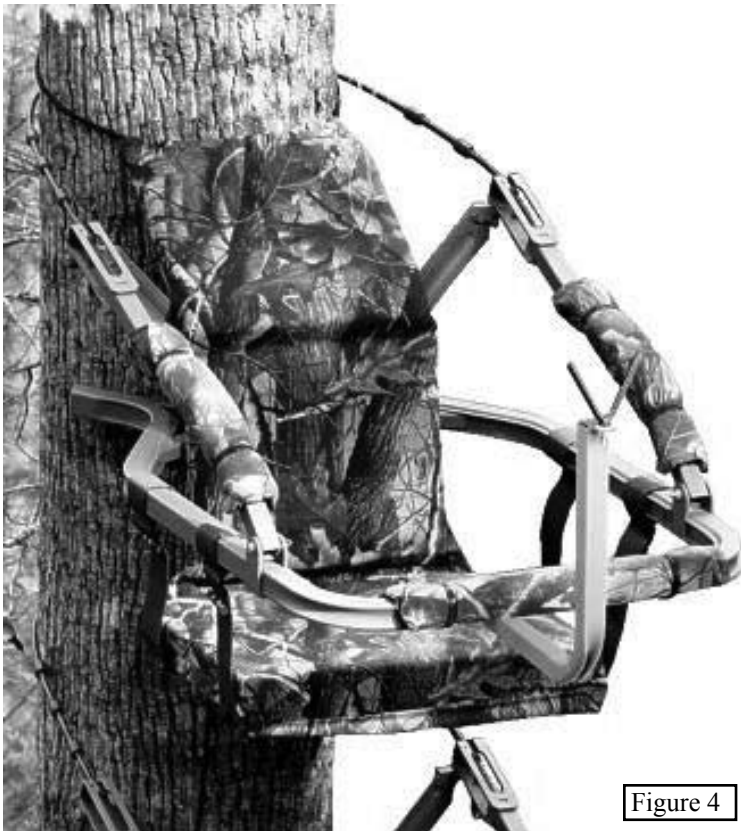


Figure 4



Figure 3