



Adjustable Gun Rest

PN 85251, 85252

© 2014 Summit Treestands, LLC
715A Summit Dr. Decatur, AL 35601
(256) 353-0634
info@summitstands.com
www.summitstands.com



⚠ WARNING

Never sit on this gun rest or attempt to use it as a climbing aid!

1 PARTS LIST

BOX CONTENTS

PN	DESCRIPTION	QTY
	GUN REST TUBE	1
70224	16" CAMO ARM PAD	1
21071	GUN REST HARDWARE KIT	1




21071 - GUN REST HARDWARE PACKET


PN	DESCRIPTION	QTY
10632	2 1/2" CARRIAGE BOLT, 1/4x20	2
10601	1 3/4" BOLT, 1/4x20	2
10612	LOCK NUT, 1/4x20	2
10633	NEOPRENE WASHER	2
10544	GUN REST ADJUSTMENT BRACKET	4
10660	KNOB	2
20431	GUN REST MOUNTING BRACKET	2

2 ASSEMBLY

- Position the Gun Rest Mounting Bracket as shown in **figure 1**. The bracket MUST be placed at least 3" up the arm to provide clearance for the platform when the stand is packed together. The long side of the bracket should be on the outside of the stand.
- Secure the bracket using one 1 3/4" bolt and lock nut. The bolt MUST run from the outside in as shown in **figure 2 (bolt is in yellow)**. Repeat for the other side.
- From the inside, position the 2 1/2" carriage bolt (shown in blue) inside the bracket. Over this bolt, slide one Gun Rest Adjustment Bracket, one Neoprene Washer (red), one more Gun Rest Adjustment Bracket and then the Gun Rest Bar (bright green). See **figure 2**.
- Secure the bar with the supplied knob.
- At the other bracket location, combine one Adjustment Bracket, a Neoprene washer and the last Adjustment Bracket. Slide this assembly between the Gun Rest tube and the Mounting Bracket lining up the bolt hole. Insert the carriage bolt through the entire assembly from the inside out. Secure with the knob.
- Position the 16" Arm pad on the gun rest bar as shown in **figure 3**. Place the pad around the bar and use the zipper to secure.

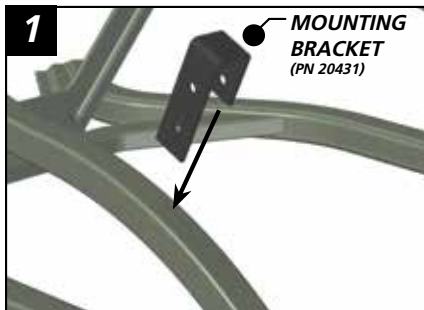

1 3/4" BOLT, LOCK NUT
- WRENCH TIGHTEN

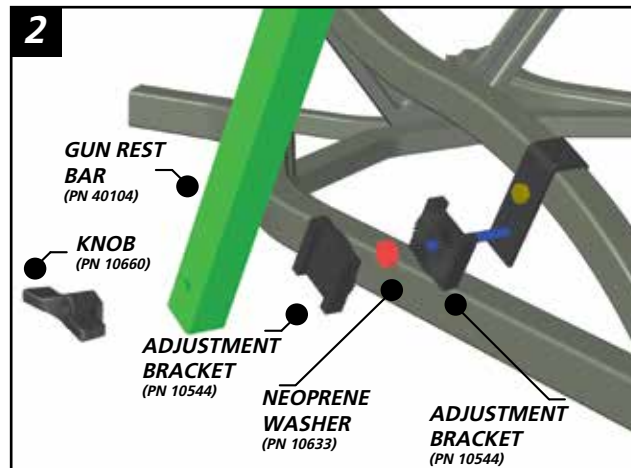



Appui-arme ajustable

PN 85251, 85252

© 2014 Summit Treestands, LLC
715A Summit Dr. Decatur, AL 35601
(256) 353-0634
info@summitstands.com
www.summitstands.com



⚠ AVERTISSEMENT

Ne vous assoyez jamais sur l'appui-arme et ne l'utilisez jamais comme appui pour grimper.

1 LISTE DES PIÈCES

CONTENU DE LA BÔTE

PN	DESCRIPTION	QUANTITÉ
	TUBE DE L'APPUI-ARME	1
70224	16" COUSSIN CAMOUFLAGE POUR LES BRAS	1
21071	TROUSSE DE QUINCAILLERIE POUR L'APPUI-ARME	1



21071 - TROUSSE DE QUINCAILLERIE POUR L'APPUI-ARME

PN	DESCRIPTION	QUANTITÉ
10632	2 1/2" BOULON POUR LE CHARIOT, 1/4x20	2
10601	1 3/4" BOULON, 1/4x20	2
10612	ÉCROU DE BLOCAGE, 1/4x20	2
10633	RONDELLE	2
10544	SUPPORT AJUSTABLE POUR L'APPUI-ARME	4
10660	BOUTON	2
20431	SUPPORT DE MONTAGE POUR L'APPUI-ARME	2

2 ASSEMBLAGE

- Placez le support de montage pour l'appui-arme tel que qu'illustré à la **figure 1**. Le support DOIT être placé à au moins 7,6 cm le long de l'appui-arme afin de fournir l'espace nécessaire à la plateforme lors de l'emballage du mirador. Le côté long du support devrait être à l'extérieur du mirador.
- Fixez le support en utilisant un boulon de 1 3/4 po. et un écrou de blocage. Le boulon DOIT être installé à partir de l'extérieur tel qu'illustré à la **figure 2 (le boulon apparaît en jaune)**. Répétez l'opération pour l'autre côté.
- À partir de l'intérieur, placez le boulon du chariot de 2 1/2 po. (le boulon apparaît en bleu) à l'intérieur du support. Glissez un support d'ajustement de l'appui-arme par-dessus ce boulon, une rondelle Néoprène (rouge), un autre support d'ajustement de l'appui-arme et puis la barre de l'appui-arme (vert brillant). Voir la **figure 2**.
- Fixez la barre avec le bouton fourni.
- À l'emplacement de l'autre support, assemblez un support d'ajustement, une rondelle Néoprène et le dernier support d'ajustement. Glissez cet assemblage entre le tube de l'appui-arme et le support de montage en alignant le trou du boulon. Insérez le boulon du chariot de l'intérieur vers l'extérieur au travers de l'assemblage. Fixez à l'aide du bouton.
- Placez le coussin pour les bras de 40,6 cm sur la barre de l'appui-arme tel qu'illustré à la **figure 3**. Placez le coussin autour de la barre et fixez-le à l'aide de la fermeture éclair.

