



SUMMIT
EST. 1981
TREESTANDS

Adjustable Gun Rest

INSTRUCTIONS

⚠ WARNING

Never sit on this gun rest or attempt to use it as a climbing aid!

1 PARTS LIST

BOX CONTENTS

PN	DESCRIPTION	QTY
	GUN REST TUBE	1
70224	16" CAMO ARM PAD	1
21071	GUN REST HARDWARE KIT	1




21071 - GUN REST HARDWARE PACKET

PN	DESCRIPTION	QTY
10632	2 1/2" CARRIAGE BOLT, 1/4x20	2
10601	1 3/4" BOLT, 1/4x20	2
10612	LOCK NUT, 1/4x20	2
10633	NEOPRENE WASHER	2
10544	GUN REST ADJUSTMENT BRACKET	4
10660	KNOB	2
20431	GUN REST MOUNTING BRACKET	2

2 ASSEMBLY

1. Position the Gun Rest Mounting Bracket as shown in **figure 1**. The bracket **MUST** be placed at least 3" up the arm to provide clearance for the platform when the stand is packed together. The long side of the bracket should be on the outside of the stand.
2. Secure the bracket using one 1 3/4" bolt and lock nut. The bolt **MUST** run from the outside in as shown in **figure 2 (bolt is in yellow)**. Repeat for the other side.
3. From the inside, position the 2 1/2" carriage bolt (shown in blue) inside the bracket. Over this bolt, slide one Gun Rest Adjustment Bracket, one Neoprene Washer (red), one more Gun Rest Adjustment Bracket and then the Gun Rest Bar (bright green). See **figure 2**.
4. Secure the bar with the supplied knob.
5. At the other bracket location, combine one Adjustment Bracket, a Neoprene washer and the last Adjustment Bracket. Slide this assembly between the Gun Rest tube and the Mounting Bracket lining up the bolt hole. Insert the carriage bolt through the entire assembly from the inside out. Secure with the knob.
6. Position the 16" Arm pad on the gun rest bar as shown in **figure 3**. Place the pad around the bar and use the zipper to secure.

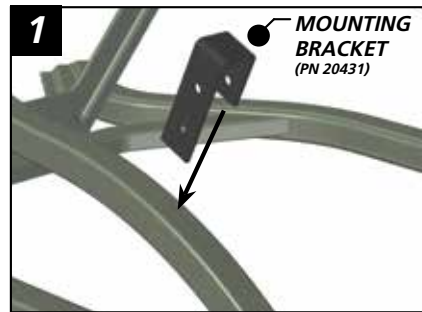

1 3/4" BOLT, LOCK NUT - WRENCH TIGHTEN

