

85023 FOOTREST INSTRUCTIONS

Installation is made easier by the use of a powered screwdriver)

Step 1. Insert the Footrest Bracket into the perimeter tube as shown in **Figure 1**. This bracket should be placed between the first and second rung from the front of the platform.

Step 2. Secure the bracket with one self tapping screw as shown in **Figure 2**. Repeat for the other side.

Step 3. Insert two of the long shank bushings into the pre-punched holes in each end of the footrest tube.

Step 4. Insert the short shank bushing into the outside of each footrest bracket from **Step 1** (See **Figure 3**).

Step 5. Line up the footrest bar on the **INSIDE** of the two footrest brackets and secure one side using the 1 1/2" bolt and lock nut. The gap between the other side of the bar and the bracket is normal.

Step 6. Insert the remaining 1 1/2" bolt through the other side of the footrest bar and pull the bar to the side so that you can tighten the lock nut. If squeaking occurs, loosen the bolts by 1/2 turn.

Step 7. Fold the bar down and note where it crosses the stand frame - make a mark at this point. Fold the bar back up. Secure the two rubber bumpers at the mark using the two remaining self tapping screws as shown in **Figure 10**. Your finished footrest should look like **Figure 11**.

WWW.SUMMITSTANDS.COM

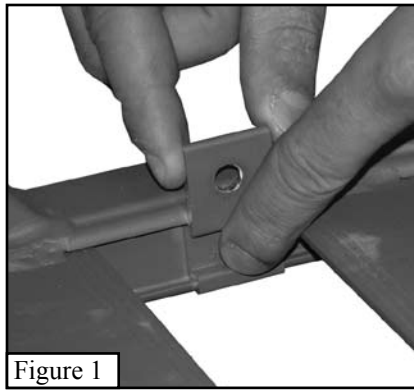


Figure 1

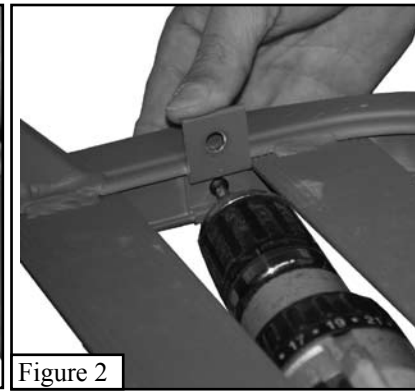


Figure 2

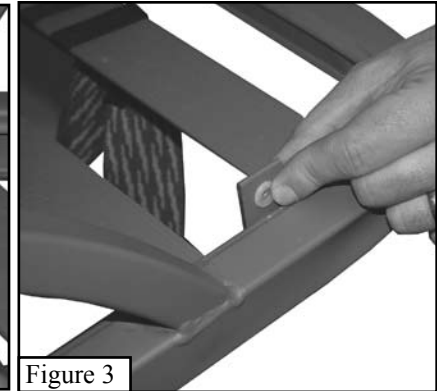


Figure 3

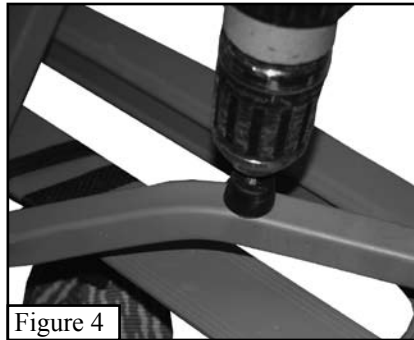


Figure 4

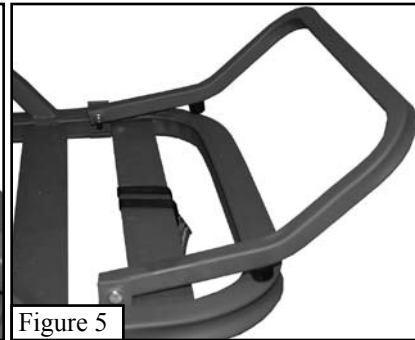


Figure 5

©2007 STLLC
Summit Treestands

85023 FOOTREST INSTRUCTIONS

Installation is made easier by the use of a powered screwdriver)

Step 1. Insert the Footrest Bracket into the perimeter tube as shown in **Figure 1**. This bracket should be placed between the first and second rung from the front of the platform.

Step 2. Secure the bracket with one self tapping screw as shown in **Figure 2**. Repeat for the other side.

Step 3. Insert two of the long shank bushings into the pre-punched holes in each end of the footrest tube.

Step 4. Insert the short shank bushing into the outside of each footrest bracket from **Step 1** (See **Figure 3**).

Step 5. Line up the footrest bar on the **INSIDE** of the two footrest brackets and secure one side using the 1 1/2" bolt and lock nut. The gap between the other side of the bar and the bracket is normal.

Step 6. Insert the remaining 1 1/2" bolt through the other side of the footrest bar and pull the bar to the side so that you can tighten the lock nut. If squeaking occurs, loosen the bolts by 1/2 turn.

Step 7. Fold the bar down and note where it crosses the stand frame - make a mark at this point. Fold the bar back up. Secure the two rubber bumpers at the mark using the two remaining self tapping screws as shown in **Figure 10**. Your finished footrest should look like **Figure 11**.

WWW.SUMMITSTANDS.COM

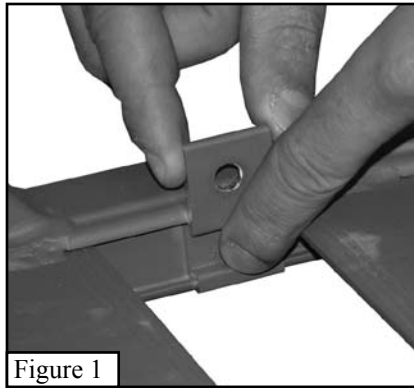


Figure 1

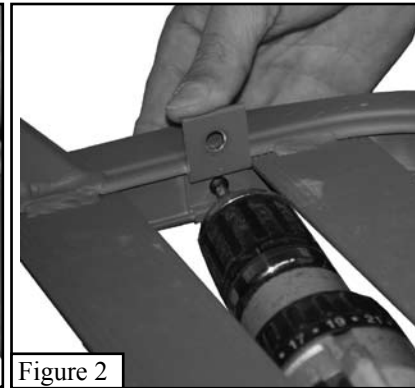


Figure 2

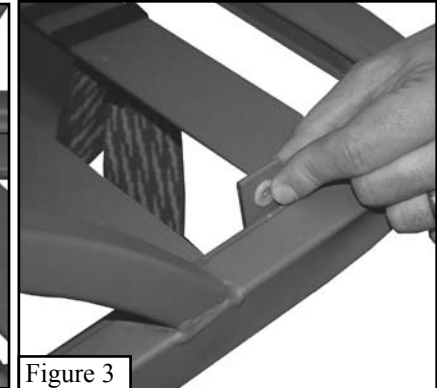


Figure 3

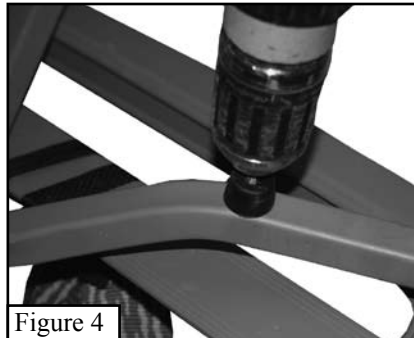


Figure 4

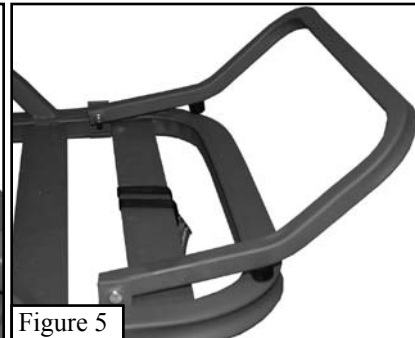


Figure 5

©2007 STLLC
Summit Treestands