Ultimate Viper Accessory Instructions

10632

Warnings and Precautions

NEVER SIT ON THIS GUN REST OR ATTEMPT TO USE IT AS A CLIMBING AID!

Part 1. Gun Rest

Step 1. Position the gun rest mounting bracket as shown in **Figure 1**. The bracket MUST be placed at least 3" up the arm to provide clearance for the platform when the stand is packed together. The long side of the bracket should go on the outside of the stand.



Step 2. Slide one 2 1/2" carriage bolt through the mounting bracket from the inside out.

Step 3. Align one Gun Rest Adjustment Bracket as shown in

Figure 2. Slide the bracket over the carriage bolt and seat it on the mounting bracket.


Step 4. Position the Neoprene washer as shown in **Figure 2**. Slide the washer over the carriage bolt.

Step 5. Position another Gun Rest Adjustment Bracket as shown below. The teeth should face inward. Slide the bracket over the carriage bolt and seat it against the bracket/washer from **Step 3**.

Step 6. Slide the Gun Rest tube onto the outside bracket. Push the carriage bolt through the pre-punched hole. Use the large knob to secure

Step 7. Repeat process for the other side. The carriage bolt may have to be backed out slightly as you position the two Gun Rest Brackets and the washer between the Gun Rest tube and the Seat Base

Step 8. Attach the 18" arm pad to the front of the bar using the supplied cable ties.

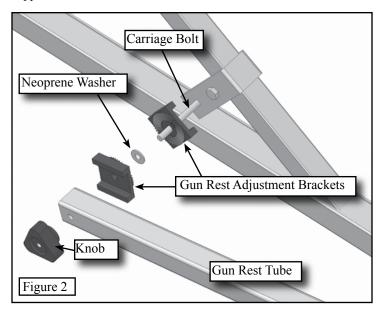

ULTIMATE VIPER ACCESSORIES AND PARTS LIST

PN	Description	QTY
40104	Gun Rest Tube	1
10950	Comfort Mat	1
11911	Drop Blind	1
21072	Hardware Kit	1

21072 HARDWARE KIT ULTIMATE VIPER PN Description

10612	1/4" Lock Nut (1/4 -20)	2
10633	Neoprene Washer	2


2 1/2" Carriage Bolt (1/4 -20)


OTY

2














20431 Gun Rest Mounting Bracket

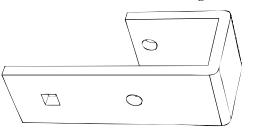

If you have any questions or concerns about this or any Summit product, please to not hesitate to call or email us:

www.summitstands.com 256-353-0634


Part 2. Drop Blind

Step 1. Your drop blind may ship unfolded. Lay the blind out on a flat surface. Start at the ends of the blind material and roll it up. Once it is completely rolled, tuck it into the pocket and secure with the long Velcro® strip that runs the entire length of the blind.

Step 2. Fold the blind in half and find the center point. There should be a Velcro® loop strap close to the center.

Step 3. Loop this Velcro® loop strap over the stand frame in the middle of the front pad as shown in **Figure 1**.

Step 4. Work from the center back looping the straps over and securing them as shown in **Figure 2**. Repeat for both sides.

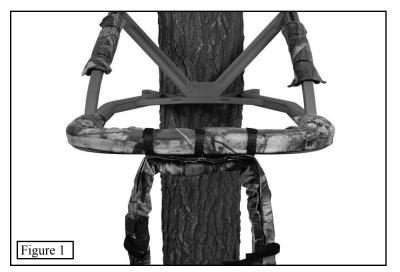



Step 5. To use: Start at the back and unhook the long, continuous Velcro® strap and let the blind drop around the stand.

Part 3. Comfort Mat

Step 1. The Comfort Mat has cutouts designed to fit the standard shape of the platform. Lay the mat between the platform arms as shown in **Figure 1**.

Step 2. Make a small, 3/8", incision through the mat just behind the front bar. Insert one cable tie through the mat and around the frame. Trim off the excess as shown in **Figure 2**.

Step 3. Make three more cuts in the locations shown in **Figure 3**. Use the remaining ties to secure the mat to the stand.





