




Footstrap Installation Instructions for 2000 XL Series Treestands

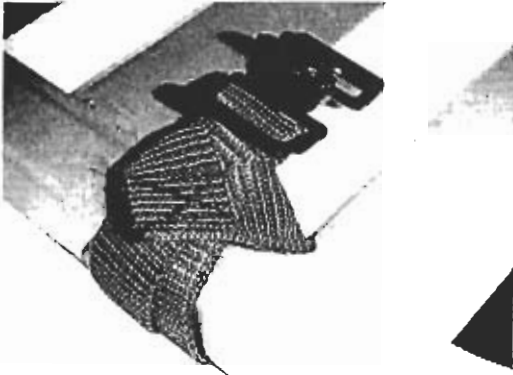


1. Wrap the small strap with the buckle around the perimeter tube. The buckle will go back through the strap to achieve a "choke hold" on the perimeter tube.

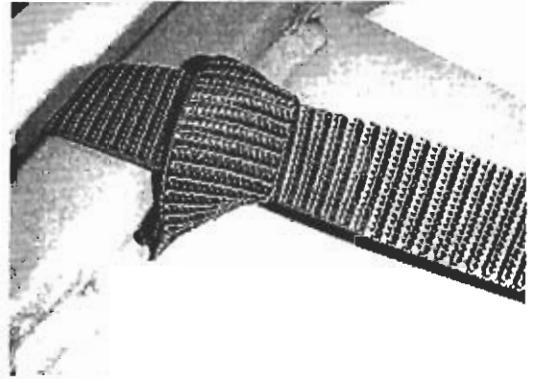


2. Wrap the long strap with the loop in one end around the perimeter tube on the opposite side from Step 1. Achieve a "choke hold" on the perimeter tube.

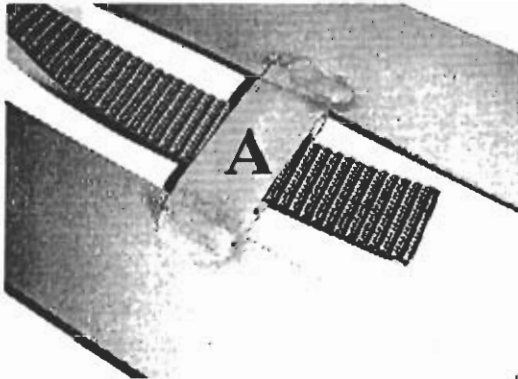


3. Push the end of the long green strap from Step 2 through the long slot in the portion of your treestand marked "A."

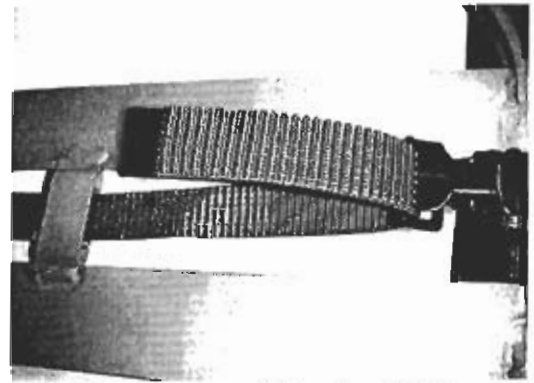


4. Push the end of the long strap (Steps 2 and 3) through the tourniquet buckle to secure.

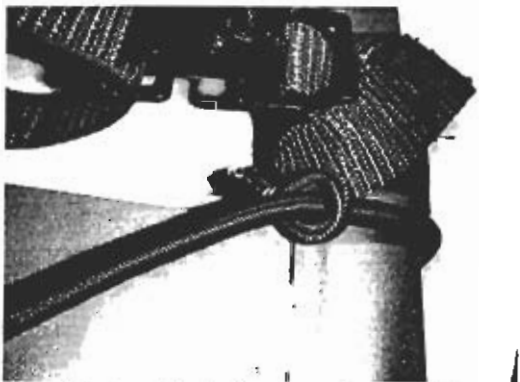


5. Wrap one of the two black shock cords around the perimeter tube and push the straight end through the looped end to achieve a "choke hold" on the perimeter tube.

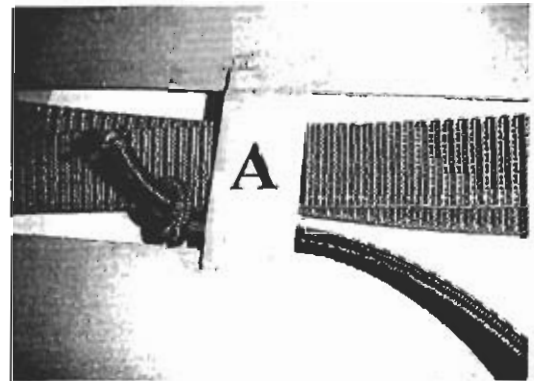

6. Push the straight end of the shock cord (Step 5) through one of the holes in the portion of your treestand marked "A." Secure with an overhand knot and tighten the knot securely.

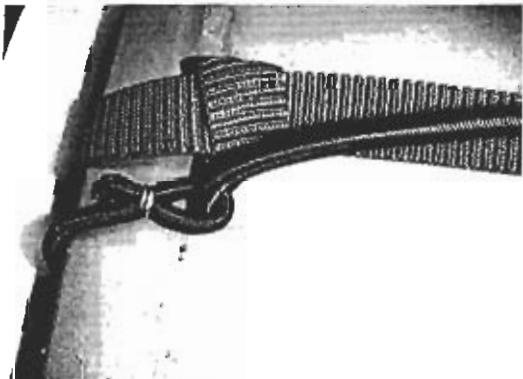

7. Wrap the other black shock cord around the perimeter tube on the opposite side from Step 5. Push the straight end through the looped end to achieve a "choke hold" on the perimeter tube.

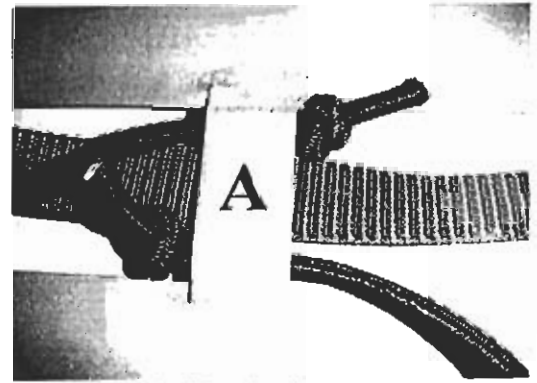

8. Push the straight end of the shock cord (Step 7) through the remaining hole in the portion of your treestand marked "A." Secure with an overhand knot and tighten the knot securely.