

Installing the footrest kit on the Bullet or Broadhead Backpacker Treestand

1. Remove bolts from the folding arms of the platform as shown in **Figure 1**.
2. Attach the footrest using the (2) 2 3/4" bolts and bushings as shown in **Figure 2**.
3. The locking nuts need to be snug on the footrest.
4. The finished platform will look like **Figure 3**.

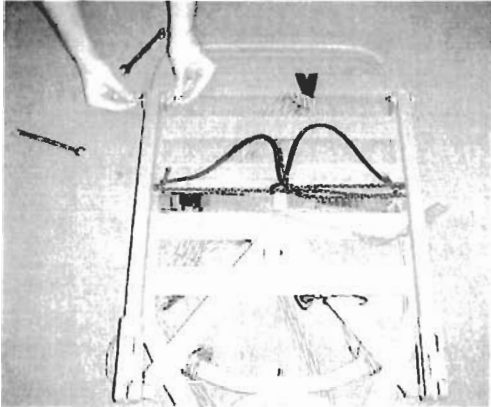


Figure 1

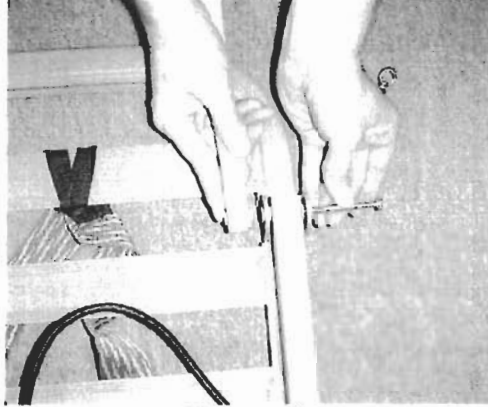


Figure 2

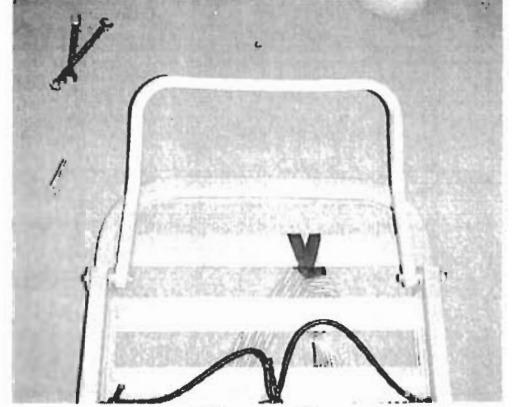


Figure 3