

Instructions for Summit Gun Rest

--- www.summitstands.com ---

Your new Summit Gun Rest, PN 85007, should include:

- One large, “L” shaped Gun Rest bar.
- Attached, rubber coated “Y” shaped holder with locking nut and washers
- One U shaped bracket
- One ¼ X 20 - 2 ¾” or 3” long Grade 8 bolt
- One ¼ X 20 black plastic nut
- Four short shank plastic bushings

1. This Gun Rest attaches to the perimeter tubing on your stand. (see Figure 1, 3, 4)
2. Unfasten a portion (approximately 8”) of the camouflage comfort pad in the center of the climbing bar. You do not have to remove the entire pad.
3. Slide the Gun Rest bracket over the aluminum tubing with the open end of the “U” facing toward the tree.
4. Insert two of the plastic bushings into the holes on the bracket. (see Figure 2)
5. Insert the long bolt through the top of the bracket.
6. Insert the remaining two plastic bushings into the “L” shaped Gun Rest bar.
7. Slide Gun Rest bar up around the long bolt.
8. Install the plastic knob and tighten down.
9. Push the camo pad back down over the bolt and bracket



Figure 1

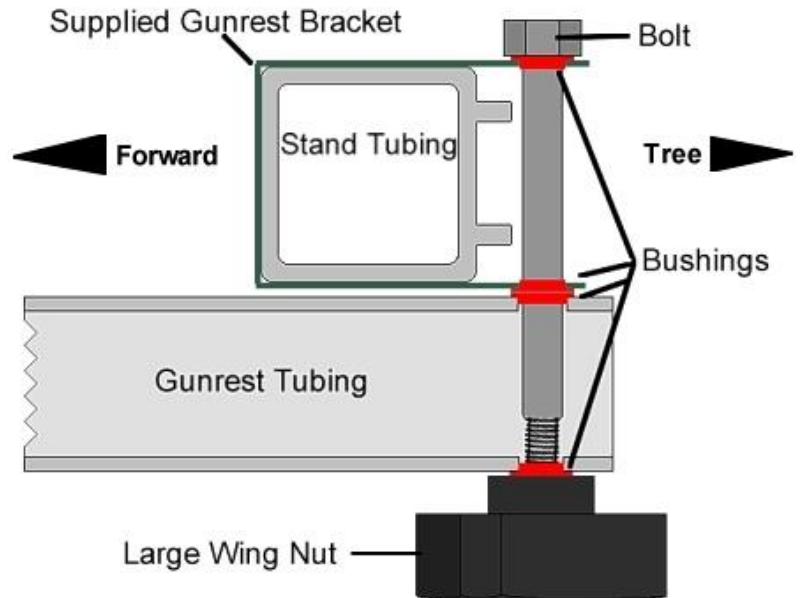


Figure 2 – Side view



Figure 3



Figure 4