Your new Summit Box holder, PN 85040 or 85041, should include the following (Figure 1):

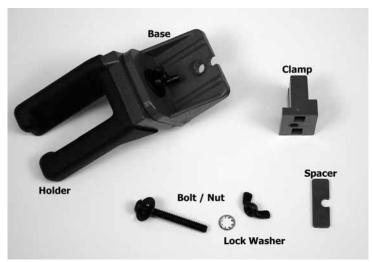




Figure 1

Figure 2

The Summit Bow holder is designed to fit on the arm tubing that runs at an angle up to the cable attachment system. It can either be mounted to the top (climber) portion of the stand or to the platform. It will not mount on the perimeter tubing on the front of the stand. (Figure 2, 5.)

Mounting the Bow holder to your stand:

First, determine the size of the tubing on your arms. Most Summit Treestands will have 1" square tubing. A small number of stands were produced with 1" by 1.1" tubing.

Mounting to 1" square tubing (the spacer seen in Figure 1 will not be used).

- 1. Assemble the Bow holder as shown in Figure 3.
- 2. 85040 will mount on right side of stand as you are sitting in it. 85041 will mount on left side.
- 3. Loosen long bolt wing nut and slide clamp onto tubing.
- 4. Tighten down wing nut.
- 5. Loosen and adjust the fork to your desired position.

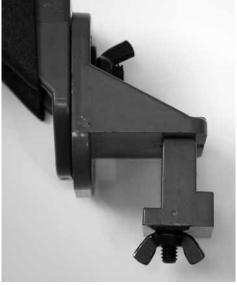




Figure 3. Figure 4.

Figure 5.

Mounting to 1" by 1.1" square tube.

- 1. Assemble the Bow holder as shown in Figure 4. Use the plastic spacer between the clamp and the base.
- 2. 85040 will mount on right side of stand as you are sitting in it. 85041 will mount on left side.
- 3. Loosen long bolt wing nut and slide clamp onto tubing.
- 4. Tighten down wing nut.
- 5. Loosen and adjust the fork to your desired position.