

Instructions for Retying your Prussic Knot



Step 1



Step 2



Step 3




Step 4



Step 5



Step 6

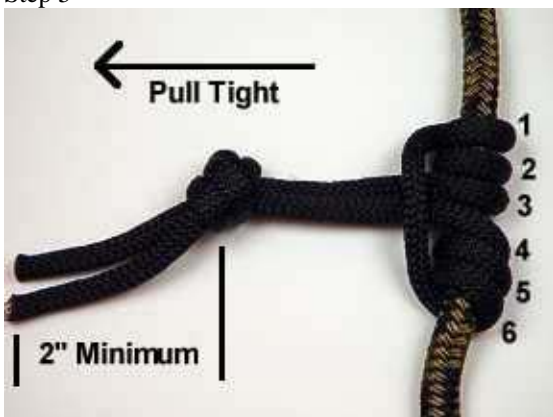

Step 7

WARNING!! Do not substitute any other rope or cord in place of those furnished by Summit.

The Prussic hitch is created by installing a loop around a drop line using **six (6)** coils. Follow the steps as shown. Also ensure you have a minimum of 2" of rope past the knot on the Prussic cord.

Step 1 – Lay the green drop line on top of the loop.

Step 2 – Bring the knot end of the loop over the green drop line and under the loop.

Step 3-6 – Repeat the looping from step 2 until a minimum of 6 coils exist around the drop line.

Step 7 – Pull the knot end of the Prussic hitch tight.

MAKE SURE your prussic hitch has 6 (six) loops! MAKE SURE your prussic hitch locks to the drop line when it is pulled down by the double knot.