

CT122 Instruction Sheet





Custom Service Department
Address: 2245 Delany Rd.
Waukegan, IL 60087
Phone: 847.244.1800
800.323.4656
Fax: 847.244.1818
800.327.1698

Part List:

- A. 1 - Top
- B. 2 - Legs
- C. 6 - Certwood Rail Sets
- D. 1 - Castor Pack (2 w/ Brake, 2 w/o Brake)
- E. 48 - M6 x 10 Flat Phillips Screws
- F. 8 - M6 x 35 Allen Head Screws

Tools Needed:



- G. 1 - Allen Wrench (Included)
- 1 - Phillips Screw Driver

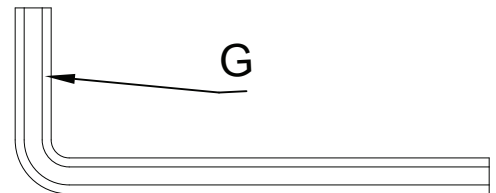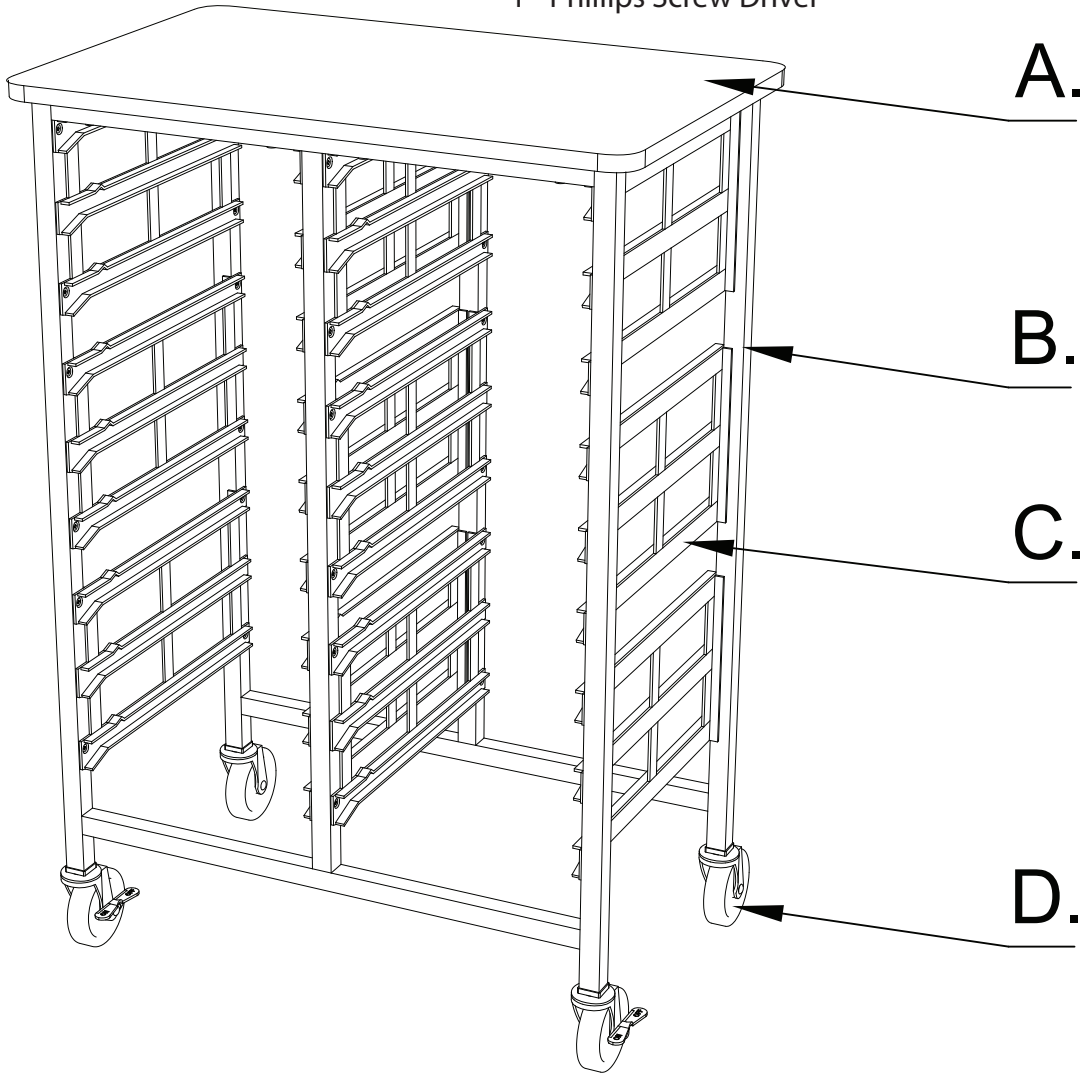

CT122 Instruction Sheet

Custom Service Department
Address: 2245 Delany Rd.
Waukegan, IL 60087
Phone: 847.244.1800
800.323.4656
Fax: 847.244.1818
800.327.1698



Step 1: Screw legs to top with the M6 x 35 Allen screws.

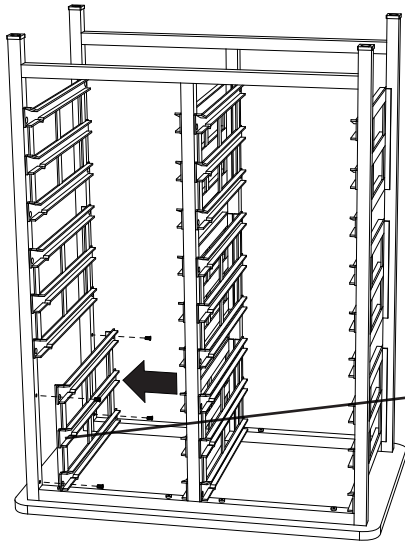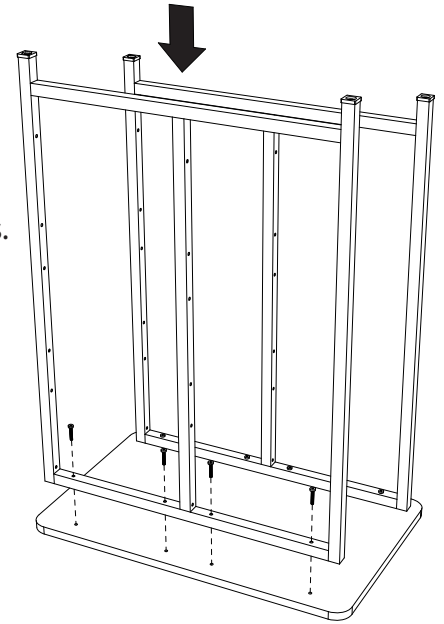

Tray catch notch faces the top.
Rails come in a Left and Right pair.

Step 2: Screw Certwood rails to the legs with M6 x 10 Flat Phillips screws.

Casters w/ brakes toward the front

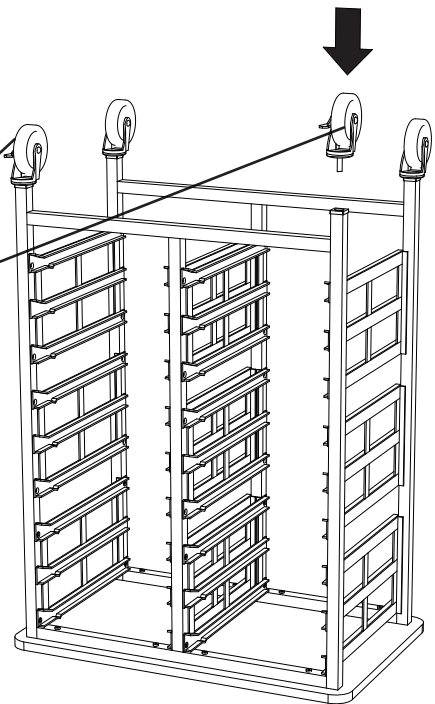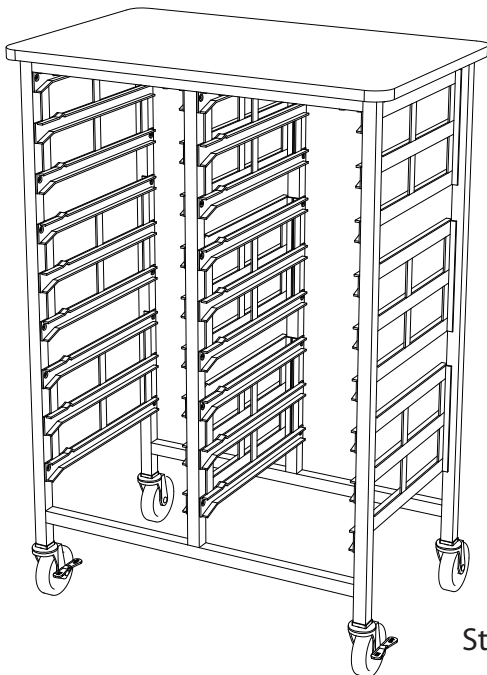

Step 3: Press casters into the legs.

Step 4: Insert Certwood trays into rails.