

Instruction Sheet

TVS/TVW Video Stand Cabinet Pack





Customer Service Dept
2245 Delany Rd
Waukegan, IL 60087
Ph: 847/244-1800 • 800/323-4656
Fax: 847/244-1818 • 800/327-1698

Parts List

- 2- Doors
- 2- Cabinet side panels
- 1- Cabinet back panel
- 2- Chrome recessed handles
- 1- Lock assembly
- 2- Keys
- 1- Hex nut
- 8- Hex head screws
- 4- Black screws
- 2- Bullet catches
- 1- Plastic insulator

Tools Required:

- 1- Phillips head screwdriver
- 1- Slotted screwdriver
- 1- Wrench (supplied)

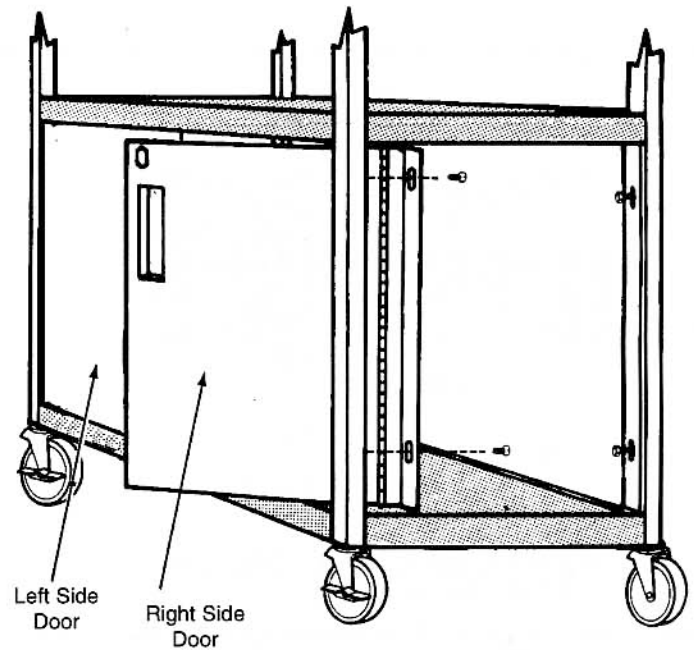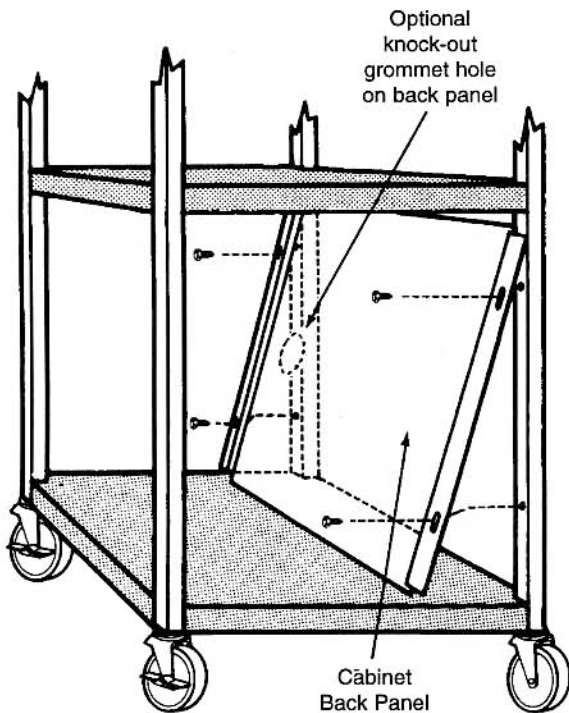

Note: If required, knock out grommet hole before inserting back panel and snap in black plastic insulator.

1.

Insert cabinet pack panel, (the longest panel) aligning the two holes in each end of the panel with the two holes in each back table leg as illustrated. Insert and start the four hex head screws but do not tighten.

2.

Insert door frame assembly, aligning the two holes at the end of the door frame, along the hinge, with the holes in front of the right table leg. Start two hex head screws, but do not tighten. **NOTE:** The right side door has the hole for the lock assembly at the top of the door above the recessed handle. Repeat the same for the left side.