


12 Bin Toy Organizer

BLOW SIDE-PANEL 1 PCS	POLE 6 PCS	PLASTIC-SCREW 12 PCS
PLASTIC-SCREW-NUT 12 PCS	PLASTIC BIN 12 PCS	SCREWDRIVER 1 PC

ASSEMBLY STEPS:

- INSERT 12 SCREW-NUTS INTO BOTH SIDES OF ALL PLASTIC POLES.
(Picture 1)

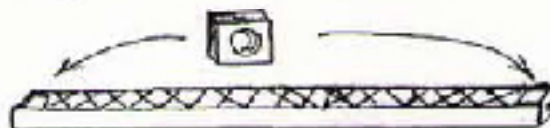

- STAND 1 BLOW SIDE-PANEL UP TO START ASSEMBLY.
- FIT 6 POLES INTO 6 SOCKETS OF BLOW SIDE-PANEL,
- SCREW 6 PLASTIC-SCREWS.
- FIT 6 POLES INTO THE ORTHER BLOW SIDE-PANEL AND SCREW
- THE OTHER 6 PLASTIC-SCREWS.
- SCREW ALL PLASTIC-SCREWS TIGHTLY.
- PLACE 12 BINS ON POLES, EITHER FLAT OR AT ANGLE.



555 West Taft
South Holland, IL 60473
Phone: 800.245.7224
Fax: 800.245.8224
www.hwilson.com