

Instructions for Easy Timer Kit

THANK YOU for your purchase of the **Easy Timer Kit**, a top quality Moultrie product. Please read both sides of this sheet before operating this unit. If you should have any questions about this or any other Moultrie product, please contact us using the information on the reverse side.

To help us to better serve you, please complete and mail the enclosed Warranty Card.


DRILLING YOUR DRUM/BARREL/BUCKET

NOTE: If you purchased a Moultrie Drum, go to I

Easy Timer Kit *will mount to the bottom of any drum or bucket.*




- 1 Turn drum over, measure and mark the center of the bottom.
- Center the template on the bottom of the drum and secure with tape. Drill two 3/16" **Funnel holes** and four 7/16" **Feeder Leg Holes.**
- Using a Hole Saw, drill a 2-1/4" hole in the center of the bottom of your drum.

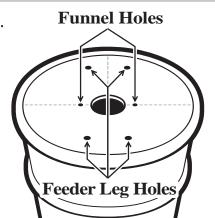

MOUNTING THE FEEDER

Place Funnel inside Drum with small end facing down.
Attach with two Small Phillip Head Screws using provided nuts and washers.



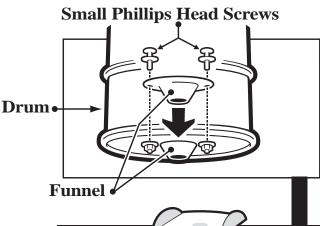


- Securely attach the **Spin Plate** to the **Motor Shaft** using **Allen Wrench** provided. *Make sure Set Screw contacts flat side of shaft*.
- Attach Standoffs to Feeder using Long Bolts.

At this point in assembly, attach Long Bolts finger-tight only.






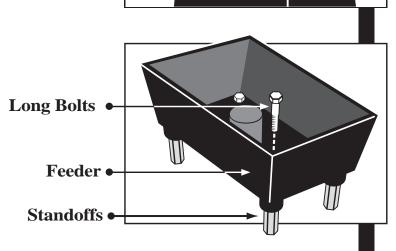

- 4 Turn **Drum** upside down.
- Attach Feeder to Drum using Short Bolts and washers. Tighten and secure all Bolts.

Note that washers are used inside drum only.



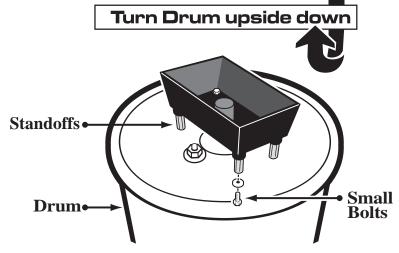

PROGRAMMING THE FEEDER

1 Locate the Switch Panel inside Feeder.



Choose amount of feed desired in pounds (lbs.) and set **Switch Panel** according to chart at right. Amount of feed is approximate and will vary based on feed type.

NOTE: The Easy Timer Feeder Kit is programmed to feed 2 times per day; once shortly after daybreak and again shortly before dark.

| DISPENSES APPROX. 75 Pounds of Feed |
|--|
| Seconds DISPENSES APPROX. Pound of Feed |
| Seconds DISPENSES APPROX. 1.5 Pounds of Feed |
| DISPENSES APPROX. 2 Pounds of Feed |
| DISPENSES APPROX. 2.5 Pounds of Feed |
| DISPENSES APPROX. 3 Pounds of Feed |
| DISPENSES APPROX. 3.5 Pounds of Feed |
| TITE 18 Seconds DISPENSES APPROX. 4 Pounds of Feed |




INSTALLING BATTERY & OPERATING FEEDER

CAUTION: WEAR EYE PROTECTION

FEEDER WILL SPIN UPON
CONNECTION OF BATTERY AND
WILL SPIN AGAIN WHEN THERE
ARE CHANGES IN LIGHT LEVEL!
Feeder will then be disabled for 7 hours
to prevent accidental feedings due to
cloud cover or lightning.

Loosen battery bracket screw and install a 6-Volt Alkaline (ex. EnergizerTM) or Moultrie rechargeable battery by attaching the Red Alligator Clip to the positive terminal (+) and the Black Alligator Clip to the negative (-) terminal.

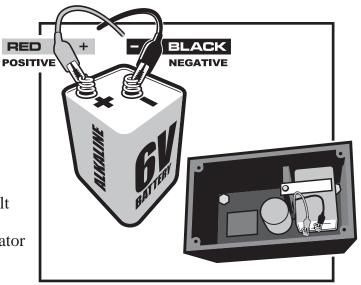

TIPS & POINTERS

- 1: (Q) When should I fill the drum on my feeder? (A) To prevent damage to the feeder kit, do not load drum until unit is off the ground.
- 2: (Q) I have a hanging feeder. What should I hang it with andhow high should I hang it? (A) Some animals will chew through products like rope, so chain or steel cable is best. The bottom of the feeder should be about 7 feet from the ground.
- 3: (Q) What kind of feed should I use? (A) Whole kernel corn is recommended. Whole kernel corn mixed with soybeans or pellets is also effective for attracting deer. NOTE: When not mixed with corn, some pellet type feeds can take on moisture and clog the feeder.
- **4:** (*Q*) How long should I set the feeder to run? (A) Many customers find that 4 or 5 seconds is long enough to establish a feeding pattern.
- 5: (Q) Some of the feed in the bottom of my drum never seems to move, and may be getting moldy. Any solution? (A) For 30 and 55 gallon barrels, Moultrie has developed internal funnels to solve this problem. The part numbers are MFH-FUN30 for a 30-gallon drum and MFH-FUN55 for a 55-gallon drum.

- 6. (Q) Why didn't the feeder run at dusk even though I set it out in the afternoon? (A) If you set your feeder up less than 7 hours before dusk, the first cycle will run at dawn.
- 7. (Q) What should I do if my feeder isn't working? (A) Check the battery first by changing to a known good battery. If a problem still exists, call **Moultrie Customer Service** at the number below.
- 8: (Q) What type of battery should I use? (A) For best performance, use a rechargeable 6-Volt, 5 Amp Moultrie brand battery. If disposable batteries will be used in your unit, EnergizerTM alkaline batteries are required for proper operation.
- 9: (Q) Can I get replacement parts for my feeder? (A) Yes, you may purchase the following Moultrie replacement parts.
 - Easy Timer Hardware PackageMFH-81531
 Easy Timer MotorMFH-81693
 Metal Funnel and Spin PlateKitMFH-ASPF
 6V Rechargeable BatteryMFH-RB6
 6V Battery ChargerMFH-BC6

There are no other user-replaceable parts. If you have further questions, please call **Moultrie Customer Sevice** at the number below.



Our Service Department will gladly answer any questions you have. Call 205-664-6700 Monday – Friday, 8:00 AM to 5:00 PM CST. www.moultriefeeders.com



Instructions for 15 Gallon Tripod Feeder

THANK YOU for your purchase of the **15 Gallon Tripod Feeder,** a top quality Moultrie product. Please read this sheet before assembling this unit. If you should have any questions about this or any other Moultrie product, please contact us using the information at the bottom of the page.

To help us better serve you, please complete and mail the enclosed Warranty Card.




MOUNT YOUR FEEDER KIT TO DRUM

Using instructions provided with your Feeder Kit, mount your feeder and small funnel to the bottom of the Drum.



INSTALL FEEDER LEGS

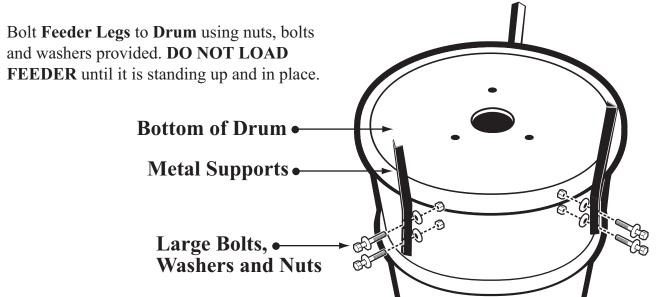



STAND FEEDER UPRIGHT

After installing the **Feeder Legs** to side of the **Drum**, lay Drum on its side with two legs against ground and carefully stand up Feeder assembly. To prevent tipping, the Feeder must be placed on a level location.





Our Service Department will gladly answer any questions you have. Call 205-664-6700 Monday – Friday, 8:00AM to 5:00 PM CST. www.moultriefeeders.com