



ULTIMATE VIPER INSTRUCTIONS

⚠ WARNING

Never sit on this gun rest or attempt to use it as a climbing aid!


1. Position the Gun Rest Mounting Bracket as shown in **figure 1**. The bracket **MUST** be placed at least 3" up the arm to provide clearance for the platform when the stand is packed together. The long side of the bracket should be on the outside of the stand.
2. Secure the bracket using one 1 3/4" bolt and lock nut. The bolt **MUST** run from the outside in as shown in **figure 2 (bolt is in yellow)**. Repeat for the other side.
3. From the inside, position the 2 1/2" carriage bolt (shown in blue) inside the bracket. Over this bolt, slide one Gun Rest Adjustment Bracket, one Neoprene Washer (red), one more Gun Rest Adjustment Bracket and then the Gun Rest Bar (bright green). See **figure 2**.
4. Secure the bar with the supplied knob.
5. At the other bracket location, combine one Adjustment Bracket, a Neoprene washer and the last Adjustment Bracket. Slide this assembly between the Gun Rest tube and the Mounting Bracket lining up the bolt hole. Insert the carriage bolt through the entire assembly from the inside out. Secure with the knob.
6. Position the 18" Arm pad on the gun rest bar as shown in **figure 3**. Secure with two In-Line Cable Ties.

1 3/4" BOLT, LOCK NUT
- WRENCH TIGHTEN

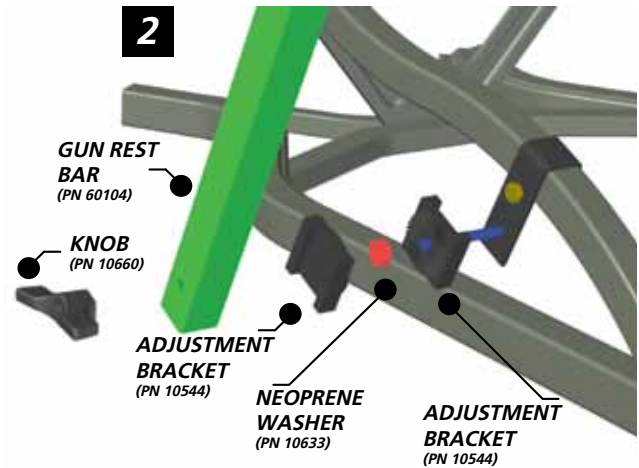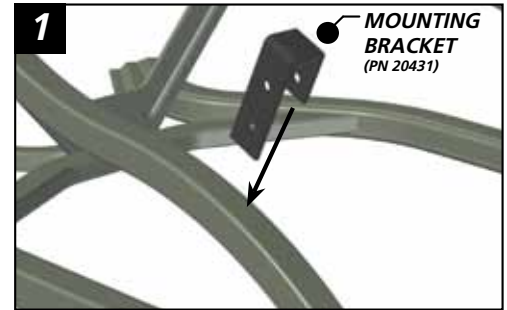

DROP BLIND

1. Your drop blind may ship unfolded. To fold, lay the blind out on a flat surface. Start at the ends of the blind material and roll it up. Once it is completely rolled, tuck it into the pocket and secure with the long Velcro® strip that runs the entire length of the blind.
2. To attach: Fold the blind in half and find the center point. There should be two Velcro® loops sewn close to the center.
3. Loop this Velcro® loop straps over the stand frame in the middle of the front pad as shown in **figure 4**.
4. Work from the center back looping the straps over, securing them as you go.
5. To use: Start at the back and unhook the long, continuous Velcro® strap and let the blind drop around the stand. Let the blind drop to cover the stand.

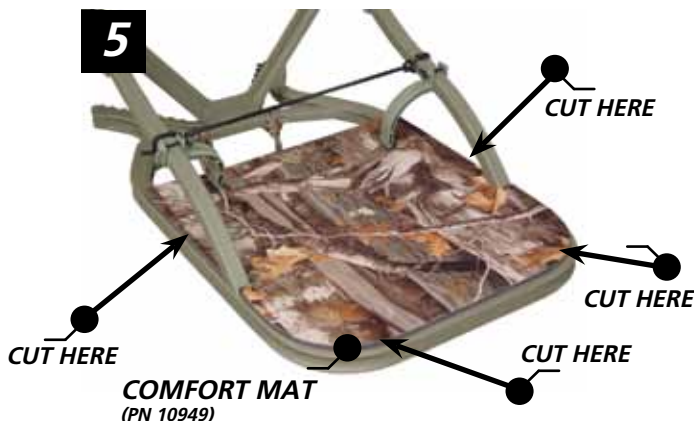

COMFORT MAT

1. The supplied comfort mat has cutouts designed to fit the standard shape of the platform. Lay the mat between the platform arms as shown in **figure 5**.
2. Make a small (approximately 3/8" long) incision through the mat just behind the stand tubing at the locations shown in **figure 5**. Insert one In-Line Cable Tie through the mat and around the frame. Pull snug and trim the excess.
3. Use the remaining 3 In-line Cable ties to secure the mat at the remaining locations.