INSTRUCTIONS

You must fully read, understand and follow these warnings and instructions (written and video)! Failure to follow these instructions may cause serious injury or death!!



The following instructions supersede the 2009 Raptor Series Instructions (booklet number 18004).

The reverse page replaces Page 4 of the 2009 Raptor Series instruction booklet and details how to use the new 2010 Revised Talon Bracket / Strap.

The Part Number for the new 2010 Revised Talon Bracket is 85159. The Part Number for the new bracket in a combo three pack is 85160.

If you have any questions or concerns on the use of this new attachment bracket / strap, please contact us at:

Summit Treestands, LLC. 715A Summit Dr. Decatur, AL 35601 256-353-0634

www.summitstands.com/contactus

info@summitstands.com

available on our website.

A copy of these instructions and revised 2009 Raptor instructions will also be





INSTALLATION (continued)

3. Connect the Talon Attachment Bracket to the tree next. Position the bracket as shown in *figure 5*. The open end of the bracket should face up *(see Side View, figure 7)*. Wrap the webbing strap around the back of the tree and connect the double J-hook to the opposite side of the bracket as shown in *figure 6*. The double J-hook must be attached as shown in figure 6 (flat side toward the tree). Repeatedly pull the free webbing end of the strap to cinch it down to the tree.


Please refer to *figure 7* for proper strap placement on the tree and for a buckle threading diagram.

AWARNING

ALWAYS follow all warnings and expiration dates listed on the Talon Attachment Bracket Strap warning label. **ALWAYS** inspect the strap for wear and cuts before each use. **NEVER** use a damaged strap.


TALON ATTACHMENT BRACKET (PN 85159)

DOUBLE J-HOOK

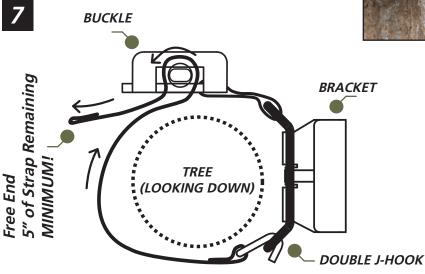

SIDE VIEW

BRACKET

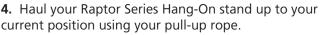

5. Lift the stand up and set the cable cross bar down into the Talon Bracket as shown in *figure 8*.

AWARNING

The cable cross bar must be fully seated inside the Talon Bracket in front of the riveted security clip as shown in *figure 9*.

The bracket will rotate toward the ground as weight is applied to it. This is normal.

Remove the green tourniquet buckle strap and fold the platform down.



