




LUPMF & LUPMT


Customer Service Dept.
2245 Delany Road
Waukegan, IL 60087
Ph: 847-244-1800 • 800-323-4656
Fax: 847-244-1818 • 800-327-1698

Parts for LUPMF & LUPMT


- (1) Base
- (2) Poles
- (1) Mounting Bracket for Pedestal
- (4) 3 1/4" Machine Bolts
- (4) Self-locking Nuts
- (4) 5/16 -18" Bolts
- (4) Washers
- (4) Nuts

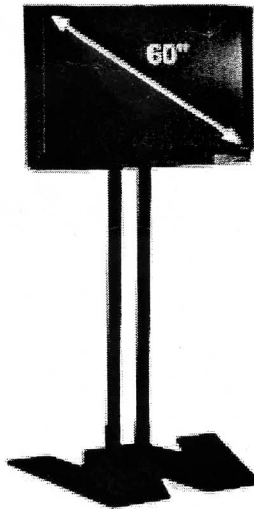


LUPMF

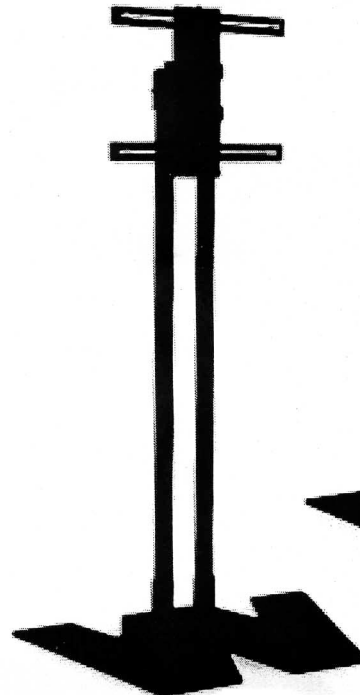


LUPMF

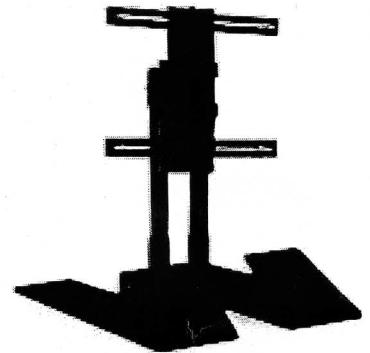

LUPMT

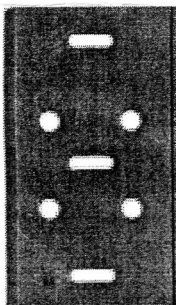

PART A
Single Stud Plasma
Mount Wall Bracket

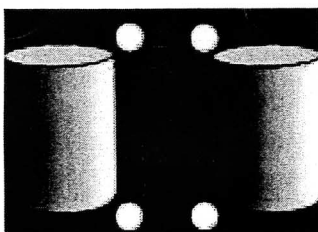

PART B
Mounting Bracket
for Pedestal

Instructions:

1. Put base in desired location.
2. Insert poles into pole holders on base making sure multiple holes (on pole) are towards the top and the single hole is on the bottom. Line up the single hole on pole with the single hole on the pole holder located on base. Secure with a 3 1/4" machine bolt and self-locking nut.
3. Repeat on other side with other pole.
4. Open box for LUPMF or MT Single Stud Plasma Mount, and take out the Wall Bracket, Part A. Attach Wall Bracket to Pedestal Mounting Bracket, Part B, by lining up the 4 holes and securing with (4) 5/16-18" bolts, washers and nuts.
5. Slide the assembled bracket unit (Parts A & B) over top of poles, lining up holes at desired height. Secure with the 3 1/4" machine bolts and self-locking nuts on each side.
6. Assemble Plasma Mount following instructions located inside it's box. Begin with Step 2.

Note: If you are attaching the LUPMT to an existing surface, you must drill holes in the base using a 3/8" drill bit. No hardware is provided for this.