# Instruction Sheet For Heavy Duty Utility Carts All TC, STC and PTC Models

## **Features include:**

- Lifetime warranty.
- Two, three or four shelves.
- Models also have either all tub shelves or flat and tub shelves.
- 24" x 32" tables have 400 lb. capacity. 18" x 24" tables have 300 lb. capacity.




# **PARTS LIST**

- 1 Bottom shelf w/caster sockets
- 1 Top shelf w/handle
- 1 Center shelf (only for three shelf models) (4 shelf carts will have 2 center shelves)
- 8 Legs
- 4 Casters
- 1 Plug housing cover
- 2 Sheet metal screws


# **Tools Required:**

- 1 Rubber mallet (supplied)
- 1 Slotted screwdriver

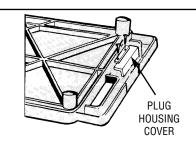


#### IMPORTANT:

If your model does not have the Electrical Assembly and Cable-Track Cord Management System, close the electric plug housing in the handle.

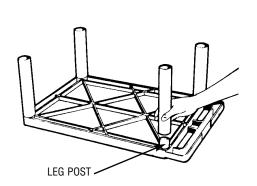


#### 1

Lay top shelf (with handle), ribbed side up on a smooth surface. Push 4 legs onto leg posts.

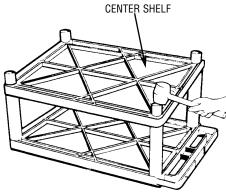


# 2.

Position center shelf ribbed side up over the 4 legs and insert leg posts into legs. Using a rubber mallet, firmly hammer center shelf into legs until all four legs are seated (flush) against the surfaces of both shelves.

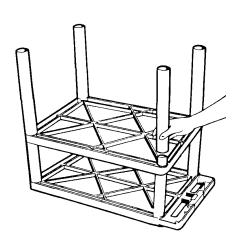


3.

Push remaining legs onto leg posts of center tub shelf.

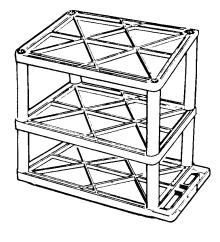

4

Position bottom shelf, ribbed side up, over the legs and insert leg posts into legs. Firmly hammer bottom shelf until seated onto all 4 legs.

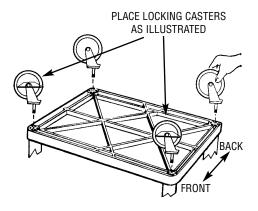

## 5.

Push the four casters firmly into the holes in each corner of the bottom shelf. **Important**: casters must be fully seated. Tap firmly with rubber mallet to properly seat casters.

For assembly of PTC's pneumatic tires, see reverse side.

