

Virco, Inc. 2027 Harpers Way Torrance, Ca 90501 Virco, Inc. Highway 65, South Conway, AR 72032

Customer Service: (800) 448 - 4726

# KAV2418ADJ Adjustable Height Metal AV Cart

## **Open Steel Tables Standard**


26"-42"H


3 18" x 24" Shelves

44 lbs.

## **Parts List for KAV2418ADJ**

- (1) Top Half of Steel Cart
- (1) Bottom Half of Steel Cart
- (4) <sup>7/</sup>8" Screws with Locking Nuts
- (4) 4" Swivel Casters
- (1) Electrical Assembly
- (1) Rubber Mat

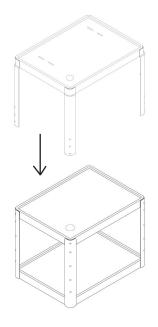

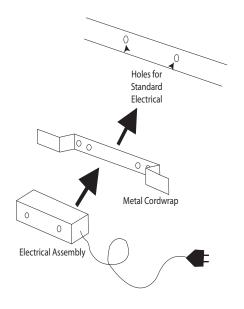



# **Cart Assembly Instructions:**

### TWO PEOPLE SHOULD ASSEMBLE THIS CART

- 1. For the adjustable height table, lower top 1/2 of cart over bottom 1/2 of cart lining up the holes on legs to select desired height. Lock into place with 7/8" (1)screw and (1) nut on each leg. Screw head should be on the outside of the leg and attached with the nut on the inside of the leg. Make sure that locknuts are very secure before turning cart over.
- 2. Turn cart over. Insert stems of locking casters into the 2 caster sockets on the 18" side of the table from which you will be pushing the table. Insert the two non-locking 4" casters onto the opposite 18" side of the table. Turn cart right side up.

### **Electrical Assembly:**

- 1. Turn cart so that the side you want to install the electrical assembly onto is towards you. Place Metal Cordwrap over top shelf, lining up pre-drilled holes.
- 2. Place the two screws through the holes of the electrical.
- 3. Fit the electrical assembly over the holes on the side of the shelf so that the screws are going through the holes.
- 4. Secure screws with wingnuts from underneath the shelf.